


02126 KIT

TO CONVERT FROM CONDUCTIVITY CONTROL TO TIMER ON SID 650's

CAUTION: Disconnect power to unit before servicing.

- 1) Disconnect wires from conductivity board and remove the board.
- 2) Install new timer (10 min 44 second cycle).
- 3) Connect the pink wire from the 5 cam timer (1st cam N.C. position), to #1 on the new timer.
- 4) Connect the red wires from the bin stat and the 2nd cam (common), to #2 on the new timer.
- 5) Connect the white wire from the neutral side of the terminal board to #3 on the new timer.

PARTS: 70076 - Nut
 70186 - 8/32" X 1 1/4" Screw
 31816 - Timer

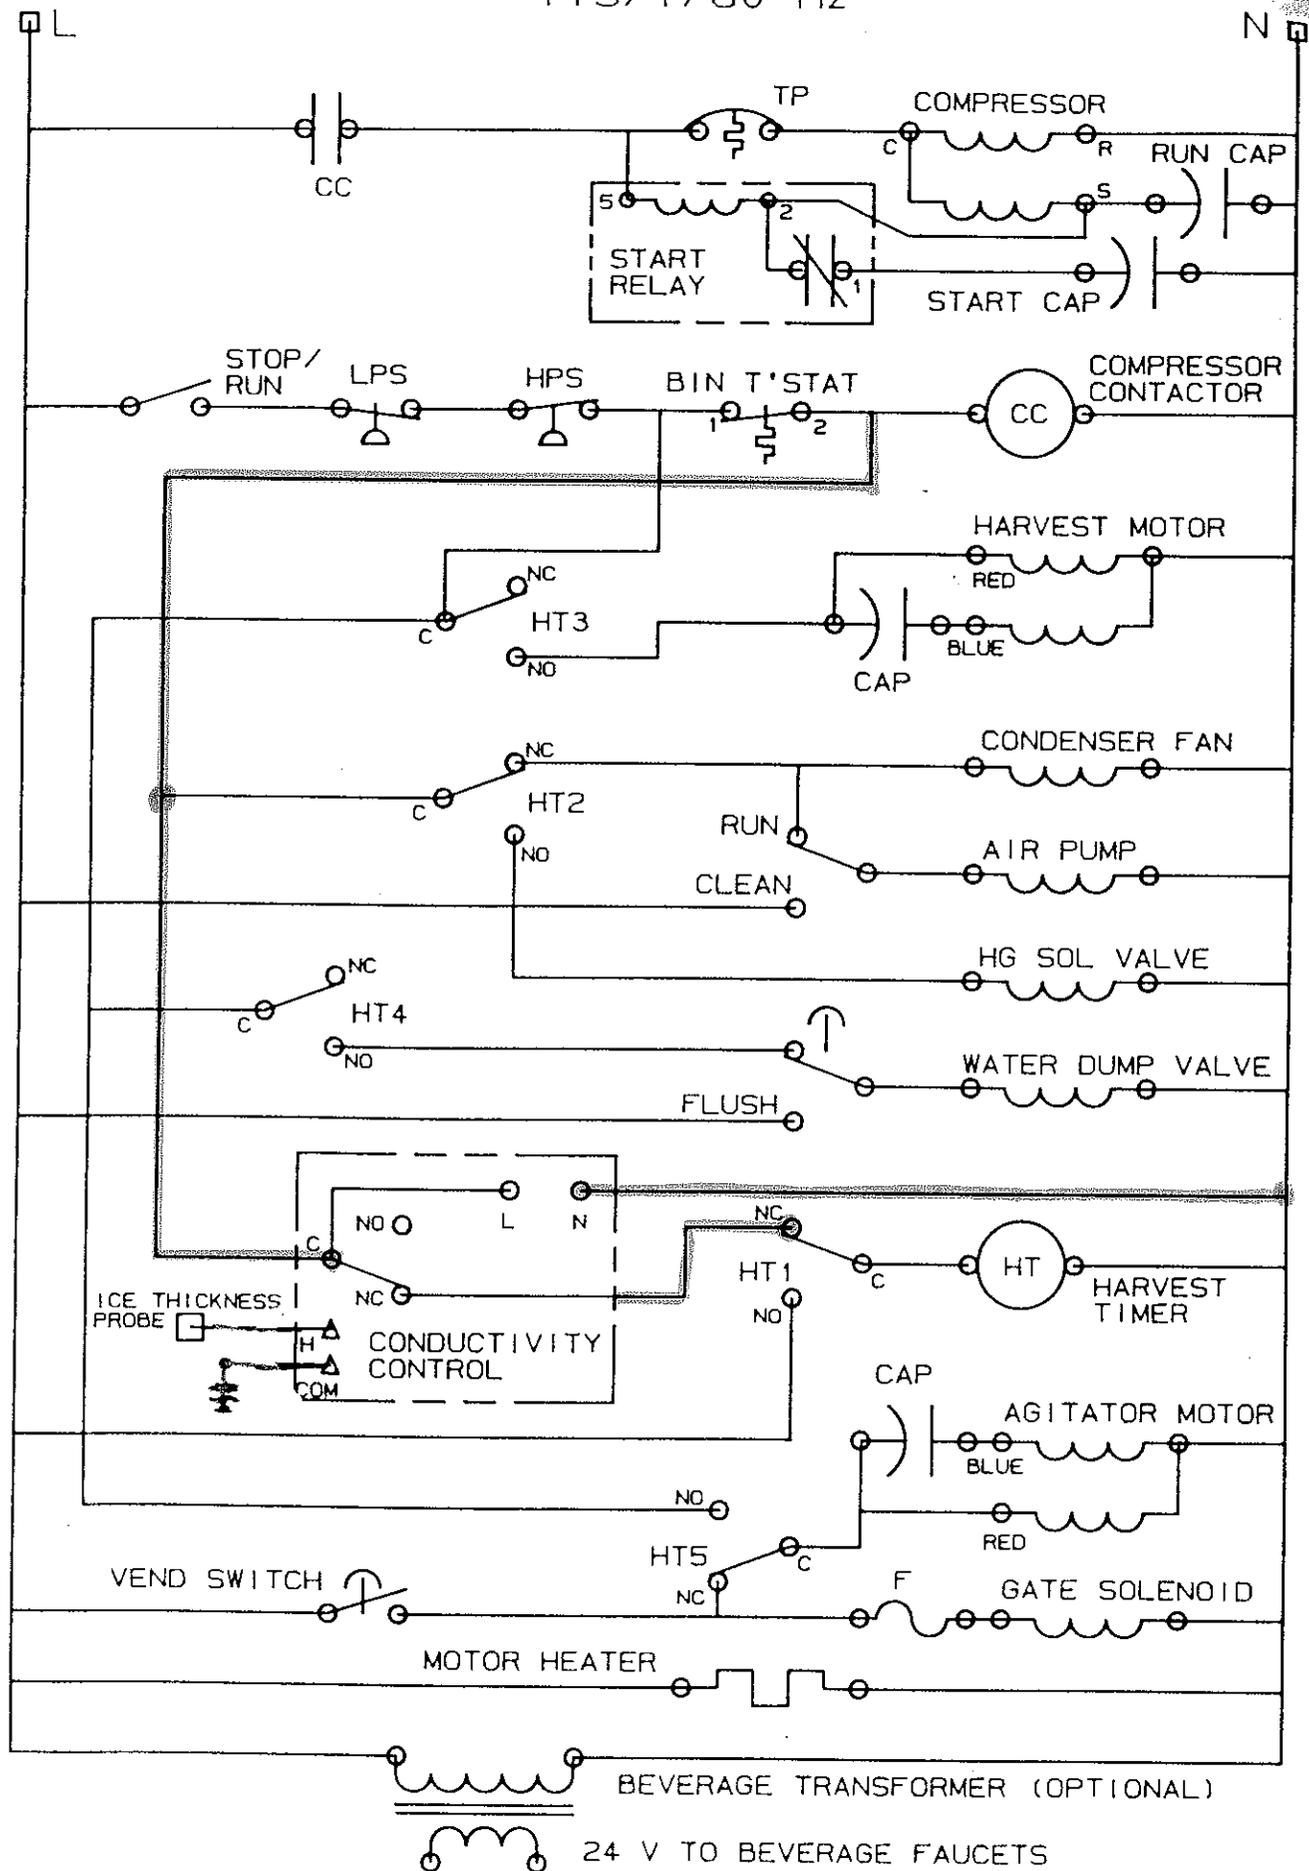

CONVERT TO TIMER

