


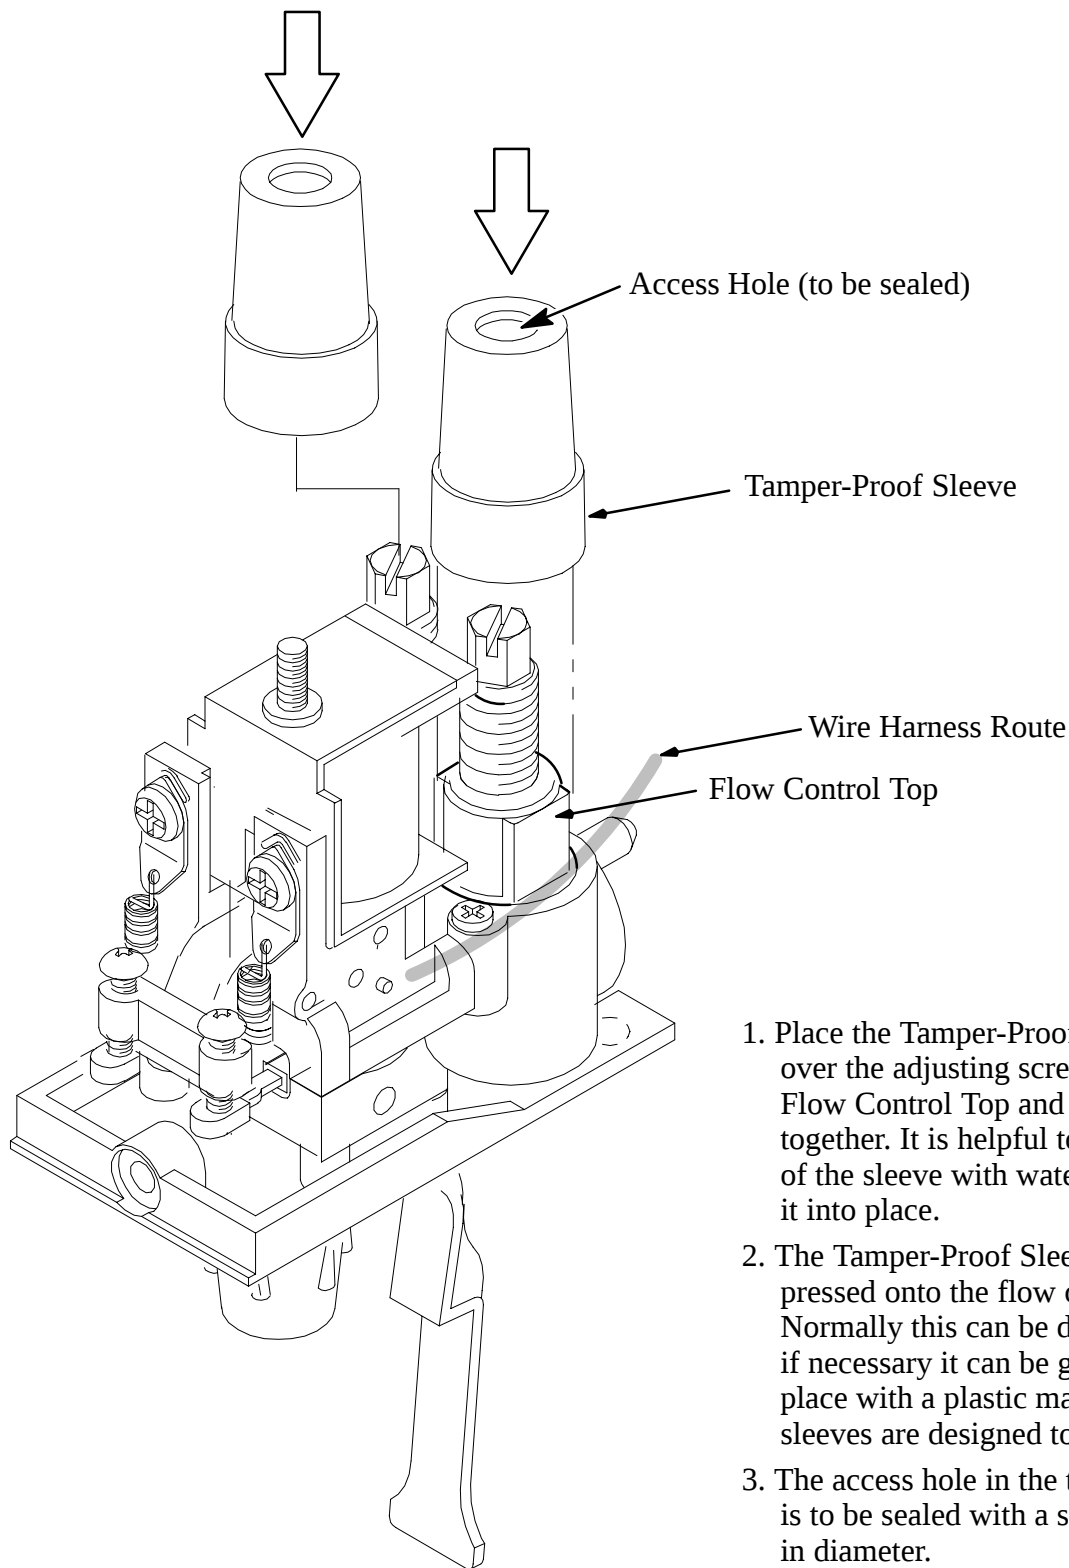

SF-1 Valve Tamper-Proof Sleeve Installation Instruction

1. Place the Tamper-Proof sleeves (2) over the adjusting screws, so that the Flow Control Top and the sleeve nest together. It is helpful to wet the inside of the sleeve with water before putting it into place.
2. The Tamper-Proof Sleeve must be pressed onto the flow control top. Normally this can be done by hand but if necessary it can be gently tapped in place with a plastic mallet. The sleeves are designed to fit tight.
3. The access hole in the top of the sleeve is to be sealed with a seal that is .560" in diameter.
4. The wire harness must be routed on the right side of the valve to allow proper installation of the valve cover.
5. Old style covers with the front mount screw may be difficult to install. If the cover will not satisfactorily install, it will be necessary to convert to the top mount cover.