



INSTALLATION INSTRUCTION

PROCEDURE TO INSTALL POWER CORD 2080 AND 2081 TO OLD VENTURE UNITS

1. Disconnect the power from the unit.
2. Remove the front splash cover.
3. Unscrew the two screws securing the switch box to the unit.
4. Pull the switch box away from unit to facilitate working on the box. See FIGURE 1
5. Remove the existing cord from the box.


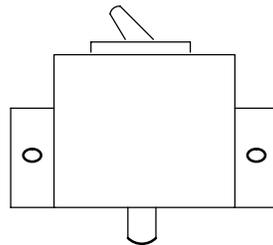


FIGURE 1

6. Install strain reliefs to both new cords and insert into switch box See FIGURE 2.

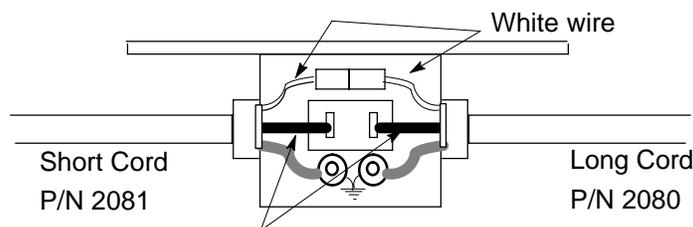

Black wire FIGURE 2

7. Connect both white wires together shown in FIGURE 2.
8. Install both black leads to switch as in FIGURE 2.
9. Attach the two ground leads to switch box.
10. Reinstall switch box as removed in step 3.