

Assembly and Installation of the BLACK X xPad

Tools Required

- Phillips head screwdriver
- Keypad ejector tool (included)

Note: Keep the keypad ejector tool for future battery replacements.

1 Unbox and Prepare Components

Open the package and identify all components. Lay them out for easy access.

The package includes:

- 1 x xPad
- 1 x 3M adhesive pad
- 1 x Keypad ejector tool
- 2 x Screws
- 2 x AAA Batteries



2 Remove the Back Cover of the xPad

Using the Keypad ejector tool, remove the back cover of the xPad by inserting the pin into the designated hole at the bottom of the device.



3 Place the batteries

1. Open the battery compartment cover.
2. Insert the batteries, ensuring they are correctly positioned. The xPad will power on and emit a beep to confirm proper installation.



4 Pair the xPad with the BLACK X app

1. Open the BLACK X App, navigate to the lock you wish to pair with the xPad, and tap the Settings button ⚙️.
2. In the Settings menu, select "xPad/xPad+", then tap "xPad" and "Add keypad".
3. On the xPad, locate the Pairing Key in the small hole just above the battery compartment, where the batteries are installed. Use the Keypad ejector tool to press the Pairing Key button. The xPad will begin flashing to indicate pairing mode.
4. In the app, tap Continue to proceed.
5. Select your xPad from the list of available devices to complete the pairing process.
6. Close the battery compartment cover securely.



5 Secure the xPad to the Surface

Choose a suitable location for installing the xPad. Ensure it is within 10 feet (3 meters) of the lock for standard doors.

For best performance, especially for steel doors, it is strongly recommended to place the xPad as close as possible to the door and lock to maintain the strongest Bluetooth connection.


Option 1

1. Use the two screws and a Phillips head screwdriver.
2. Position the back cover of the xPad on the surface and secure it by inserting the screws into the two designated holes.
3. Slide the xPad into the back cover and ensure it is securely in place.



Option 2

1. Peel off the backing from one side of the 3M adhesive pad.
2. Carefully place the adhesive pad on the back cover of the xPad, ensuring proper alignment.
3. Peel off the backing from the other side of the adhesive pad.
4. Stick the back cover of the xPad to the chosen position on the surface.
5. Slide the xPad into the back cover and ensure it is securely in place.

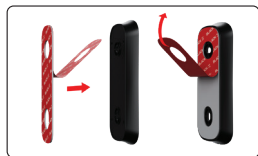

6 Online Instructions

Need help with installation
or have questions?



www.black.inc

BLACK

XP-EN