

# TEXTILE WALLCOVERING — HANGING INSTRUCTIONS

## DO NOT INSTALL BEFORE CAREFULLY READING THE INSTRUCTIONS

Mublo textile wallcoverings are architectural materials designed to beautify demanding interior environments. Correct surface preparation and professional installation are recommended to ensure optimal performance and longevity.

### 1. BEFORE INSTALLATION

- Verify that colour, design, quantity and quality correspond exactly to the order and are from the same production batch
- If defects are found, do not cut or install the material. Return the full order in its original packaging
- No claims can be accepted once material has been cut or installed
- Check pile direction prior to installation. The pile must be installed running downwards. Do not reverse lengths.
- Natural variations inherent to textile wallcoverings are due to the manufacturing process

### 2. SURFACE PREPARATION

The substrate must be smooth, sound, permanently dry, clean, grease-free, dust-free and of normal porosity. Remove loose or unstable paint layers

For intense colours, apply a matt primer diluted 30% with water, tinted to match the wallcovering colour, particularly along seams

### 3. ADHESIVE & APPLICATION

**Highly absorbent surfaces** (f.e. new plaster or skim coat)

- First apply a suitable sealer or a matt acrylic primer diluted to 30%
- Proceed as for a normally absorbent surface

**Normally absorbent surfaces**

- Use a reinforced ready-to-use adhesive suitable for textile wallcoverings
- Apply adhesive evenly and to the wall only
- Paste the wall width by width, apply wallcovering dry

**Non-absorbent surfaces**

- Use a high-performance adhesive suitable for non-porous substrates

### IMPORTANT:

Avoid adhesive marks on the surface as they are difficult to remove once dry

### 4. APPLICATION RECOMMENDATIONS

- Install lengths edge to edge, overlapping the previous length by approx. 3–5 cm
- Smooth gently using a wallpaper brush or foam roller
- Using a sharp knife and a straightedge, make one clean vertical cut through both layers in the center of the overlap. Remove the excess strips from both sides.
- Gently bring the two cut edges together. The joint must be closed, not compressed. Lightly press along the seam using a seam roller or soft spatula, without flattening the pile.


If adhesive traces appear:

- Remove immediately with a clean sponge and lukewarm water
- Dab dry with a soft cloth. Do not rub.

Recommended cutting tools

- 30-degree cutter
- Sliding-foot knife
- Kicoupp cutter

Cleaning the wallpaper can be done carefully using the soft brush attachment of a vacuum cleaner or by gently dabbing with a clean, dry sponge if necessary. It is important to avoid applying excessive pressure during cleaning.

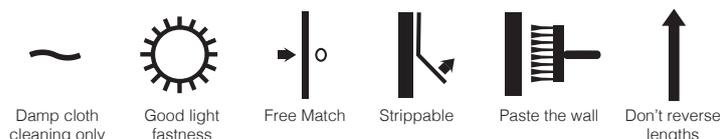

*This document is intended as a general installation guideline. Conditions on site and professional practice may influence final results.*