

BO125L

Reference: BO125L0...

INSTALLATION SHEET




4x Concrete screw
($\varnothing 12,5 \times 100 \text{ mm}$)



4x Flanged spacer
 $\varnothing 16 \times \varnothing 22 \times \varnothing 32 \text{ mm}$


Included:

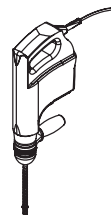


Electric drill



$\varnothing 10 \text{ mm}$

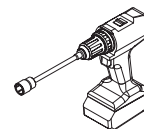


Impact Wrench
>500 Nm
+ Extension part
+ Socket SW15

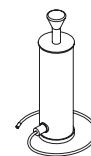



Dust remover (Air)

Required Tools

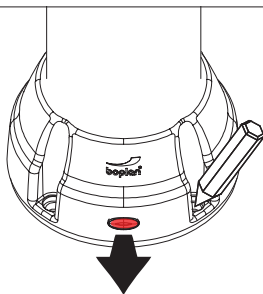


(Front side)


1 Position and mark location of all 4 holes

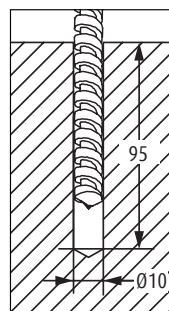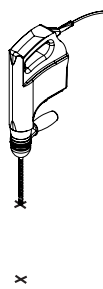


2 Move product to side and drill all holes
($\varnothing 10 \times 95 \text{ mm}$)

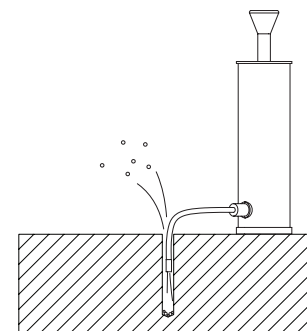


3 Remove debris from holes

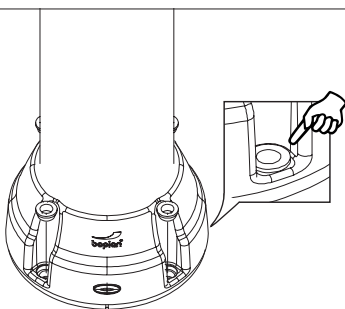

4 Insert the flanged spacers flush into the holes of the flexible base

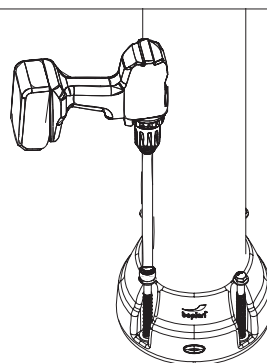

5 Insert screws

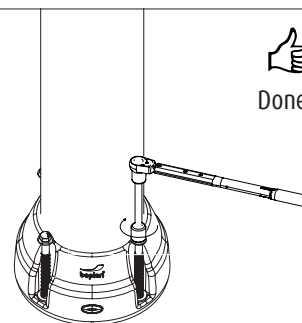

6 Tighten screws with wrench;
Torque = 80 Nm

Done!