

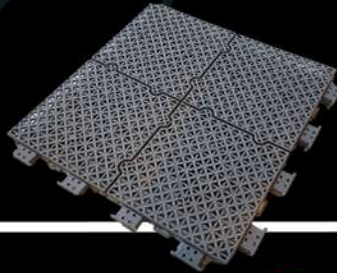


DREAM
COURTS

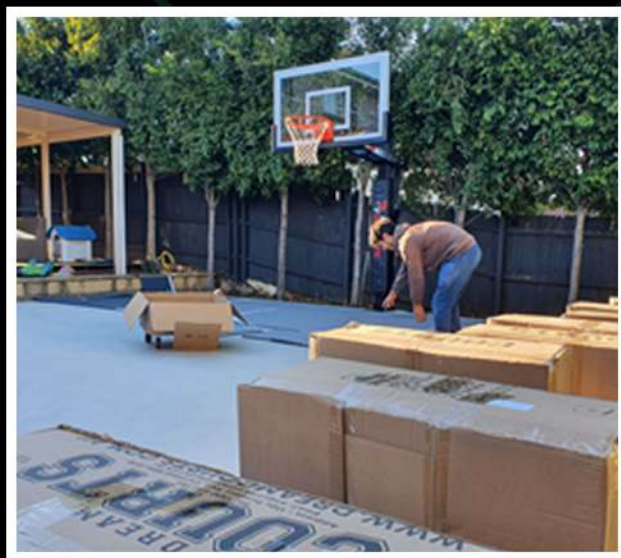

COURT INSTALL GUIDE

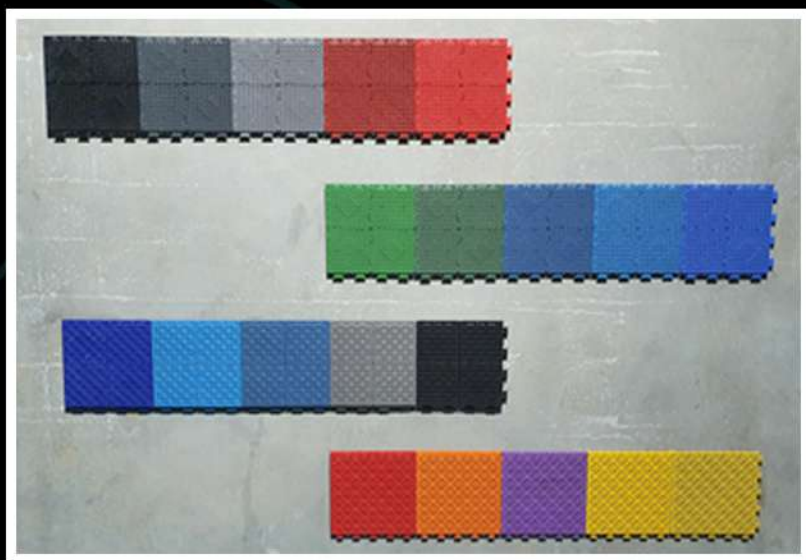

DREAMCOURTS OFFICE & SHOWROOMS

9 CORVETTE PLACE, KILSYTH,
VICTORIA 3137


UNIT 9, 8-20 ANDERSON ROAD
SMEATON GRANGE, NSW 2567

DREAMCOURTS IS A NATIONAL BUSINESS with teams in all states of Australia.
For all enquiries please call 1300 690 991



Official Outdoor
Court Partner

COURT PLAN AND CENTRE LINE

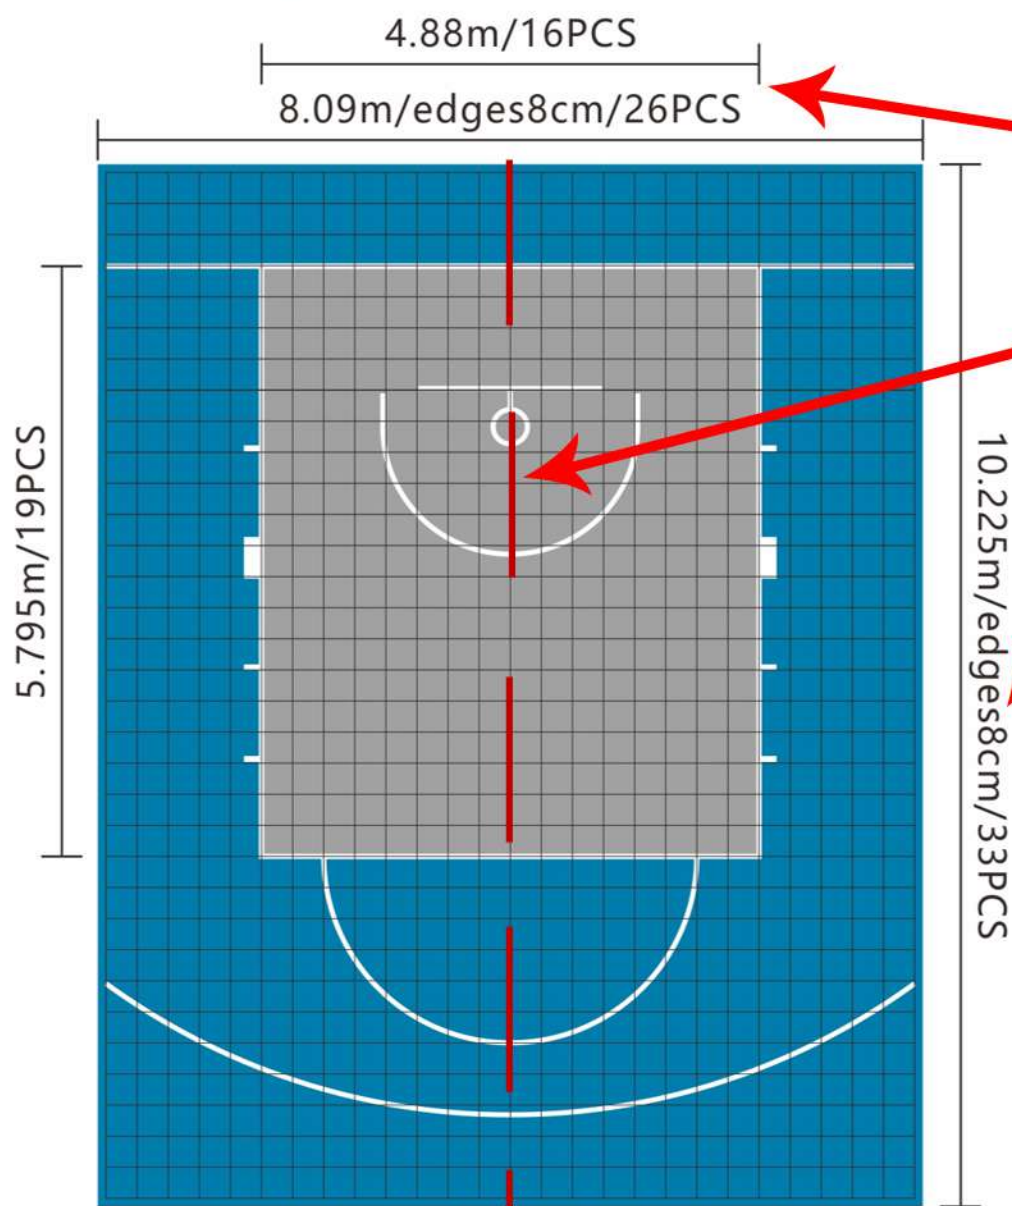

EXAMPLE ONLY*

Court Width

DreamHoop Post
Location & center
line of court

Court Length



Please note
the orientation of
the tile as this will
carry through the
entire court

**example court only*


EXAMPLE COURT

Start with Box 1
Here and follow
the rows as you
lay the tiles




Please note the
orientation of the tile as
this will carry through
the entire court

Row 1

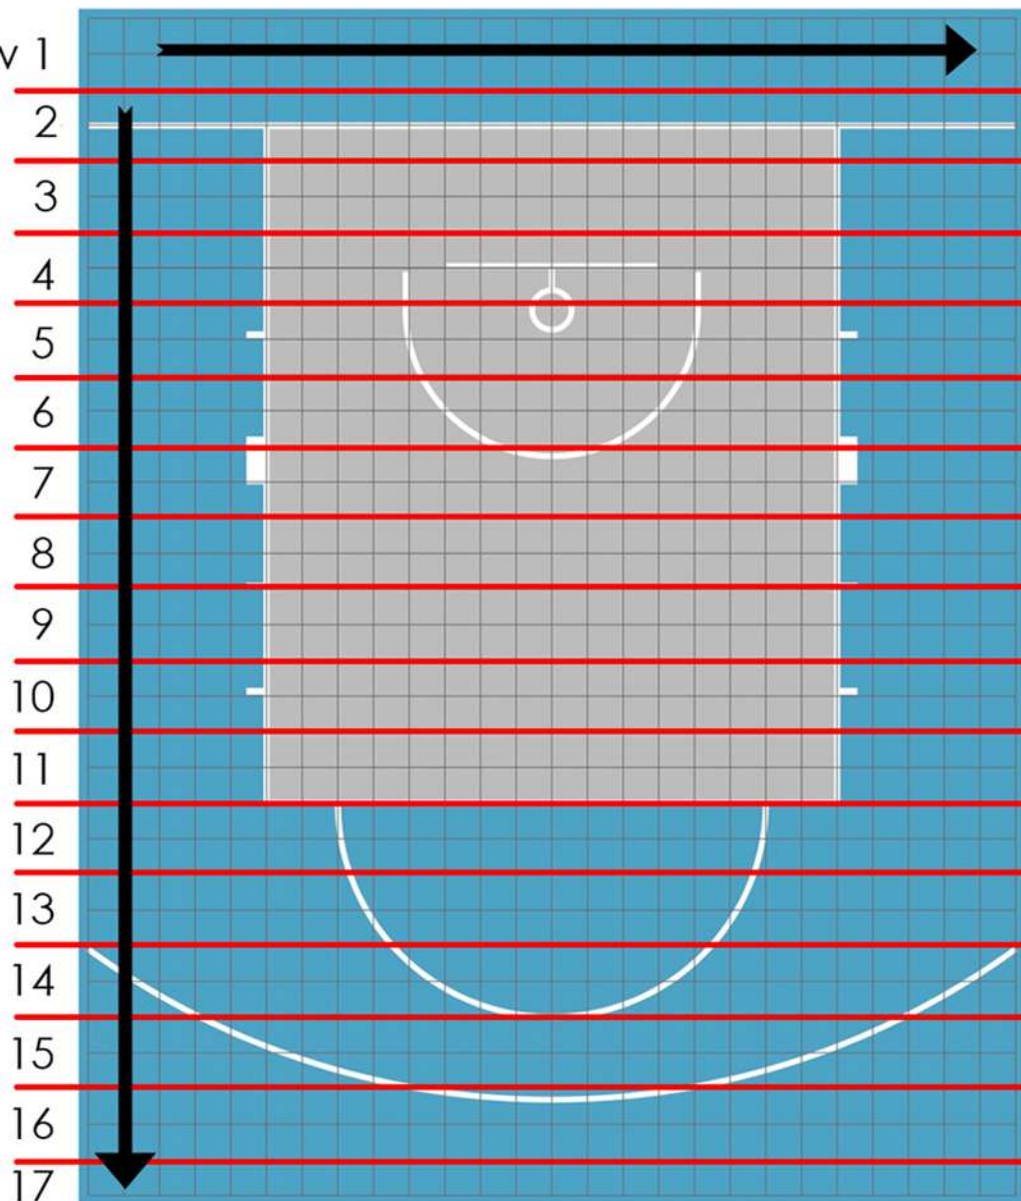

CENTRE LINE OF YOUR COURT TO MATCH THE CENTRE OF HOOP IF APPLICABLE

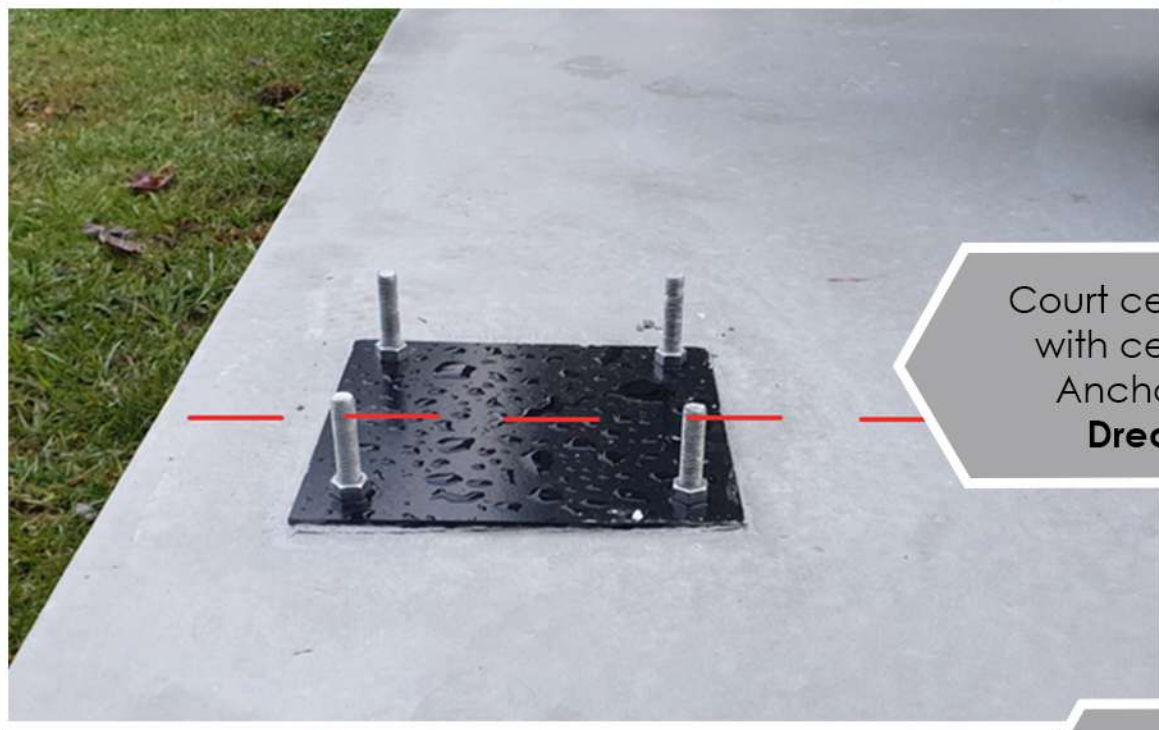

Court centre to align
with centre line of
Anchor Plate of
DreamHoop

OR




Court centre to align
with centre line of
DreamHoop
or similar System

PREPARATION



Remove any dirt or debris from your concrete slab.

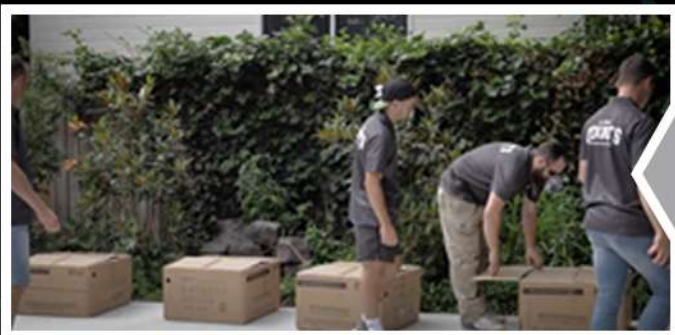


Prepare the court boxes in numeric order. Boxes are number 1, 2, 3, 4, etc.



Establish/mark the centre line of your DreamHoop or Basketball Hoop System on the substrate. This line will also be the centre of your **DreamCourt**



Allow space for the edging pieces at the perimeter of your court. These pieces will be in a box with the spare tiles, screws, washers and plugs.

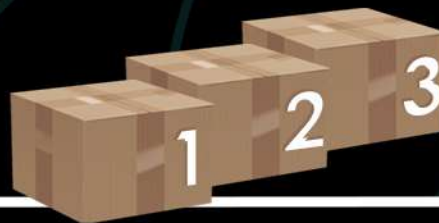

COURT TILE INSTALL



Start with **box 1, row 1** & begin laying and clipping the tiles together. Follow the arrows as shown in the above example, moving in a left to right pattern – Like a typewriter.






Complete each row before starting a new one. Open the boxes and install in numeric order.



If the court has edging pieces –you must leave space to clip these edging tiles in place afterwards.

The first row should be centred on your DreamHoop basketball system or equivalent.

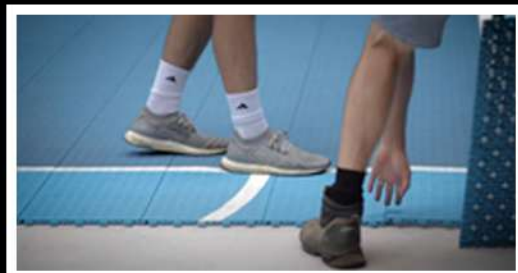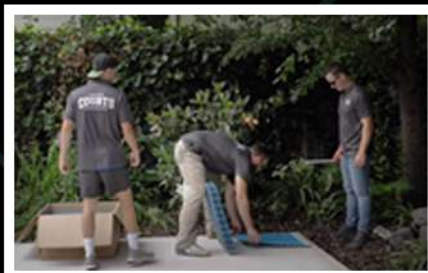

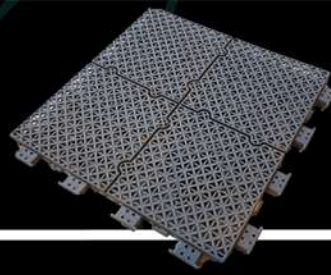

COURT TILE INSTALL


Continue laying rows of tiles in numeric order until all tiles are in place.



Install The Edges

If your court has edging tiles, they can now be installed in the space left during court install.

There are Male and Female tabs that connect with the main court tiles. The court also comes with corner pieces.

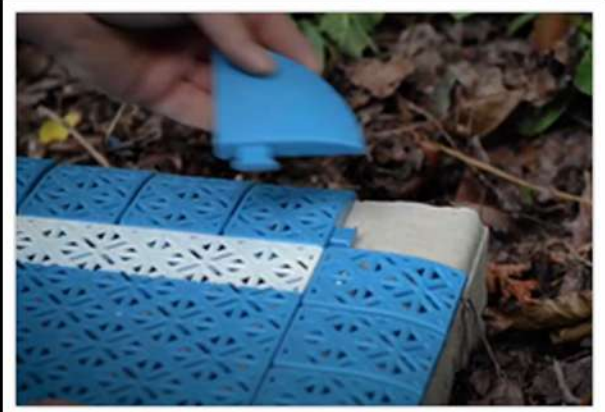

CUTTING YOUR COURT



Once the court is laid in its final position, you can begin to mark and cut your tiles around posts. Walls, hoops, nets etc.

Measure and mark the tiles to be cut. Leave at least a 5mm expansion joint between walls and posts.

Using a Jigsaw, follow your cut lines and test to see if the piece fits.

Continue cutting the tiles one by one.


Alternative tools that can be used to cut your court tiles:

- Track and Plunge Saw
- Angle grinder
- Circular Saw
- Multitool





Top Tip:

When marking the tiles to be cut – ensure that the tile is orientated in the correct direction in relation to the male and female tabs – matching the rest of the court.

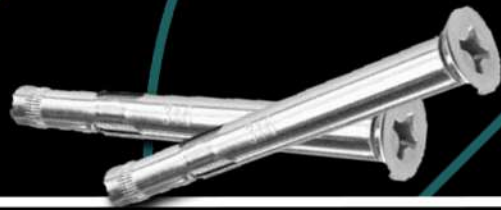

ANCHORING YOUR COURT

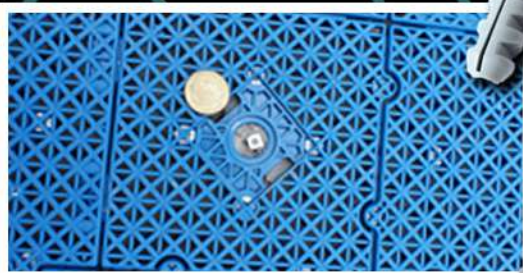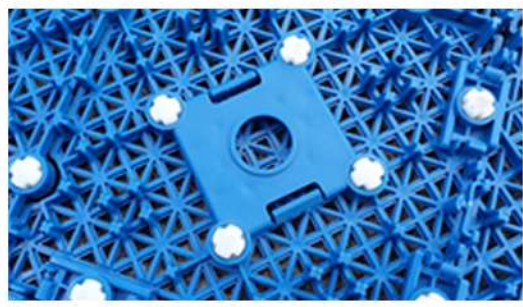

Once your court is in its final position and all cuts are made, you can then begin to anchor in place.

We recommend to anchor your court for optimal performance and to reduce movement.

Anchoring the perimeter every 1m or so and also placing anchor points in high traffic areas like the Key and 3 point line.

To remove the cap from the anchor housing, simply pinch the tabs together on the underside of the tile – this can be done while laying down the court Tiles.


Alternatively – a flat screwdriver can be used to gently pop the caps out of their housing from the surface of the court.

Using an 8mm masonry drill bit – drill a 50 – 60mm deep hole, clean away dust and debris and insert the PLUG until flush with concrete surface and then place the rubber washer centred over this hole (or when using Elite X 2.0 tiles insert the rubber washer and Dyna Bolt).

Insert & tighten the screw so it holds the washer snug, then replace the cap to cover the anchor housing.




EXAMPLE COURT

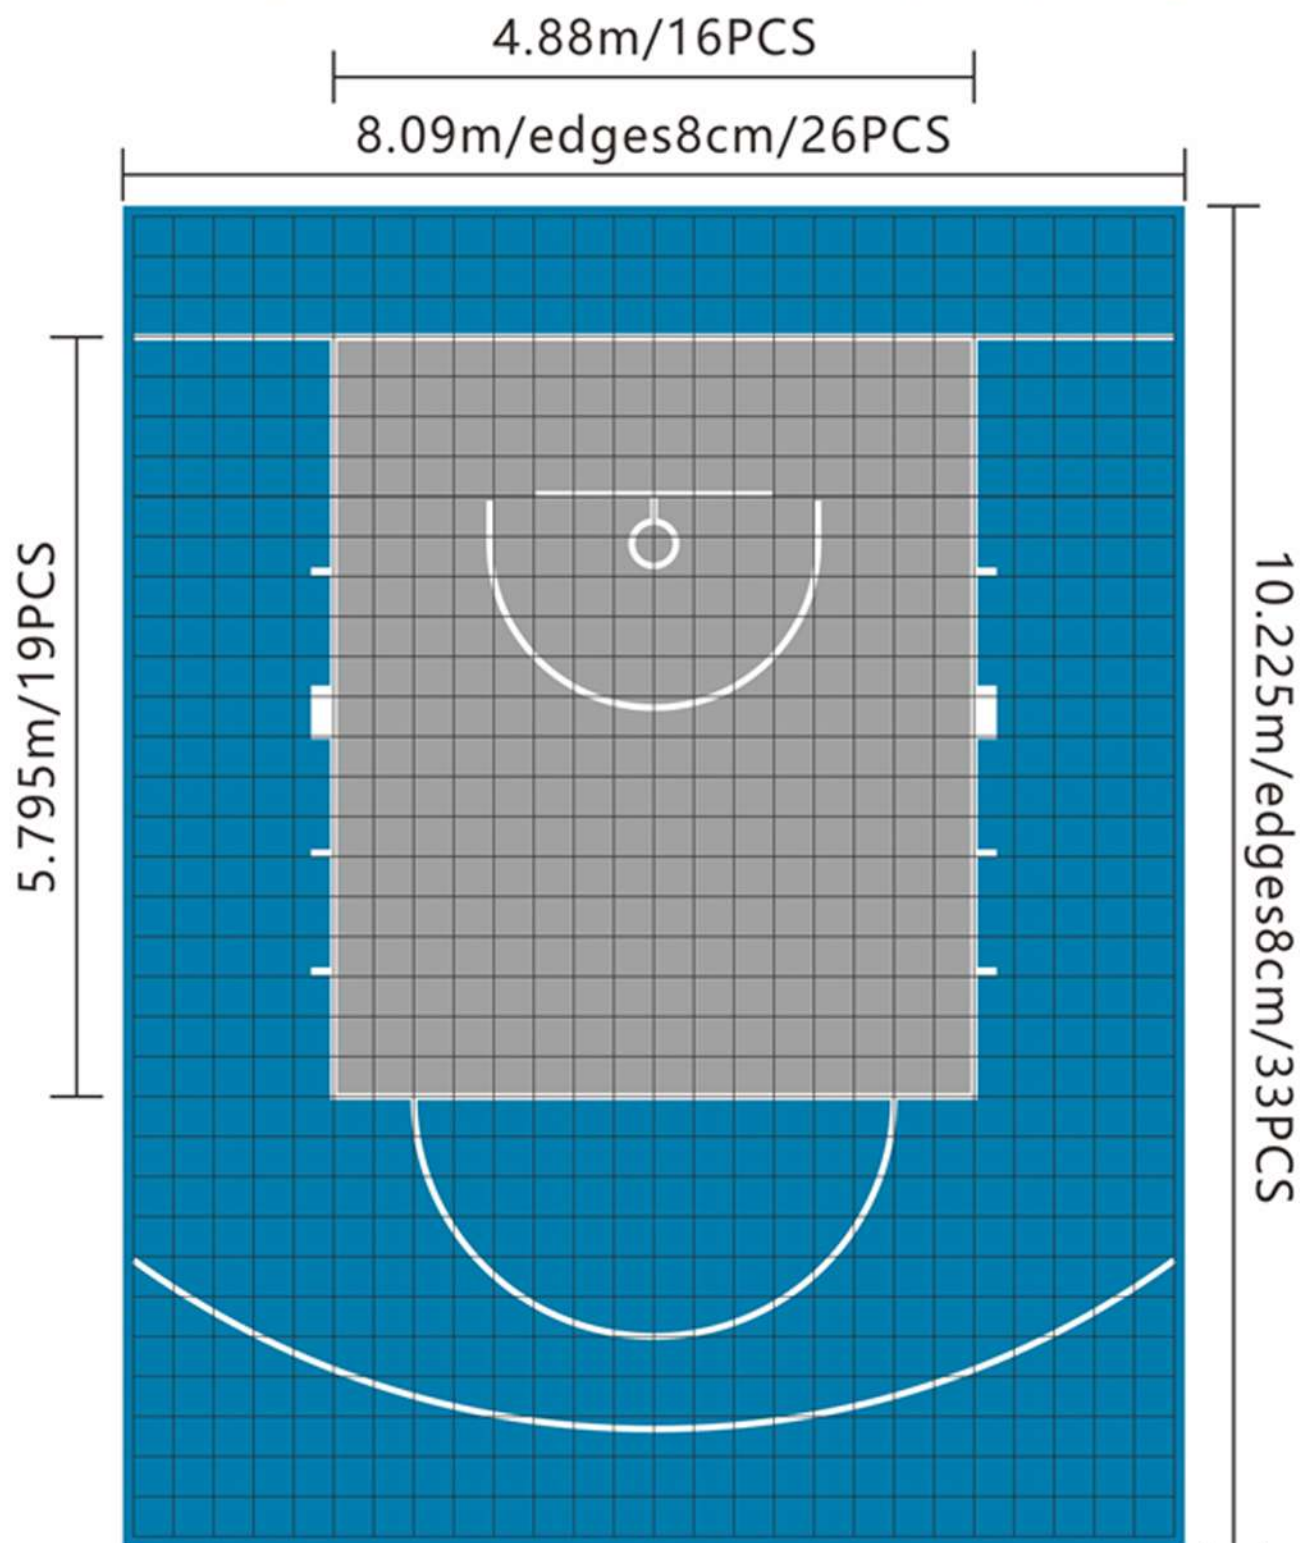

EXAMPLE COURT

Start with Box 1
Here and follow
the rows as you
lay the tiles.

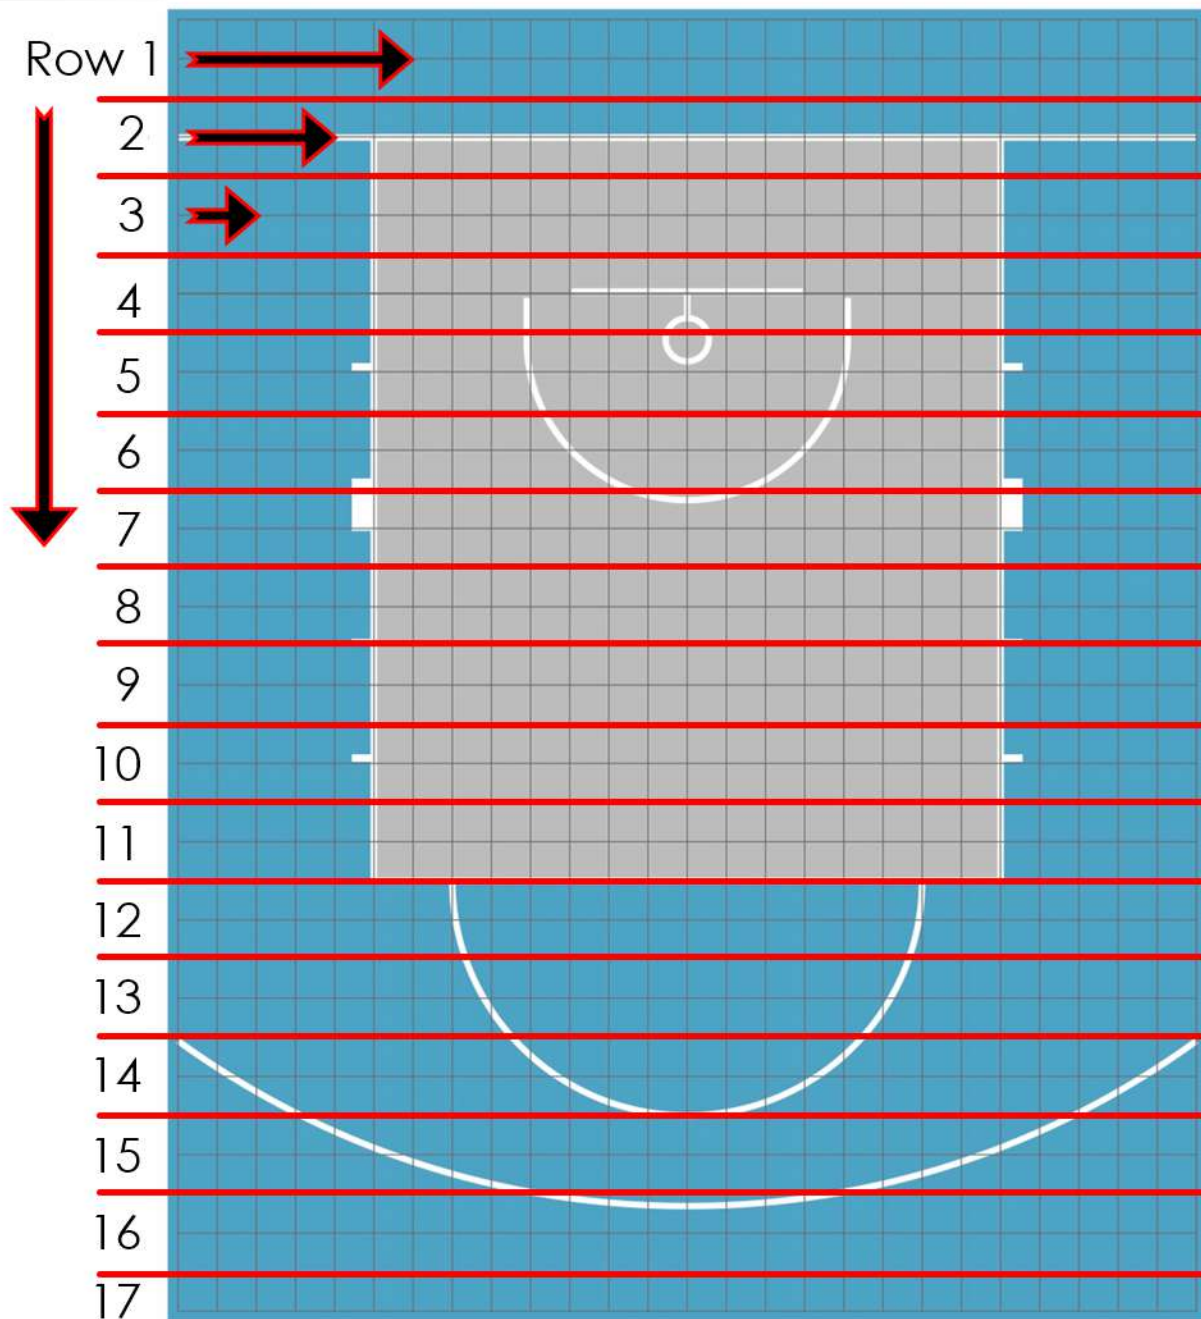

DREAM COURTS

Start Here -
Leaving space
for edging tile if
applicable

Court
Centre
Line

Row 1




Court
Outline

Court
Centre
Line

Row 1


Court
Outline

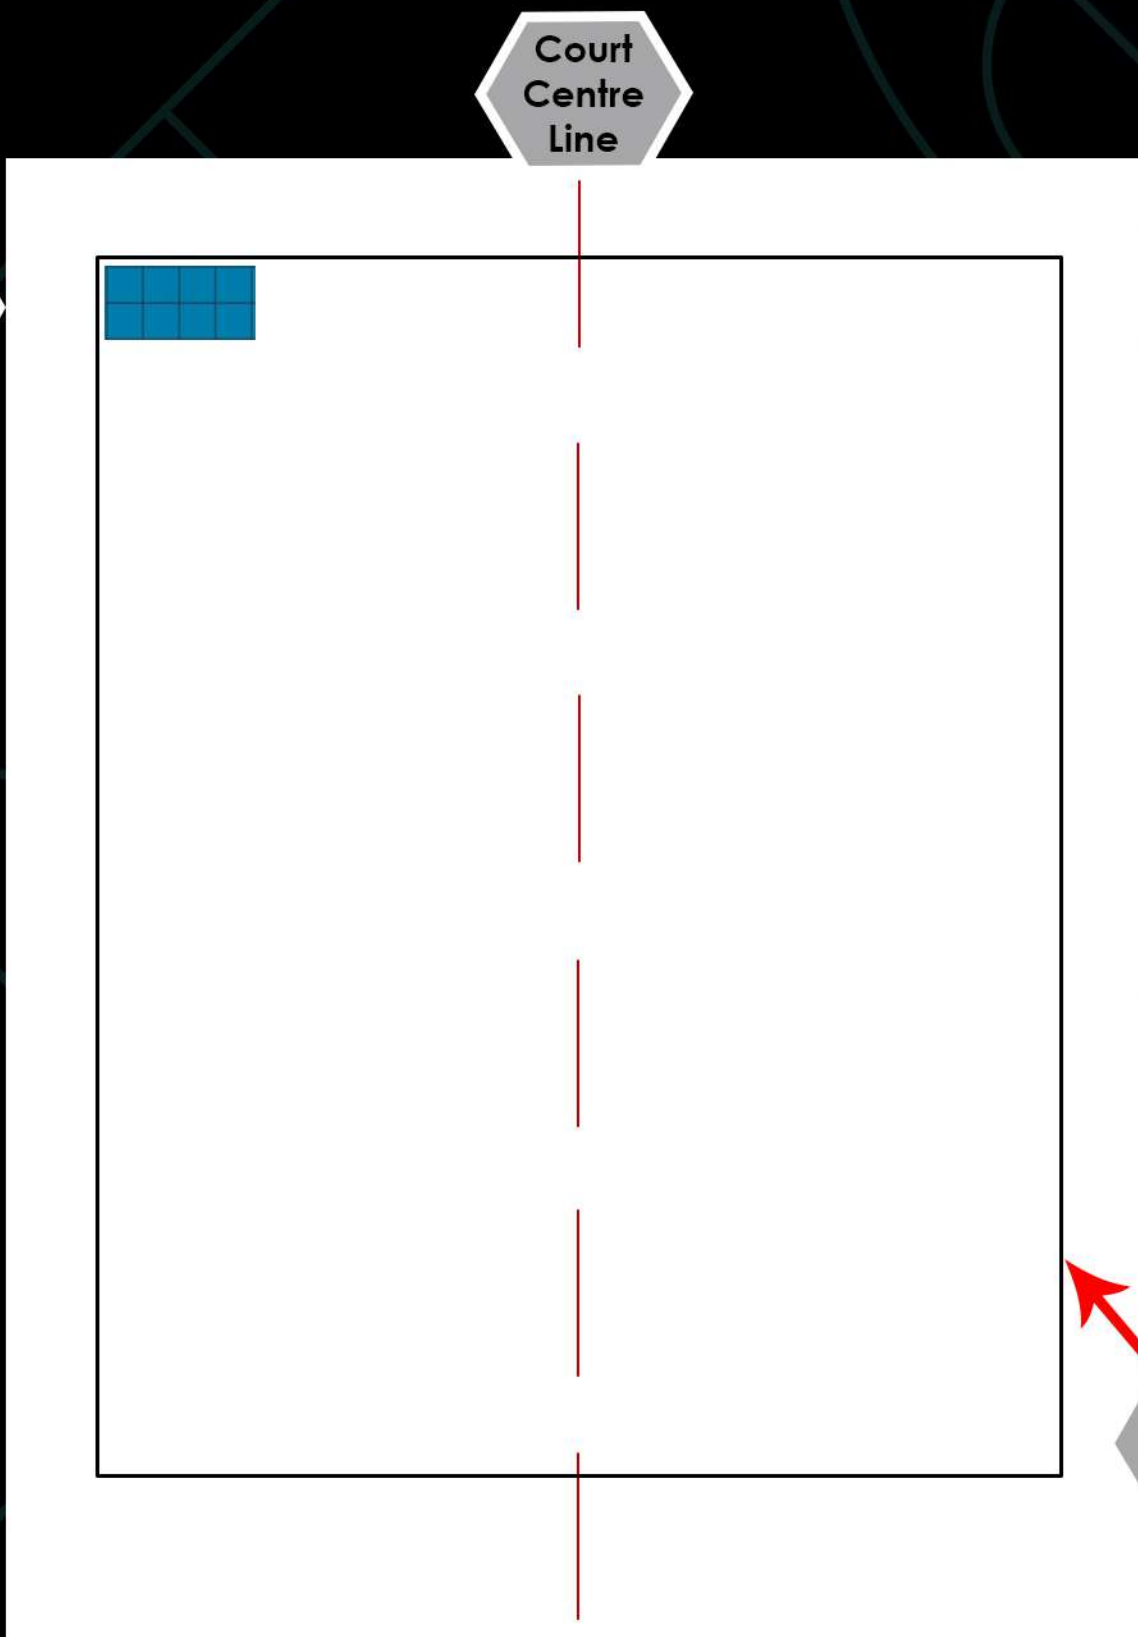

Court
Centre
Line

Row 1


Court
Outline

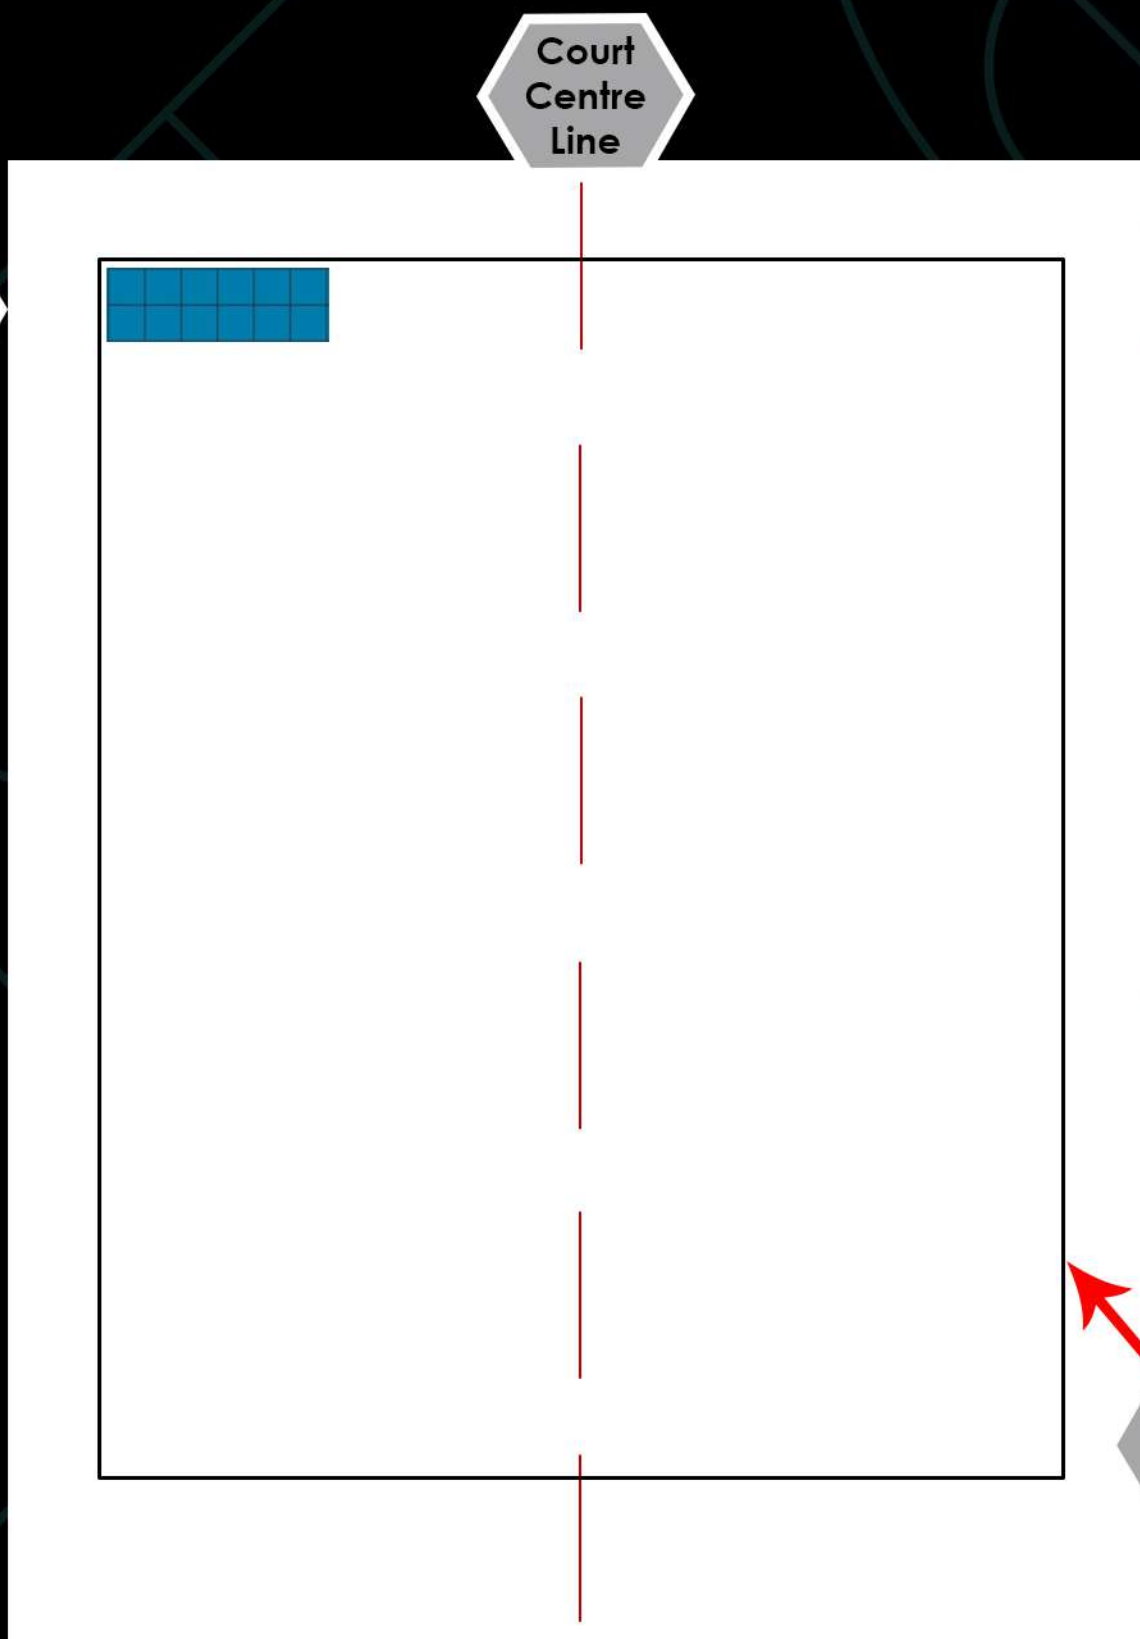

Court
Centre
Line

Row 1


Court
Outline

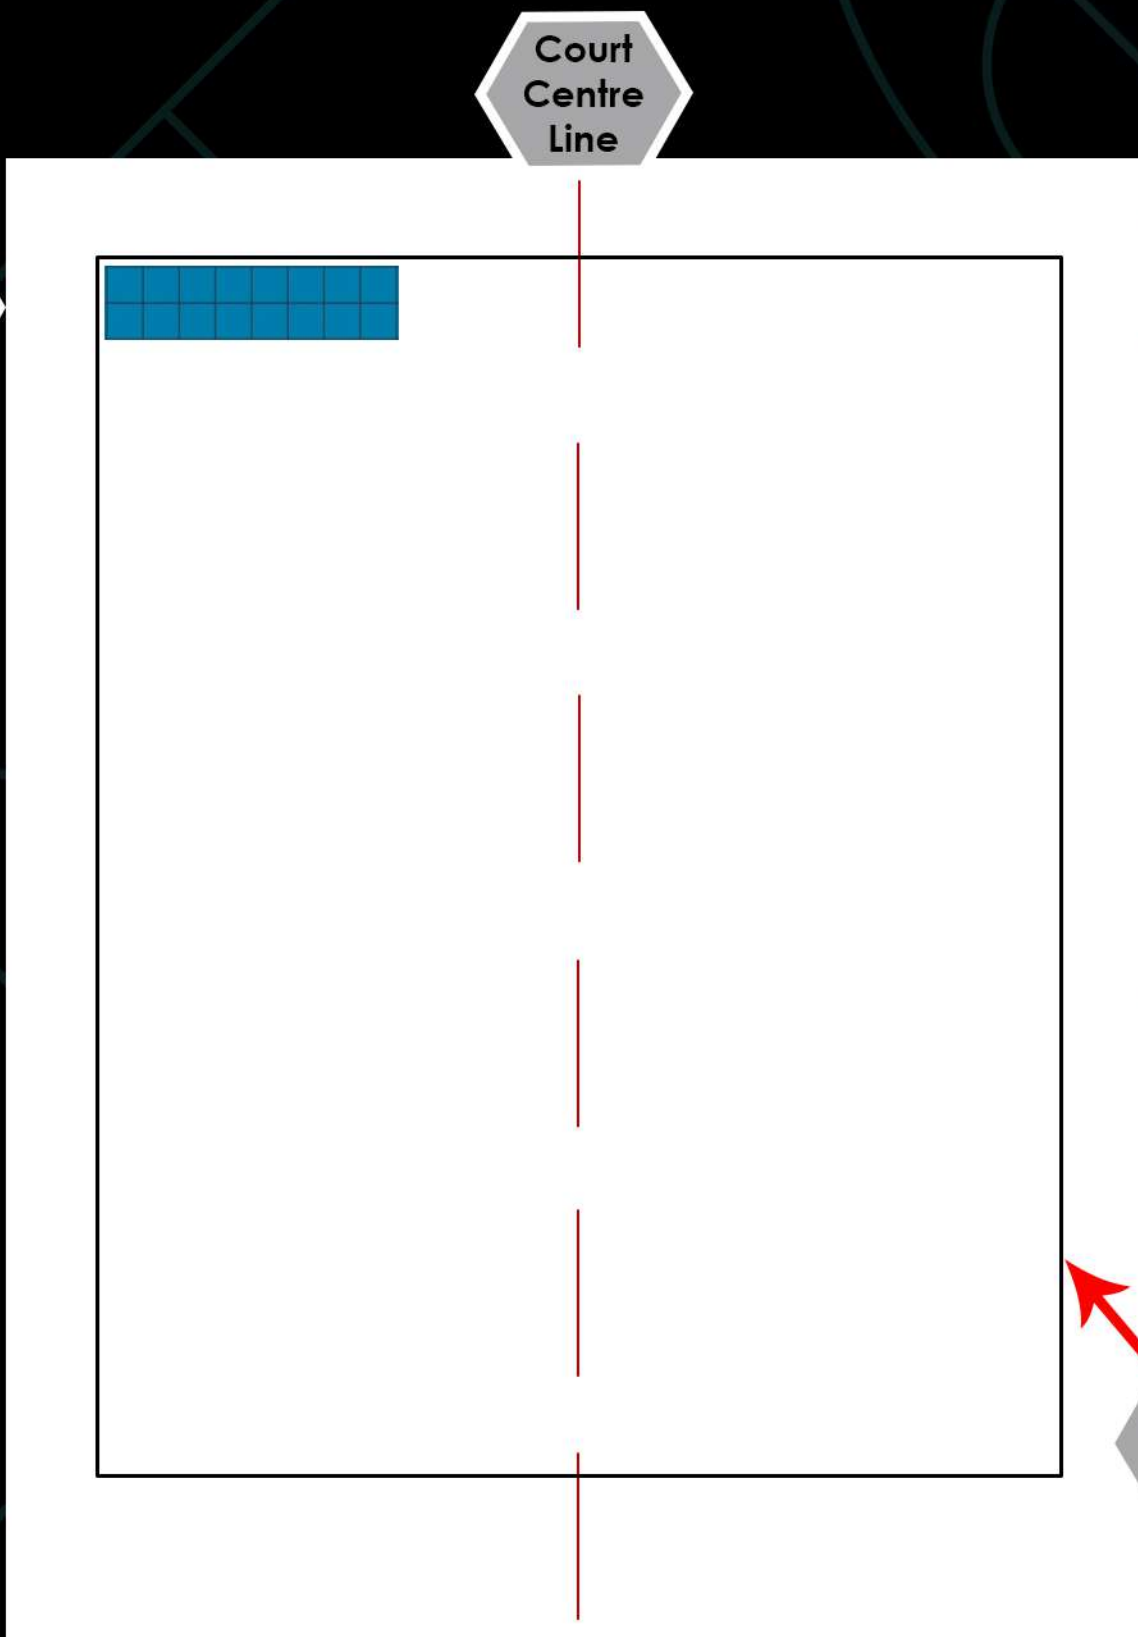

Court
Centre
Line

Row 1


Court
Outline

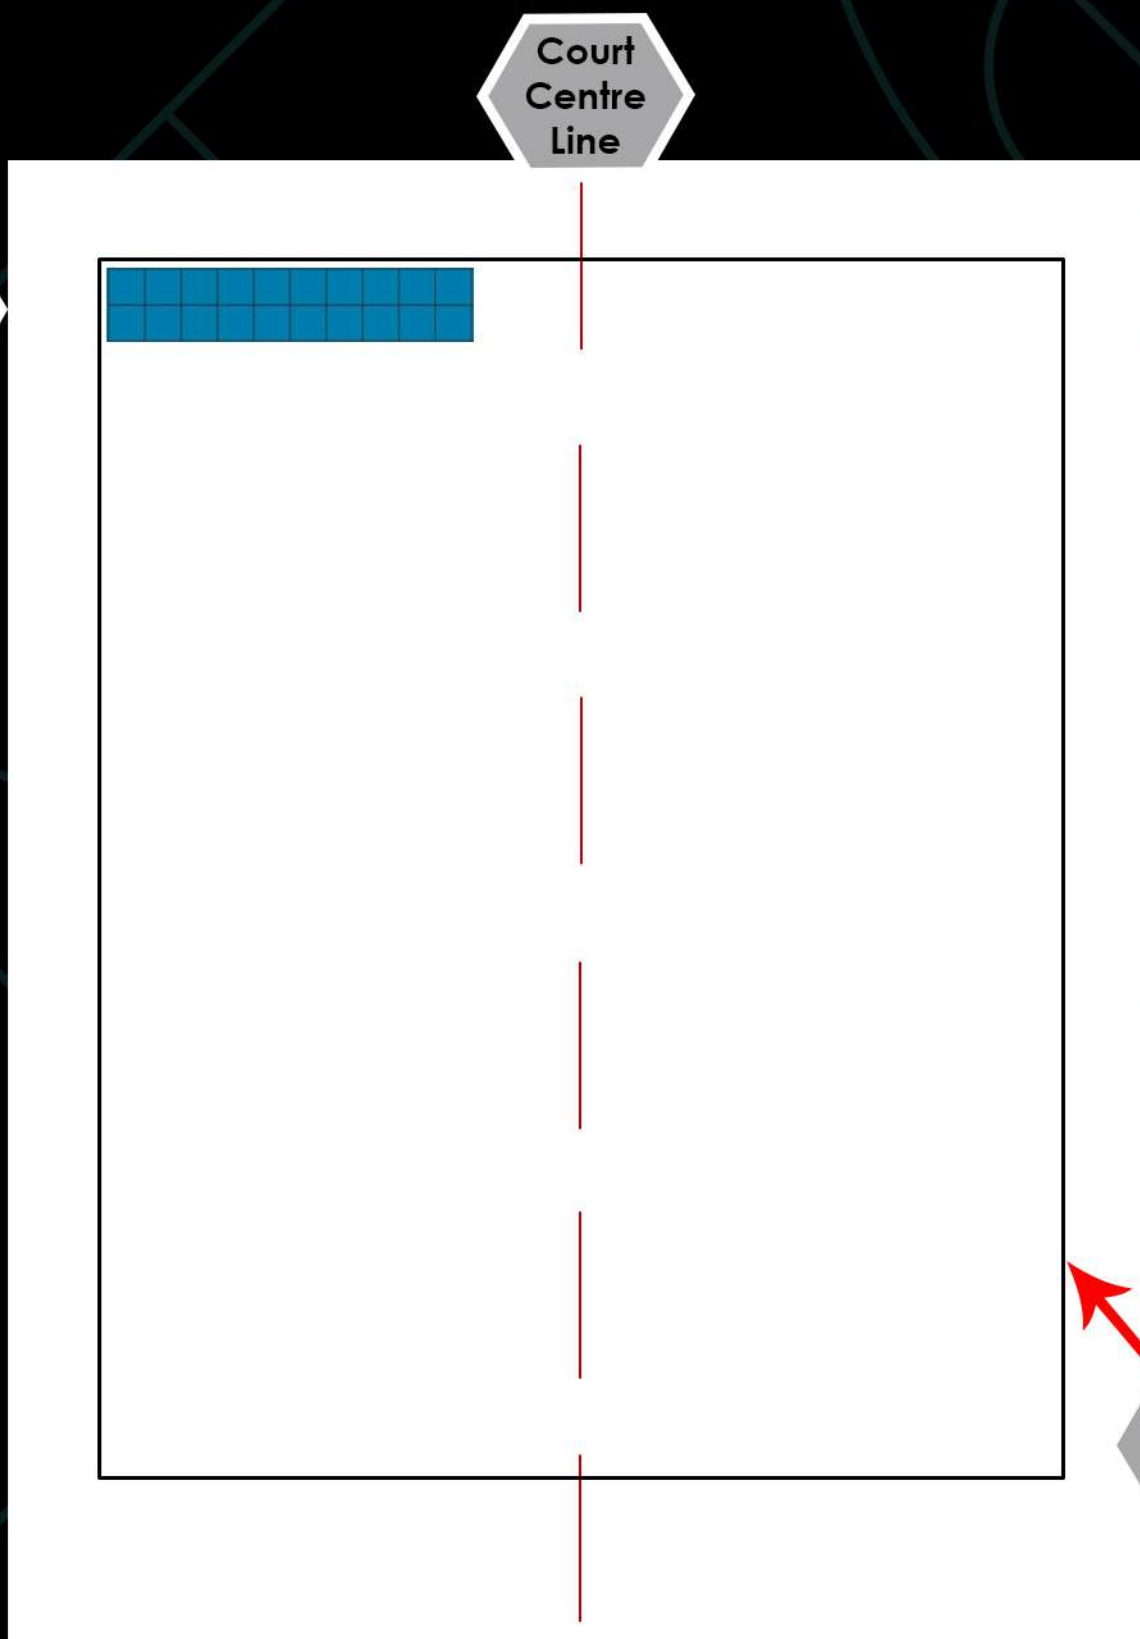

Court
Centre
Line

Row 1


Court
Outline

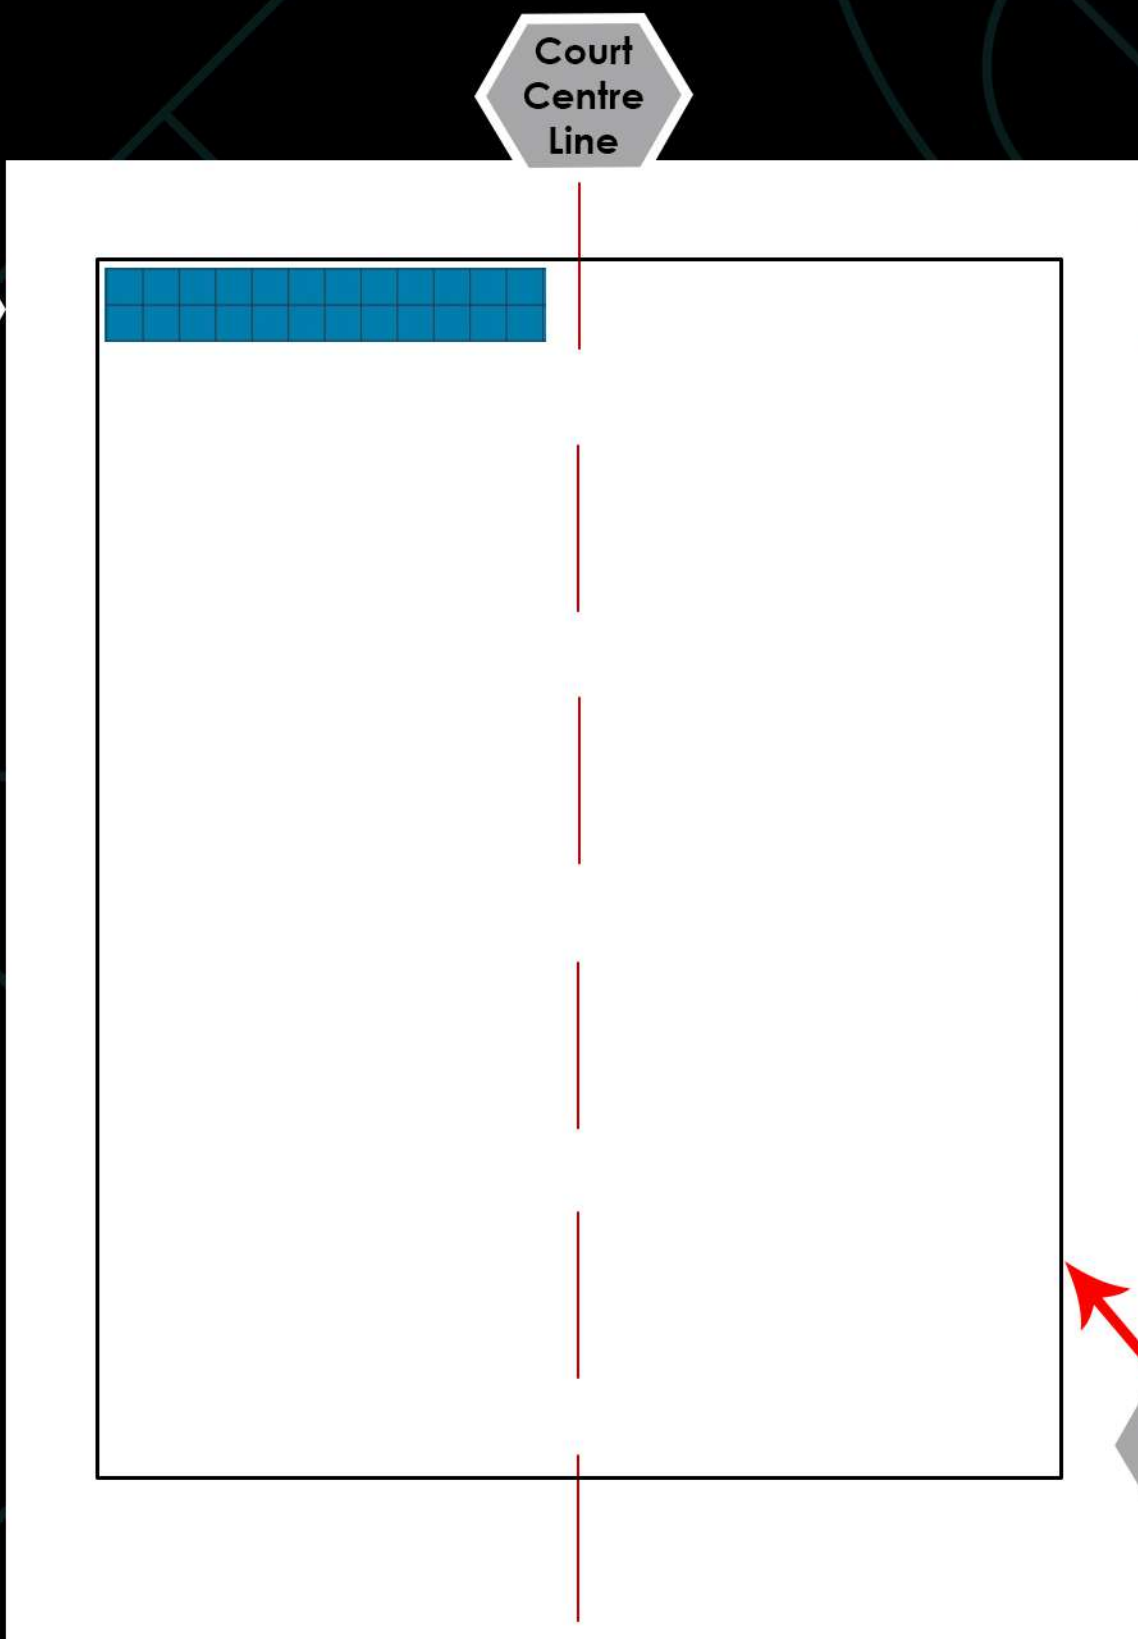

Court
Centre
Line

Row 1


Court
Outline

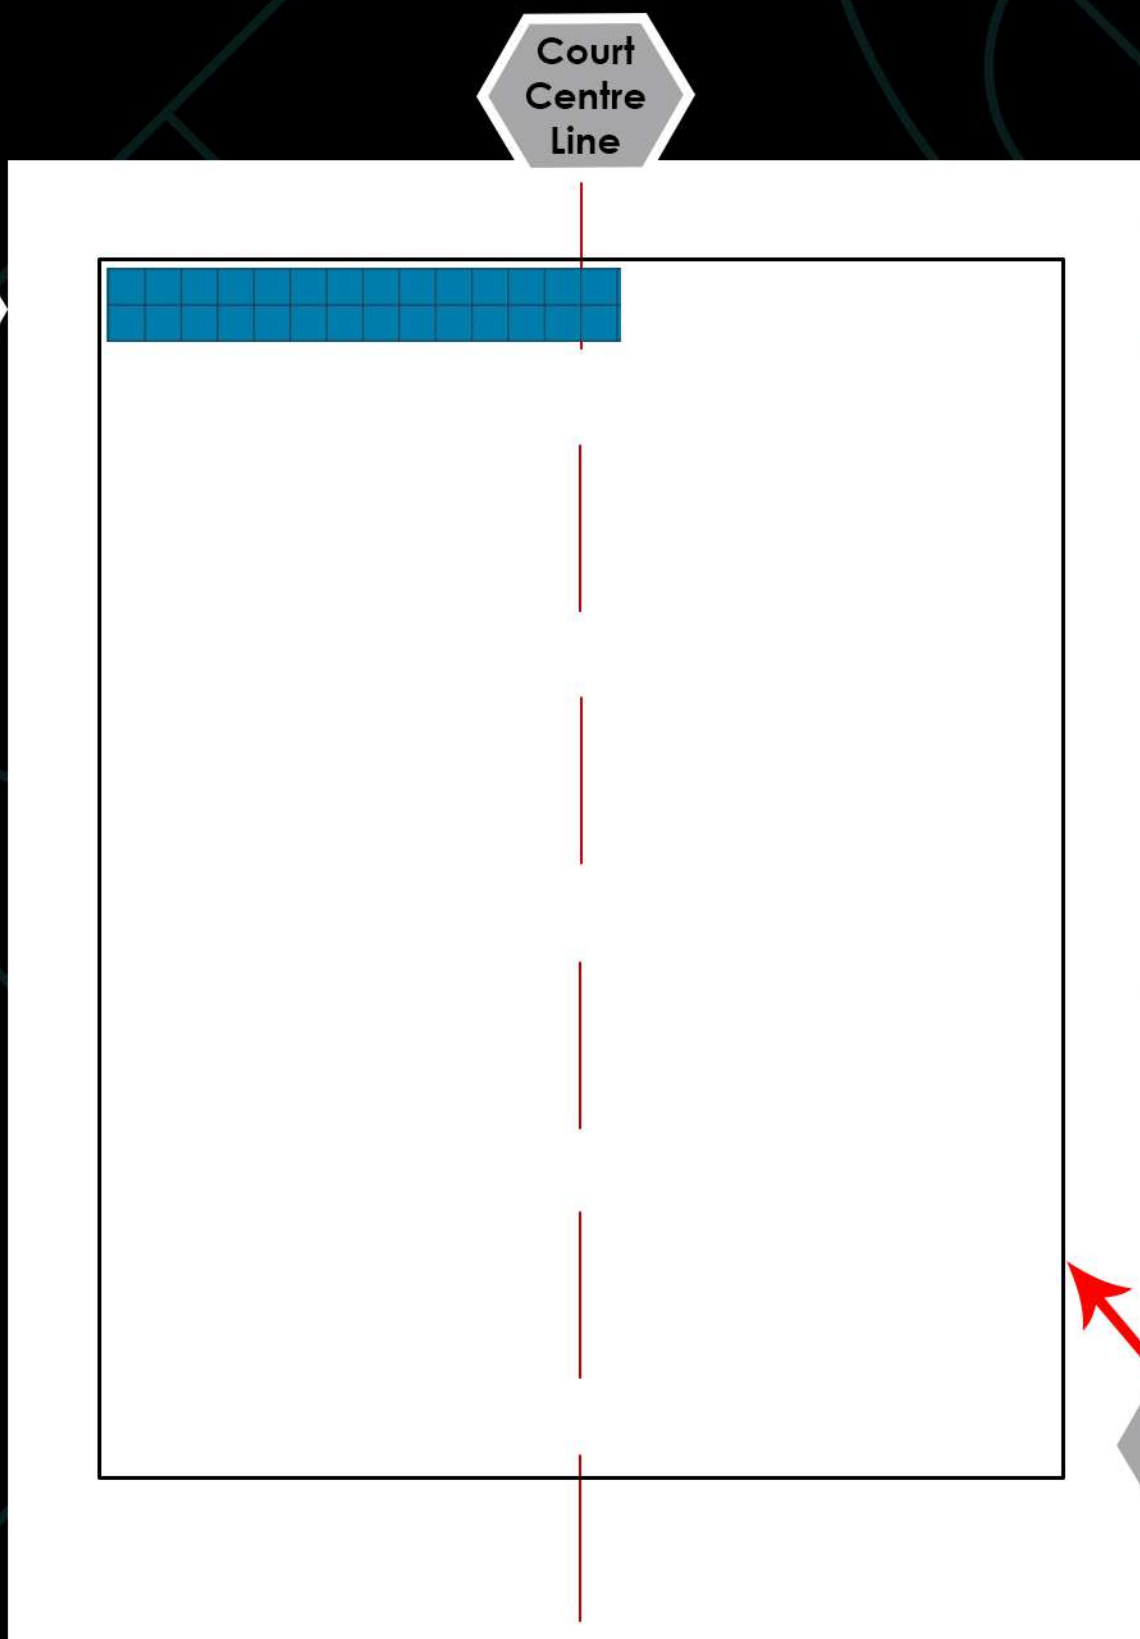

Court
Centre
Line

Row 1


Court
Outline

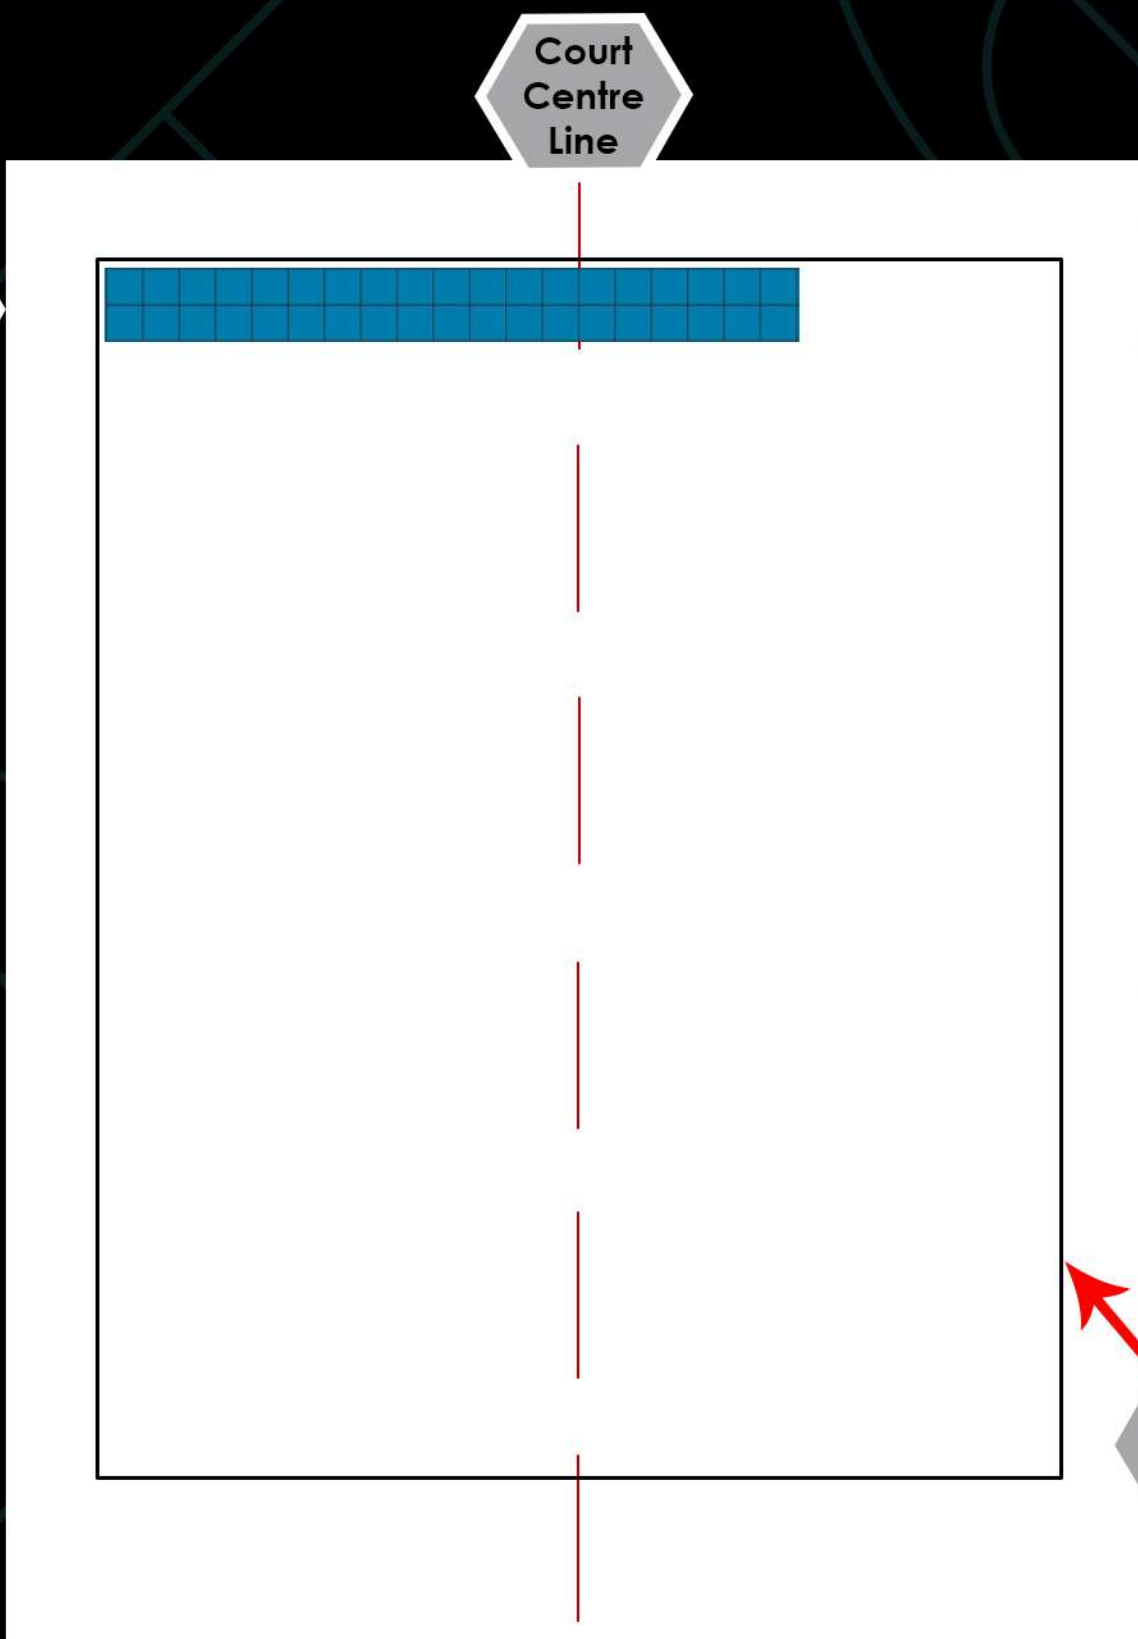



Court
Centre
Line

Row 1
Complete

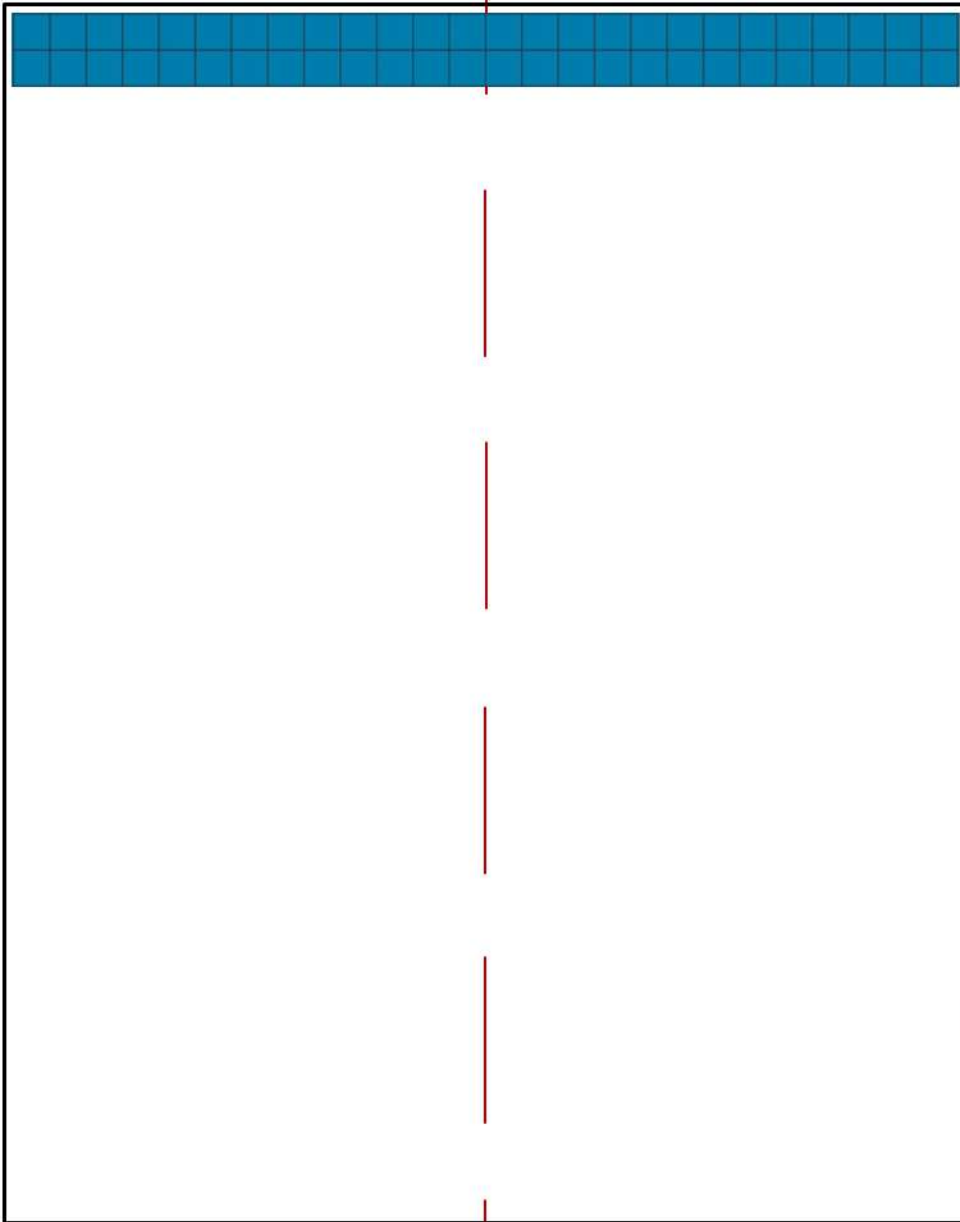


Court
Outline



Court
Centre
Line


Row 2

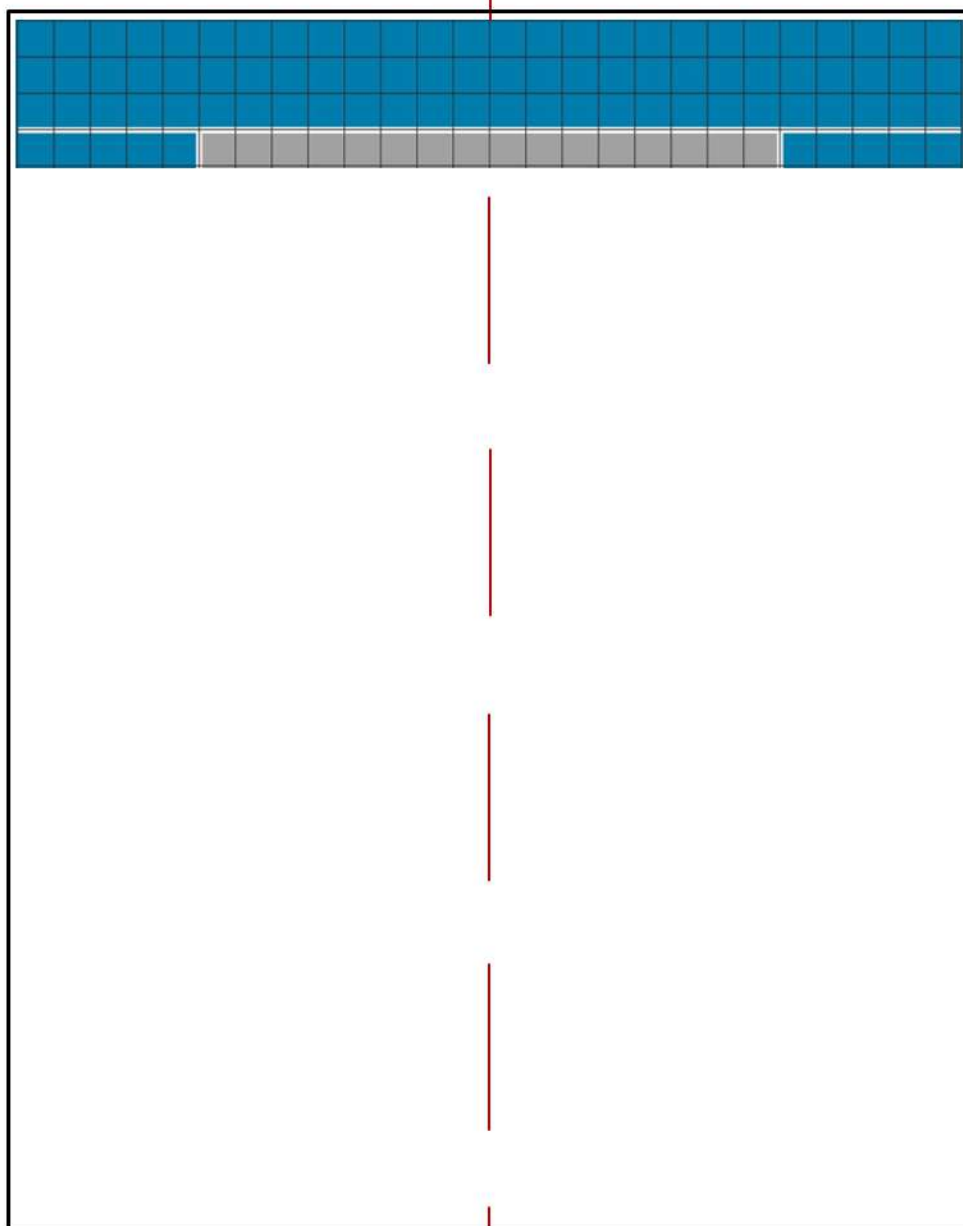

Court
Outline




Row 3

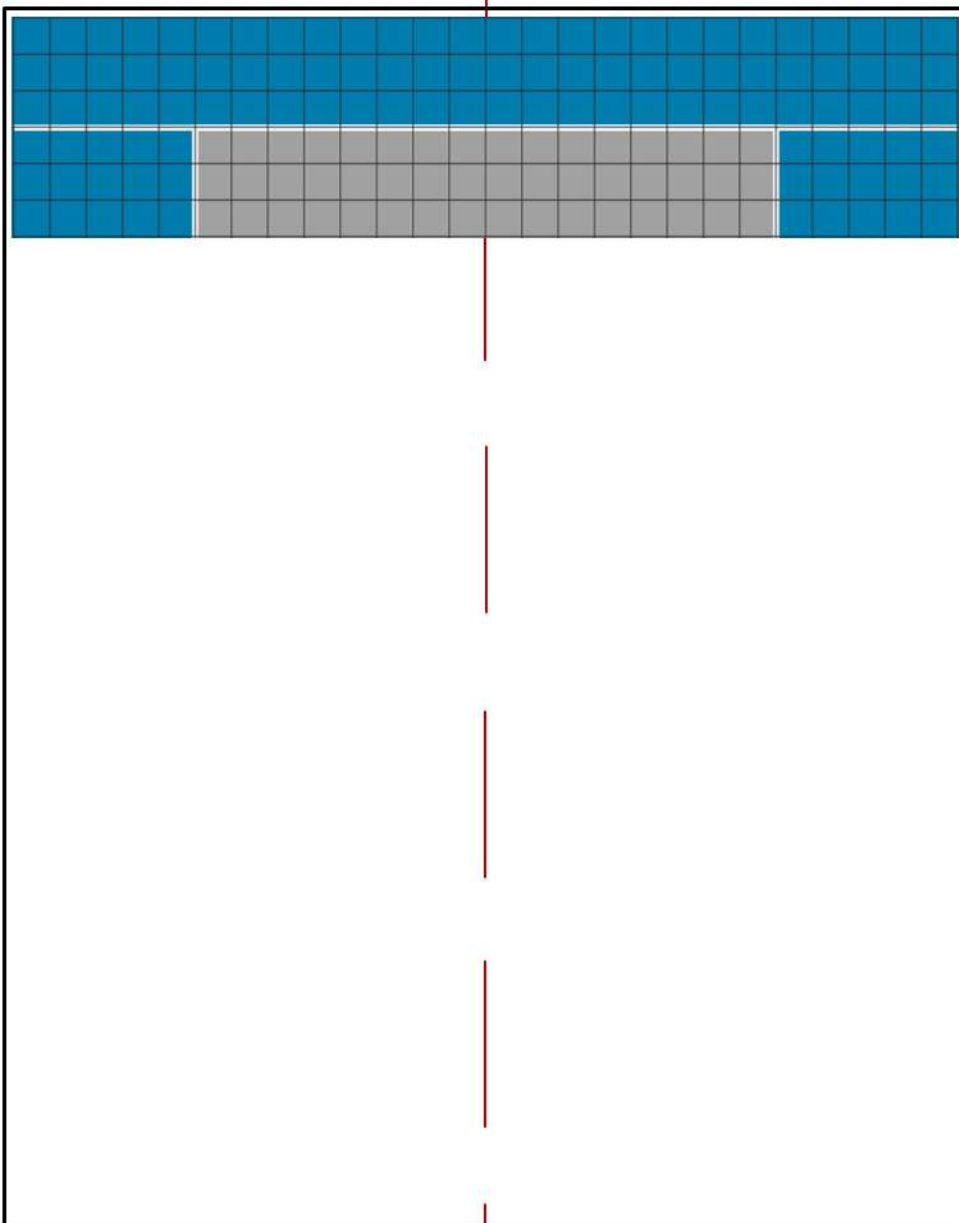





Row 4

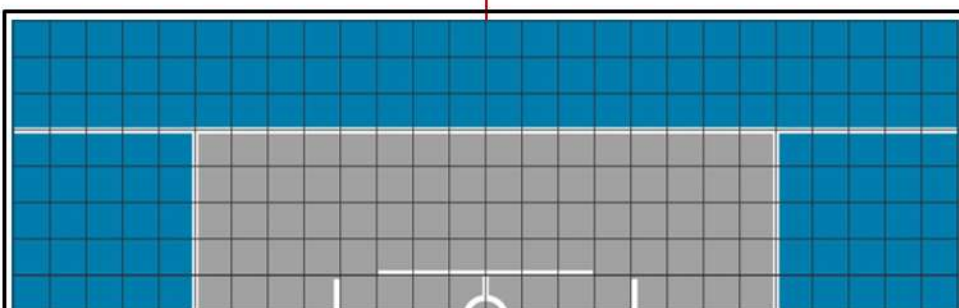






Row 5

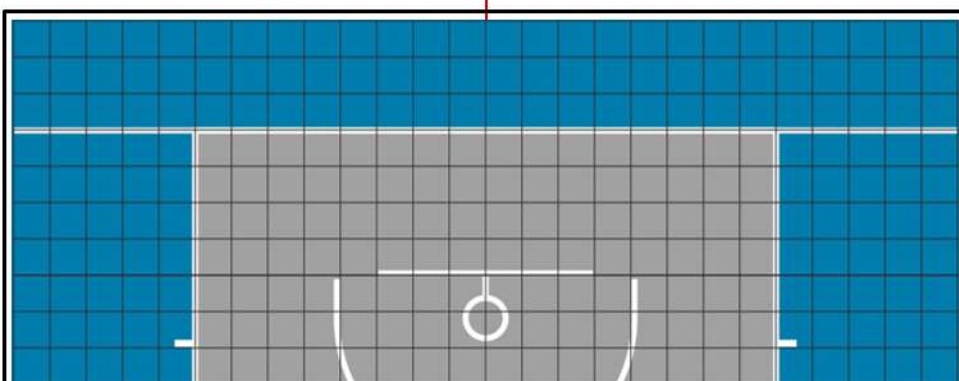

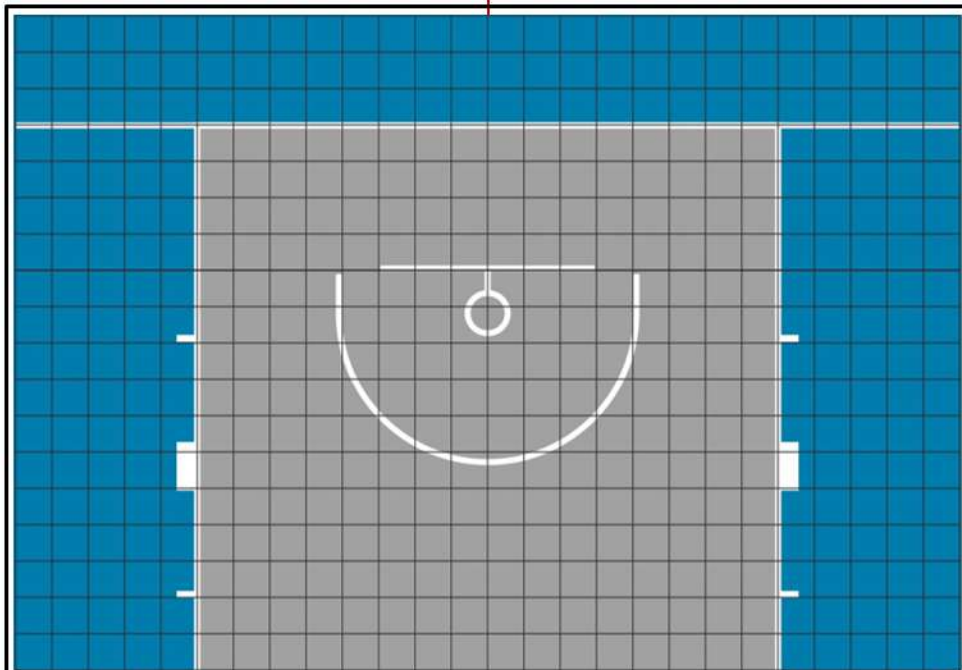

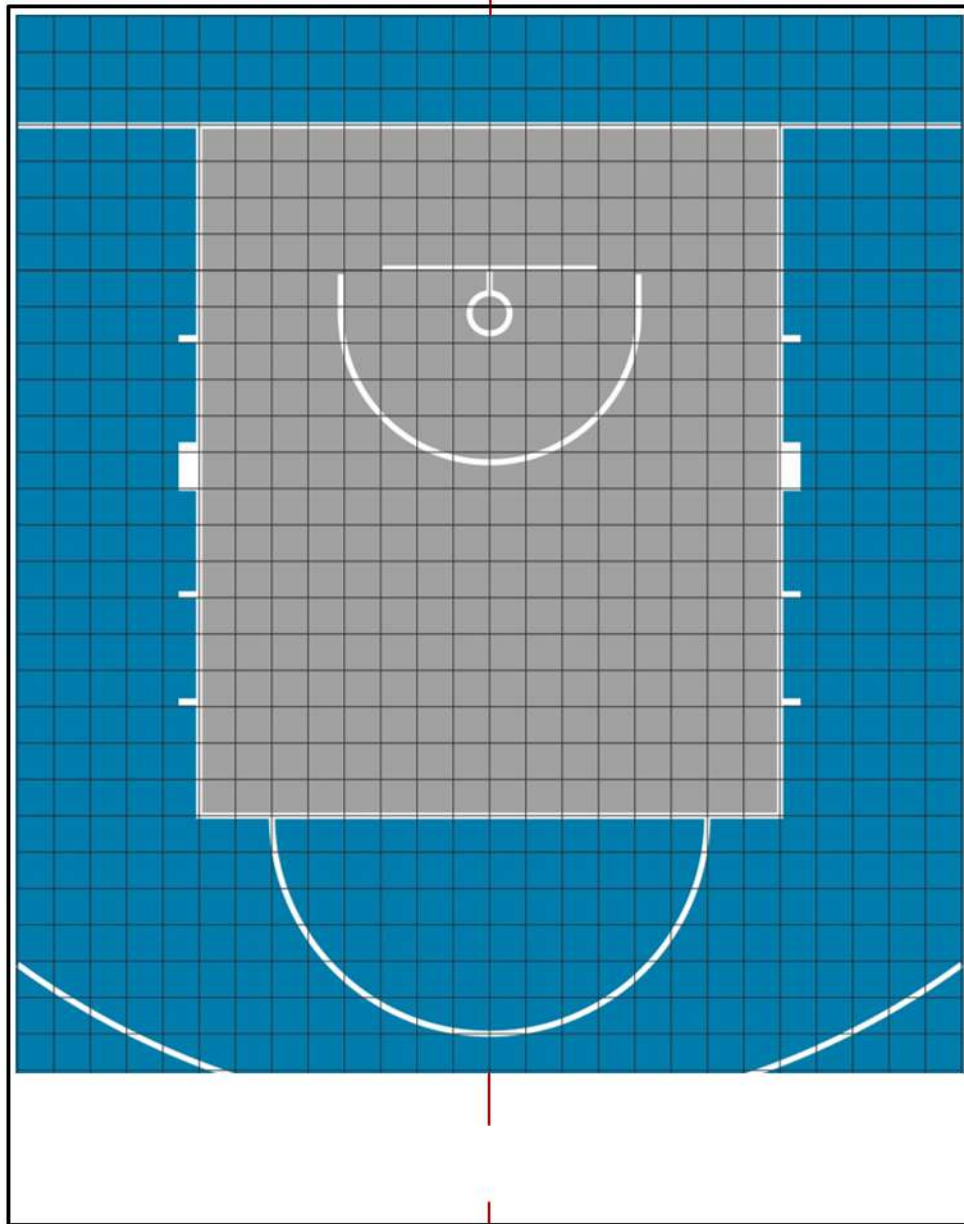

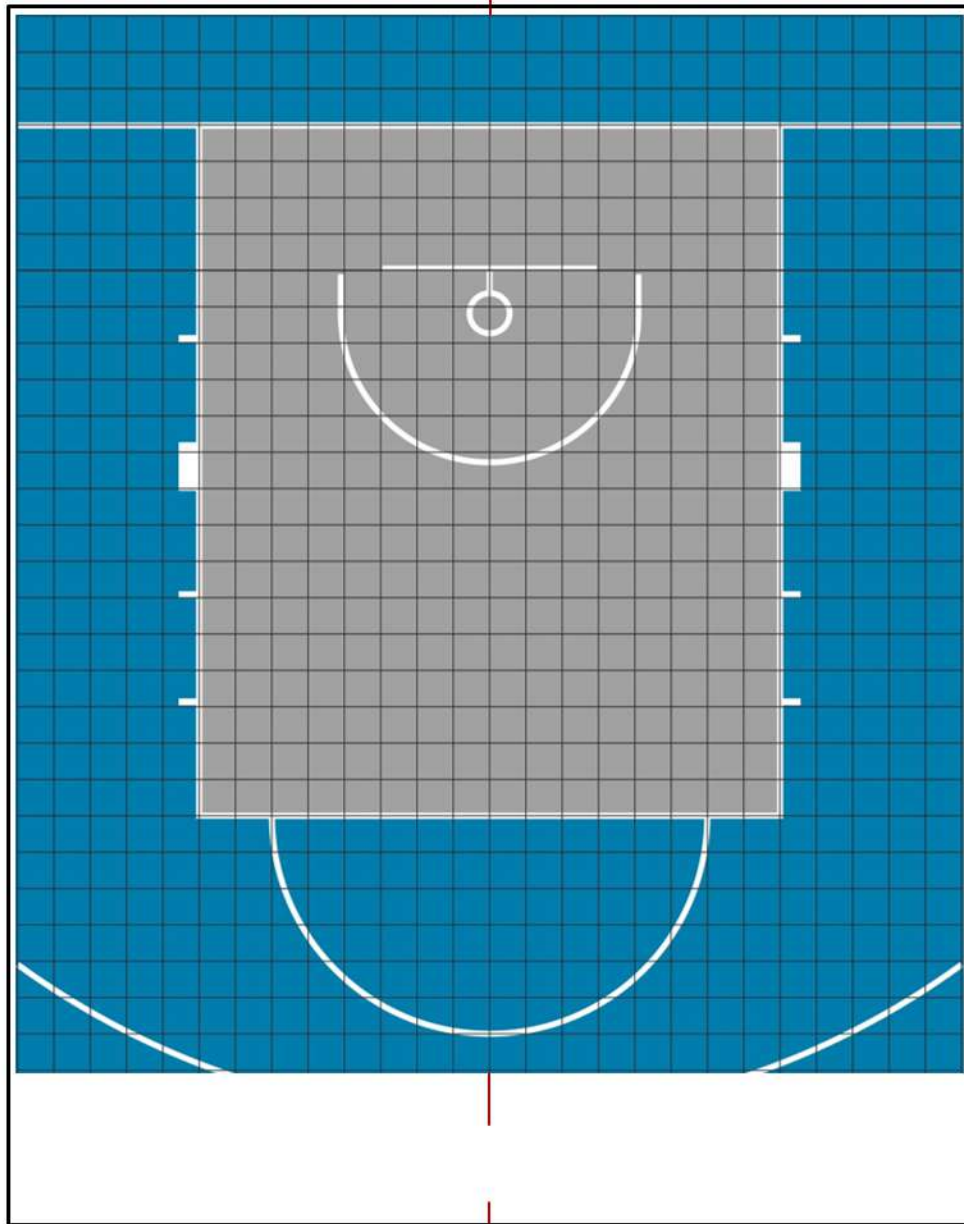

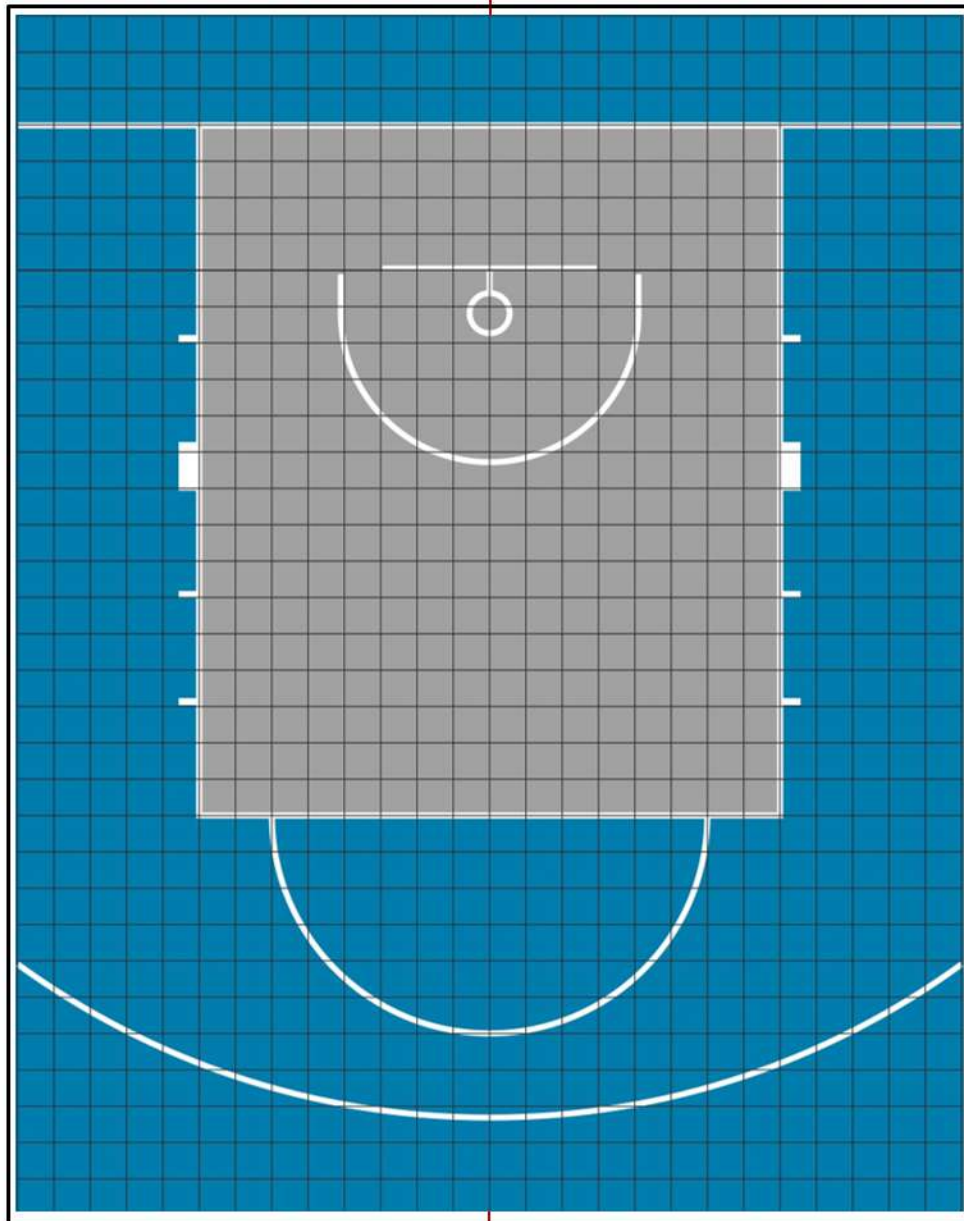

Click edging
into place if
applicable

