TIMBER WINDOWS ESSEX


Window & Door Measuring Guide

To prepare your initial quotation, we just need the approximate overall width (W) and height (H) of each window and door, as shown below, along with a photo or a sketch of the design you'd like. Everything we supply comes fully finished and complete with its frame, so please measure the door or window and its frame together as one. Approximate sizes are absolutely fine — one of our surveyors will take precise measurements before anything is made.

W **Overall width** **H** **Overall height**



Doors
Measure the door and frame together, from the top down to the threshold or step

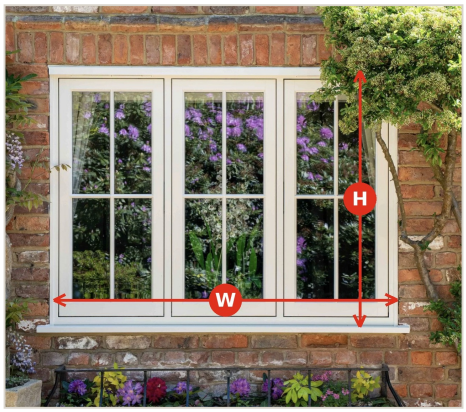

Windows — from outside
Full frame, from the top down to the bottom of the sill



Windows — from inside
Plaster line to plaster line for the width; window board up to the plaster line at the head

A few tips

- Measure in millimetres where possible — to the nearest 20–30mm is fine.
- For doors, measure the door and frame as one — including any glass above or panels to the side.
- From outside, measure against the brickwork; from inside, use the plaster lines as shown.
- Please send a photo or a sketch of each window or door, showing the design you'd like.
- Let us know how many of each item you have, and any that are the same size.
- If anything is awkward to reach, just send us a photo instead and we'll work from that.

Send your sizes, photos and sketches to **enquiries@timberwindows-essex.com** • or text us on **07426 887306**