


## Pairing Instructions: Standard Wide Band. Transmitter to Receiver.

**This process enables a 20 second pairing period.**

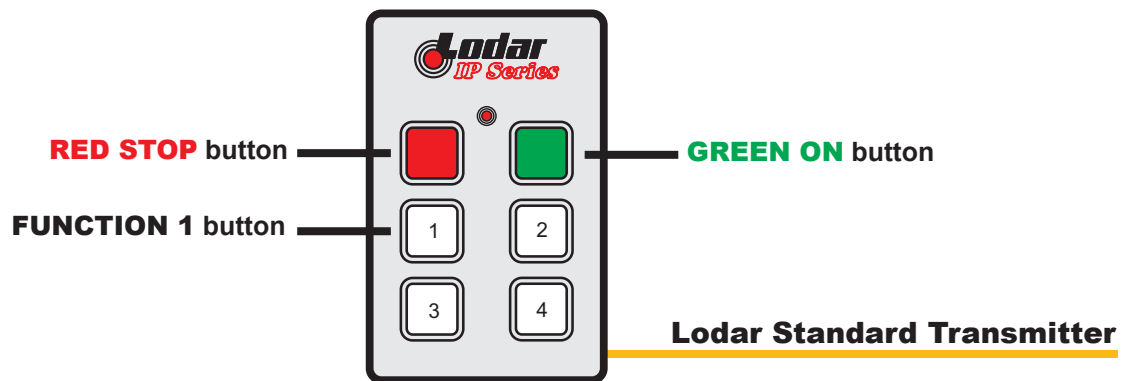

**To pair a Standard Wide Band Transmitter (Remote) to a Wide Band Receiver :**

- 1 Disconnect the +ve power to the Receiver.
- 2 Press the **RED STOP** button on the Transmitter.
- 3 Reconnect the +ve power to the Receiver.  
(This begins the 20 second pairing period - If viewing the Receiver, the Red fault LED will be flashing.)
- 4 Press and HOLD the **GREEN ON** button **AND** the **FUNCTION 1** button for 5 seconds during the 20 second pairing period. (FUNCTION 1 button is below the RED STOP button).
- 5 **First** release the **FUNCTION 1** button, **then** release the **GREEN ON** button.  
(If viewing the Receiver, when the Transmitter is paired to the Receiver, the Receivers Red fault LED will illuminate solid.)
- 6 Press the **RED STOP** button on the Transmitter to turn it OFF.
- 7 Press the **GREEN ON** button on the Transmitter to turn it ON. This completes the pairing.
- 8 Test the pairing by pressing the **GREEN ON** button to turn the Transmitter ON then press each of the function buttons.