



1 Product Introduction

FX-XS-C1-B is a multi-functional charging dock. Users only need to install our battery pack + special battery cover on the Xbox Series X® controller and put the controller on the base to charge it. The product can charge two Xbox Series X® controllers at the same time (Note: battery pack shall be installed on the controller). During charging, the charging state of two Ni MH battery packs is indicated by the illumination color of the left and right Xbox® controller patterns on the display panel in front of the double-charging dock, which is very straightforward. At the same time, a green ambient light is added in front of the dock to emit green light when powered on. The input port behind the double-charging base is the Type-C standard port. With the Type-C cable, the user can use the console USB interface, computer USB interface or other DC 5V USB power charger to obtain power, and does not need to use any special power supply. The charging dock is of the special Ni MH battery charging management IC circuit design, with over-voltage protection, over-current protection, output short circuit protection function, and battery reverse polarity protection function, which can effectively protect Ni MH battery and charging safety.



2 Product Diagram

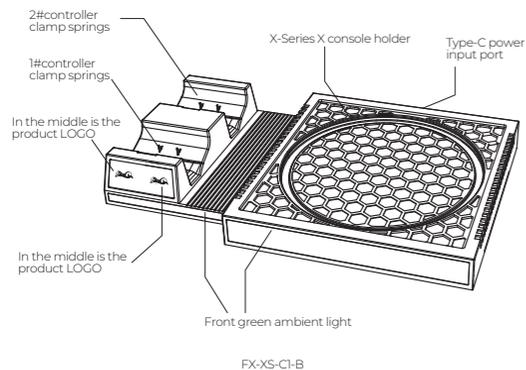

3 Diagram of TYX-0612 battery and battery cover

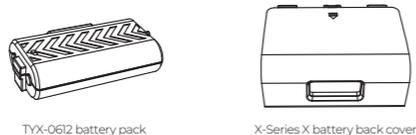

4 Assembly drawings of the product and accessories

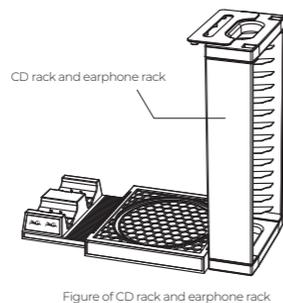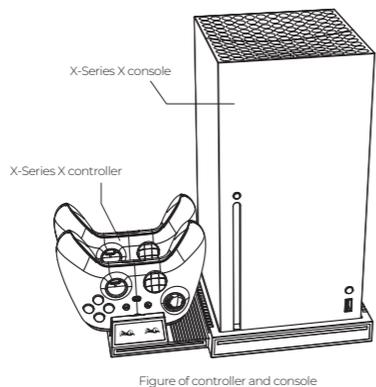

5 Product Characteristics

- DC 5VIA power supply, the standard Type-C port used as the input interface, equipped with USB to Type-C adapter and Ni MH battery pack + two battery covers. It is very easy to use.
- The built-in circuit has over-current protection function for input current, short-circuit protection function for output current, and over-voltage and reverse polarity protection function for battery charging;
- This product has a special Ni MH battery charging management IC design. When the Ni MH battery is charged to 2.85V, it will automatically stop charging. It can effectively protect the Xbox Series X® controller and Ni MH battery pack. It also has over-voltage protection, over-current protection, output short circuit protection and reverse polarity protection functions.
- During charging, the user can tell the charging state of the battery pack on the controller from the illumination color of the two controller patterns on the front display panel, which is very straightforward.

6 Product Specification

- Input: DC 5V / 1A
- Output: DC 2.4V/300mA*2
- Charging current: When the input power is 5V 1A, the maximum charging current of a single controller can reach 300mA ~ 320mA, and the maximum charging current can reach 250mA ~ 300mA when two controllers are being charged at the same time
- Charging time: About 3 ~ 3.5 hours (assuming a capacity of 600mAh battery, two controllers are charged at the same time, and the input current is greater than or equal to 1A)
- Material: ABS
- Accessories: One USB to Type-C adapter, two TYX-0612 Ni MH battery packs, two Xbox Series X® battery back covers, and one TYX-0674 earphone rack (if the type and quantity of actual accessories change due to the order requirements, no additional notice shall be given in the instructions for use)

7 Instructions for use

Put the Xbox Series X® console on the base, connect the power supply and turn it on, and then connect the Xbox Series X® console with USB to Type-C adapter. If the controller is not placed on the base, the two controller patterns in front of the double charging dock will flash once with red light and green light respectively after powering on, and then the green light will remain on, and the green ambient light on the front side will be remain illuminated.

Install the TYX-0612 Ni MH battery pack onto the Xbox Series X® controller, install the back cover of the battery, and then place the controller on the two controller clamps of the double-charging base in an inverted manner (the controller is facing forward). The controllers can be charged by aligning the two contacts on the side of the battery pack with the two springs on the charging base. During charging, the two controller patterns in front of the double-charging base will be red accordingly. When the battery pack is fully charged, the two controller patterns on the front of the double-charging base will change from red to green, indicating that the corresponding Xbox Series X® controller nickel hydrogen battery pack has been fully charged (the one on the left is 1# controller pattern, corresponding to the front 1# controller charging status; the one on the right is 2# controller pattern, corresponding to the back 2# controller charging status).

8 Product Precautions

- Please place the product on a flat table and in a well ventilated place.
- Please use the USB cable accompanying this product.
- If the USB charger is used to supply power to the double-charging base, the specification of the charger shall be 5V 1A. If the supply current is less than this specification, abnormal charging or abnormal light display may occur.
- For cleaning of this product, please use dry cloth to wipe it, and do not use water or alcohol to clean this product. When cleaning this product, please disconnect this product from the Xbox Series X® console or USB power supply.

- When the product is not used for a long time, please unplug the peripherals of the ports connected to the product and the input plugs. It is forbidden to store or use this product in humid or high temperature environment.
- If the product is wet, soaked or damaged, please stop using it and send it to the professional maintenance department for repair. Do not disassemble it without authorization.
- Keep the charging base and accessories away from children.