



Jupiter 470 - 850 see through

weight: 188 kg

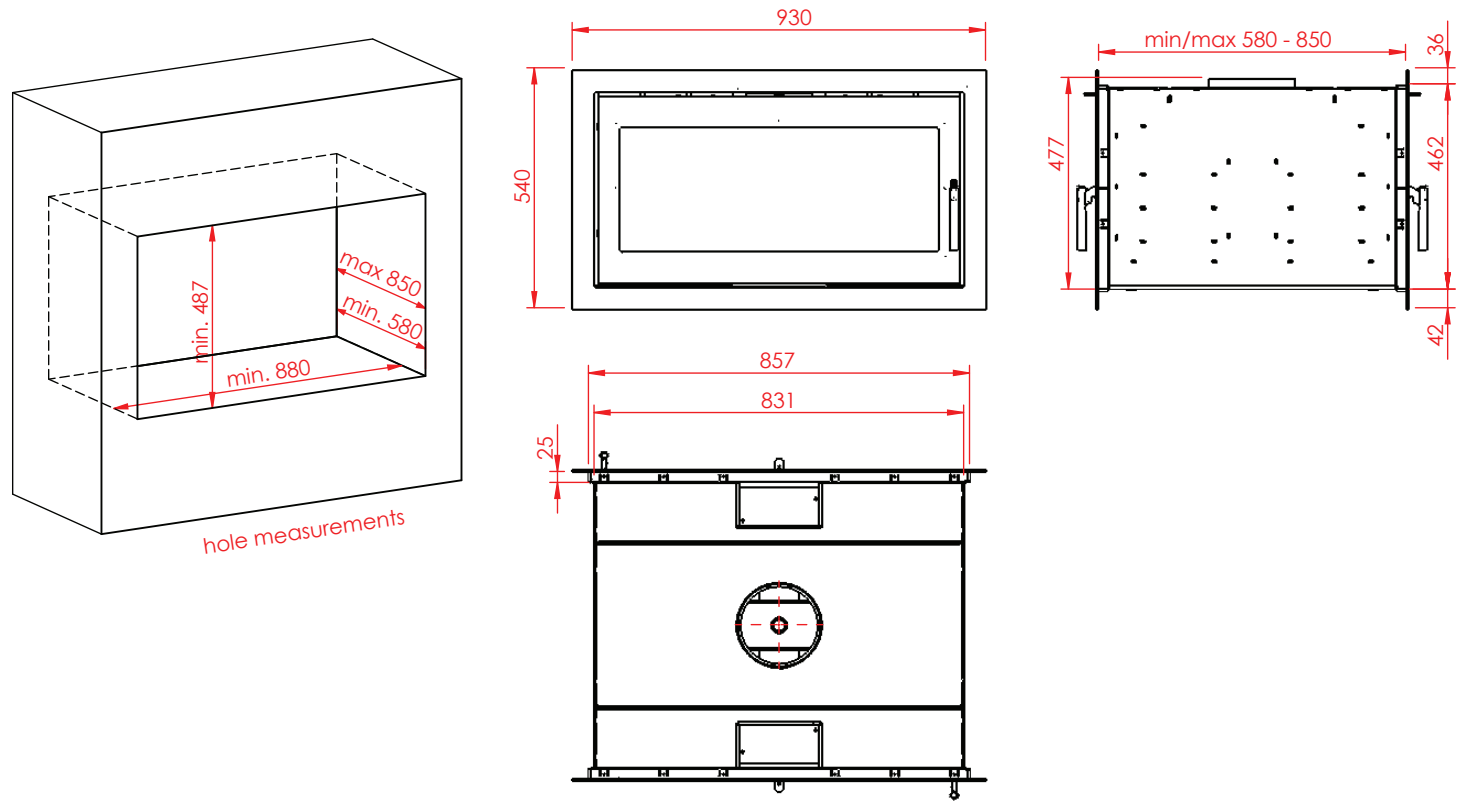

Jupiter 470 - 850 see through


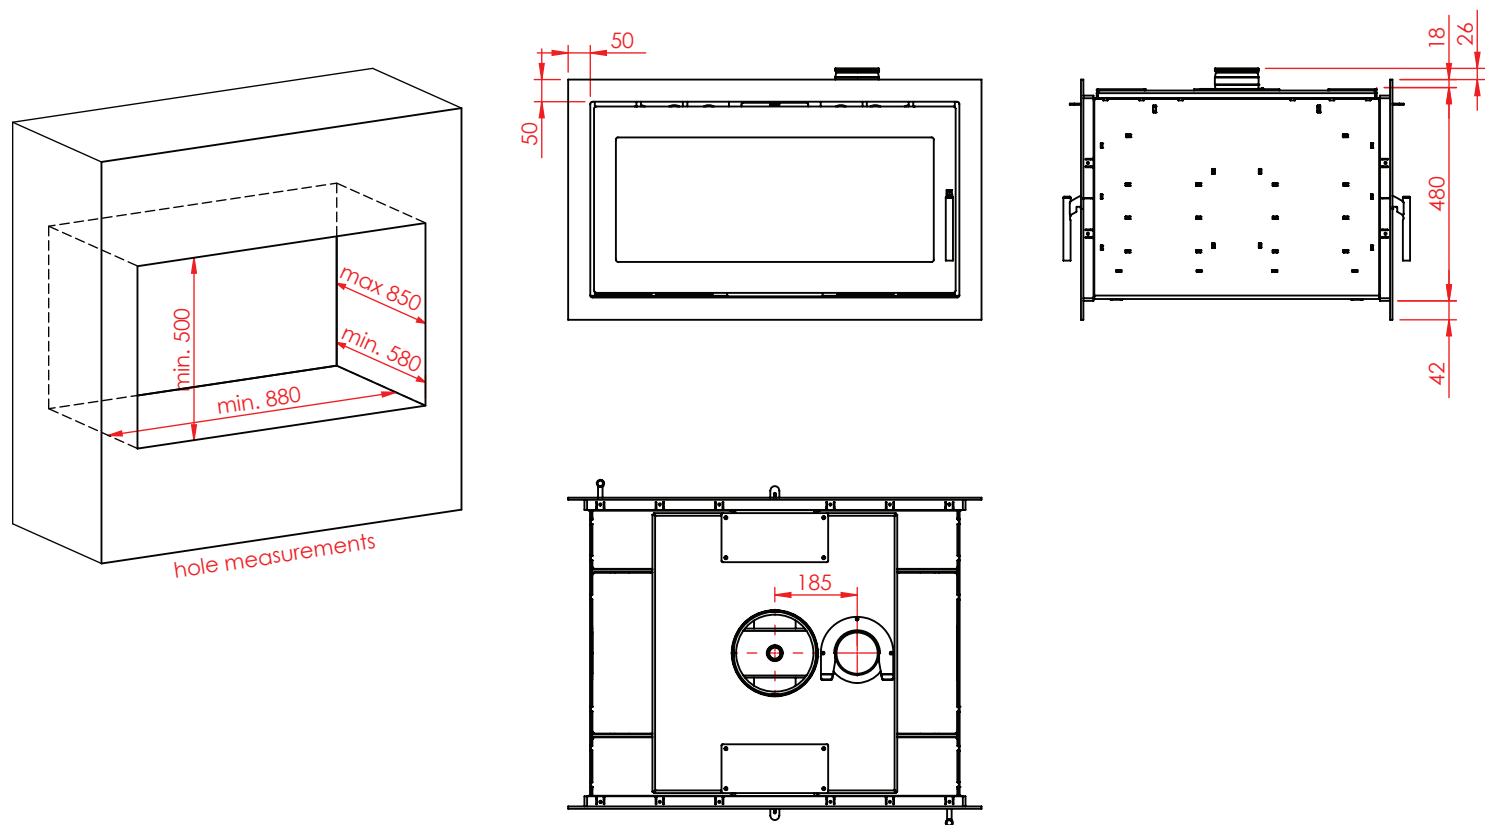


Jupiter 470 - 850 see through, airbox on top


Clearance to combustible materials

Jupiter fireplace inserts see through

	dS	dS ¹	dF	dB	dP	dL	dC
		note 1	note 2	note 2		note 3	note 4
Jupiter 470 XL	350	250	0/650	300	1200	700	400
Jupiter 550 XL	350	250	0/650	300	1200	700	400
Jupiter 470-850	350	250	0/650	300	1200	700	400
Jupiter 500-850	350	250	0/650	300	1200	700	400
Jupiter 550-850	350	250	0/650	300	1200	700	400

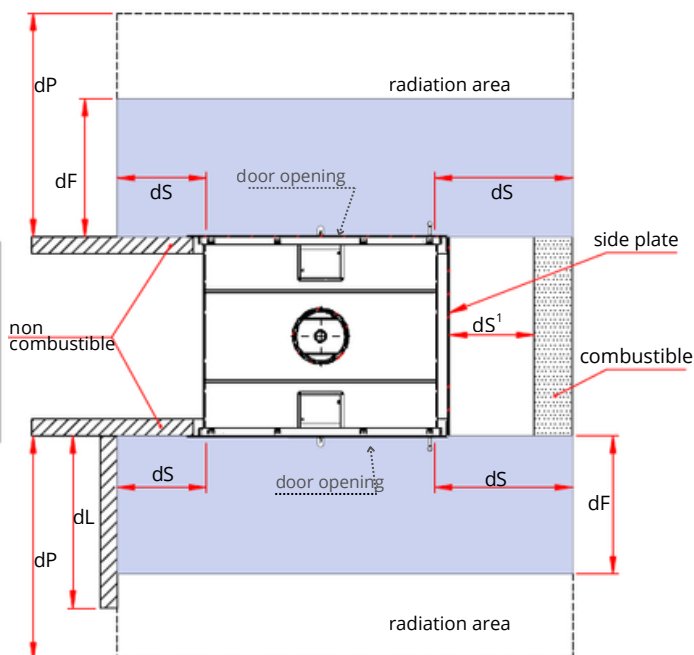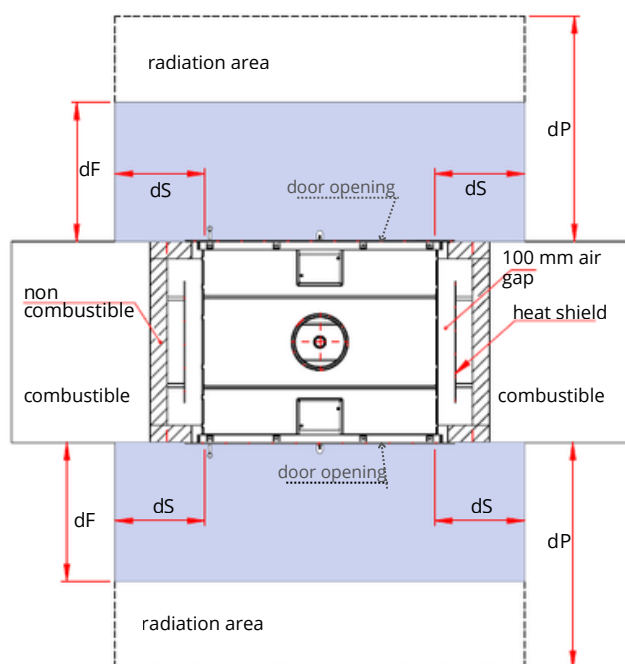

may only be installed in connection with non-combustible material. 50 mm Super-Isol or equivalent

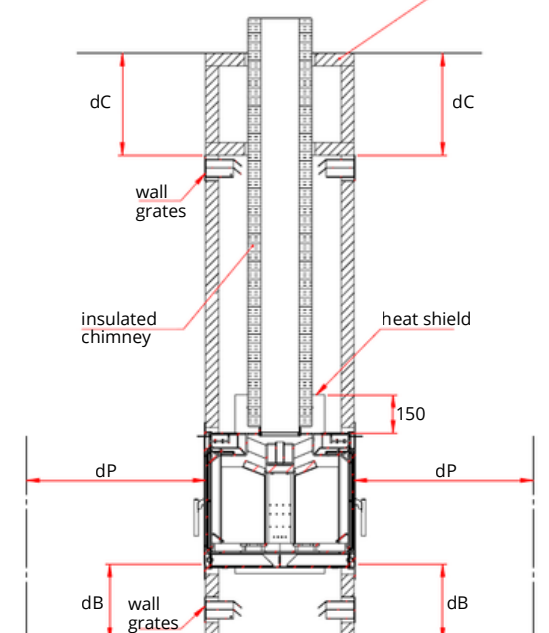

Note 1: dimension measured at a closed side plate
- measured from the edge of the door

*Be aware that the **dS** clearances in front of the insert must still be respected.*

Note 2: safety distance to non-combustible floor
- measured from the floor to the underside of the door edge:

dB ≥ 300 mm = **dF**: 0 mm

dB < 300 mm = **dF**: 650 mm


Note 3: measured from the front edge of the door when
dS < 350 mm

Note 4: measured from the top edge of the wall grates

Heat shields: on all three sides, positioned from the bottom of the stove up to 150 mm above the top of the stove

Safety distance to staircase/combustible ceiling

If combustible staircases or a combustible ceiling are located above the fireplace insert – measured from the top edge of the door to the nearest combustible part of the staircase: **dC** min. 600 mm

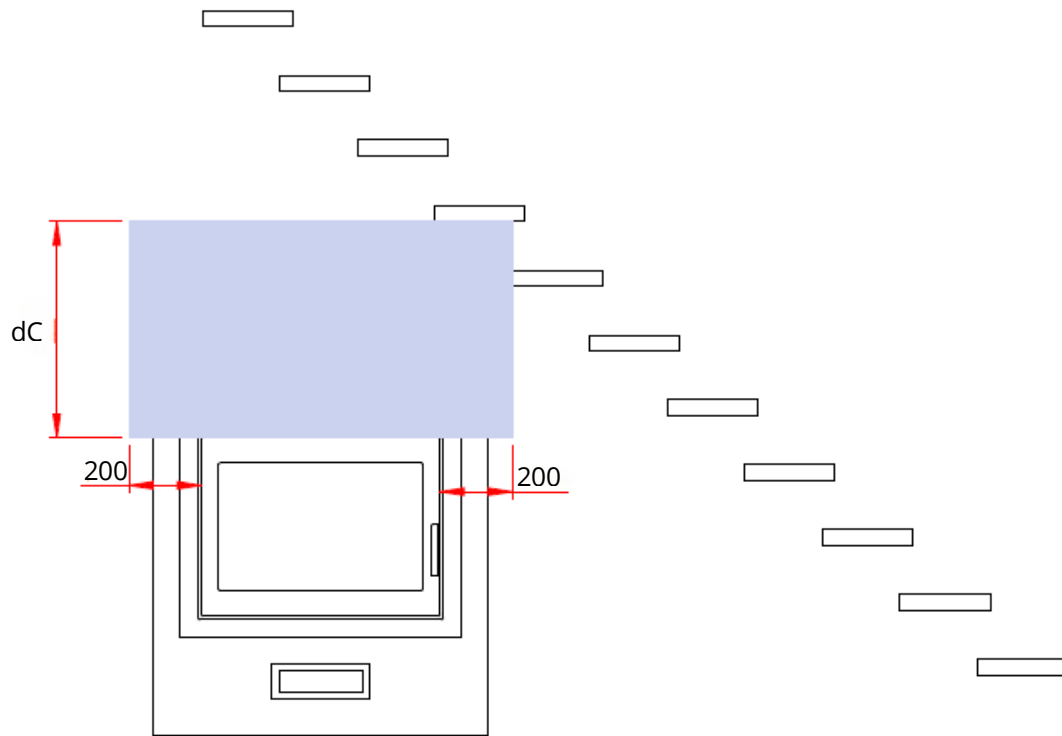

front view example at staircase