

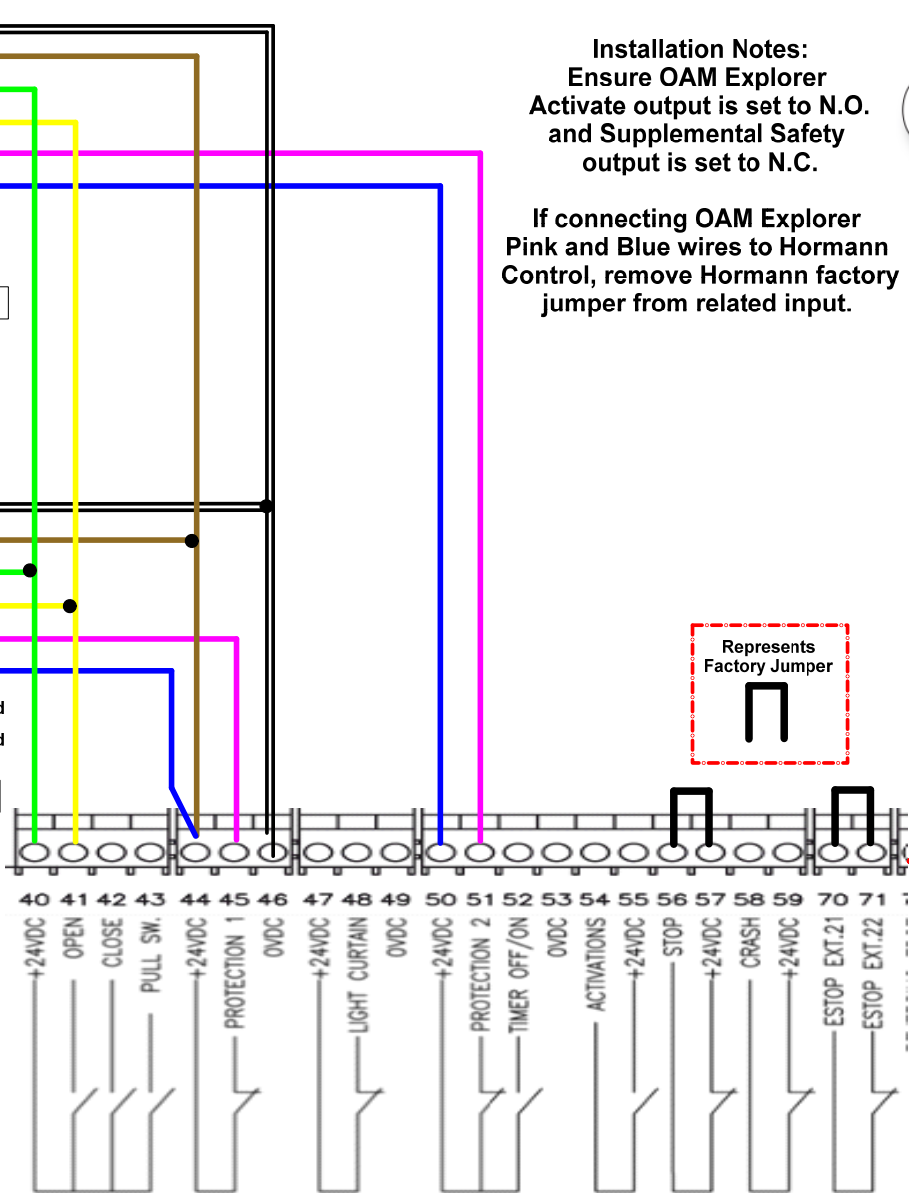
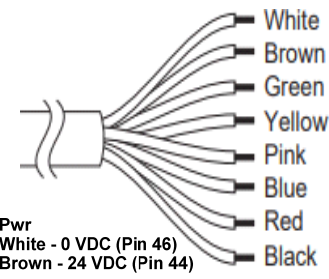
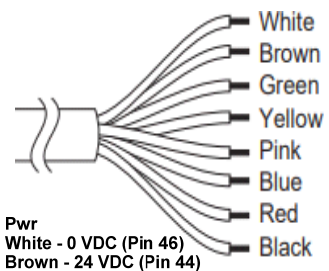


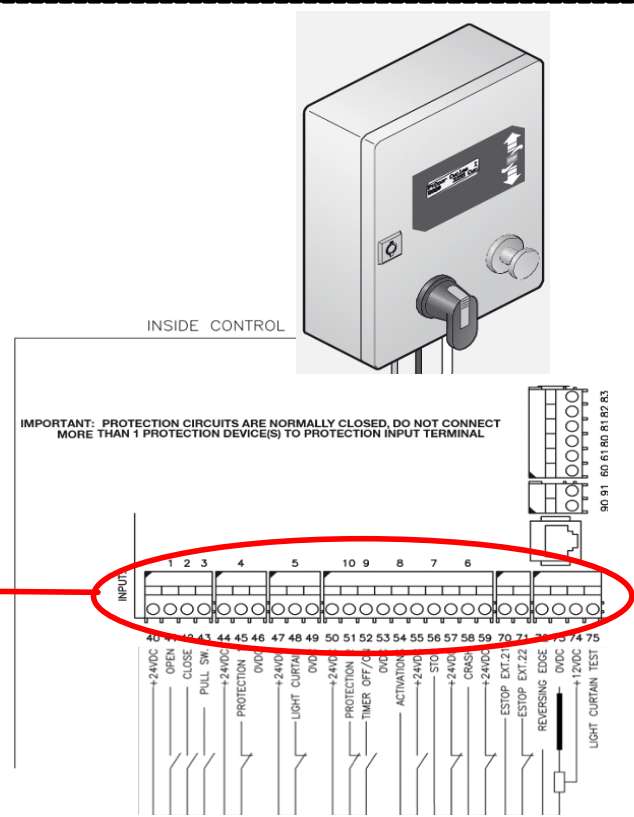

Installation Notes:
Ensure OAM Explorer
Activate output is set to N.O.
and Supplemental Safety
output is set to N.C.

If connecting OAM Explorer
Pink and Blue wires to Hormann
Control, remove Hormann factory
jumper from related input.

OAM Explorer

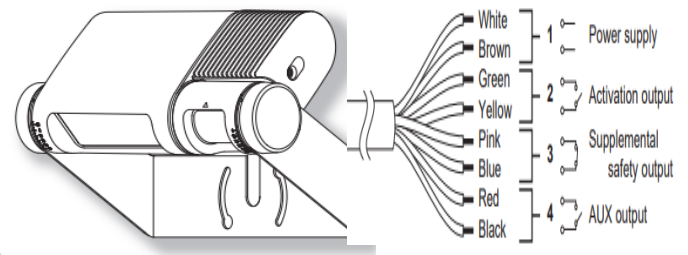

Title: Hormann AS500 / BS150 with OAM Explorer		Drawing # 01HOR500150EXP01
Drawing By: JAS	Date: 05-14-24	Sheet: 1 of 1
Optex Technologies Inc. 10741 Walker Street., Suite 300, Cypress, CA 90630 Office: (800)877-6656, Fax: (310)214-8644		