



OAM Explorer

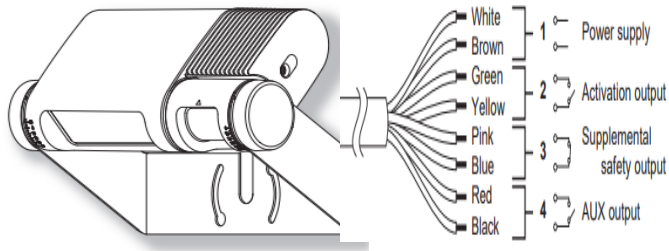

Pwr
White - 0 VDC
Brown - 24 VDC

Act output
Green - (OPN)
Yellow - 24 VDC

Supplemental Safety Output
Pink - STP
Blue - 24 VDC

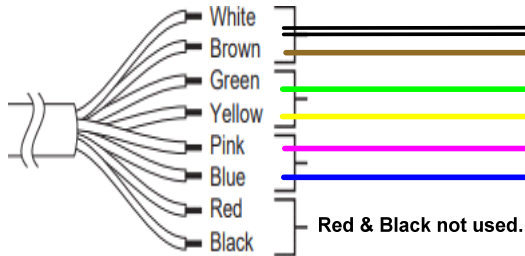

OPTION 1



- Motion (Act Output) provides primary activation. Presence (Supplemental Safety Output) is ignored at the closed position.

OPTION 2

- Motion (Act Output) and Presence (Supplemental safety Output) are Both active at all door positions.

Install Notes (OPTION 2):


1. On OAM Explorer ensure Activation and Suppl. Safety Relays are set to N.O.
2. When using two OAM Explorer Sensors, connect both to the same location (shown).
3. Using App, on OAM Explorer select Output Tab and set AIR detection "ON".

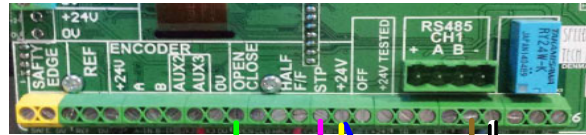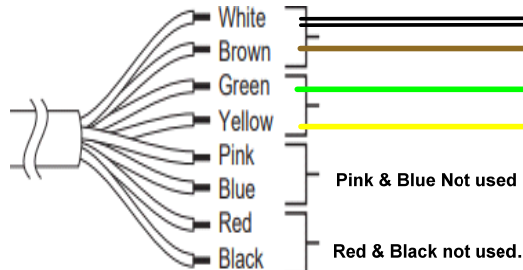

Install Notes (OPTION 1):

1. On OAM Explorer ensure Activation and Suppl. Safety Relays are set to N.O.
2. When using two OAM Explorer Sensors (Int. & Ext.) connect both sensors to the same location (shown).
3. On Door Control program STOP to SAFETY EDGE and logic = N.O.

Overhead Door Single Phase Control

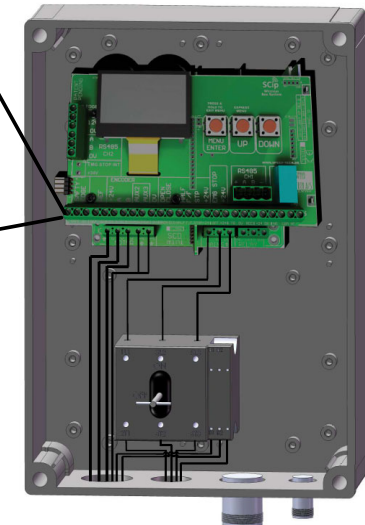

Title: Overhead Door 990 Single Phase With Optex OAM Explorer		Drawing # 01OHD990SPEXP01
Drawing By: JAS	Date: 03/08/24	Sheet: 1 of 1
Optex Technologies Inc. 10741 Walker Street., Suite 300, Cypress, CA 90630 Office: (800)877-6656, Fax: (310)214-8644		