


**INSTALLATION NOTES**





1. Set door speeds, force, time delay and verify proper door operation prior to final connection of sensors system.
2. On Knowing Act applications, push/pull activation must be disabled.
3. When using two controls (Sim Pair, Double Egress) ensure sync cable is installed between CU-ESD boards.

**WARNING! - DOUBLE EGRESS**  
When modifying the red & black wires of the Besam Sync Cable for Double Egress Applications, Parameter Group 6 must be selected on both Besam controls to ensure proper safety operation.

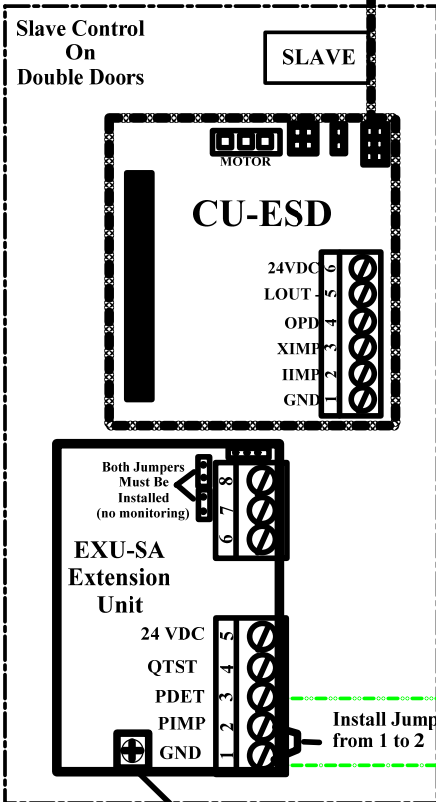


Set Blanking Pot fully clockwise for PDET input active thru 90 degrees.

Sync Cable Connector For Double Doors

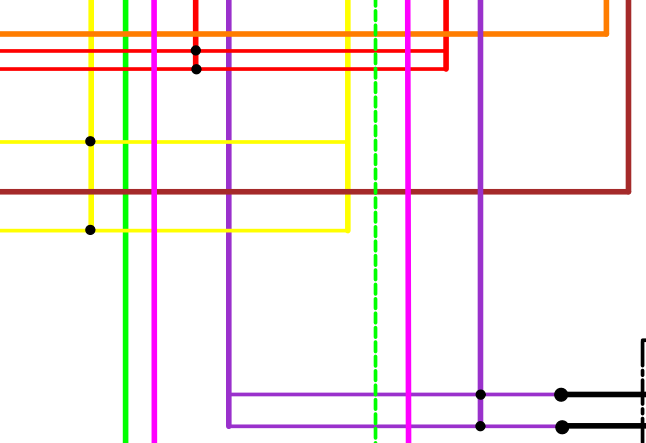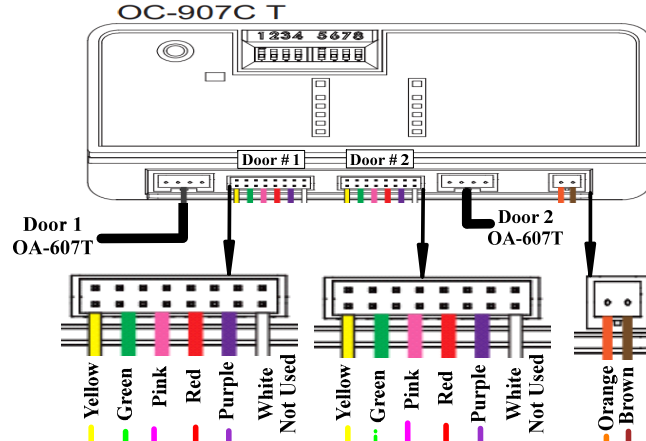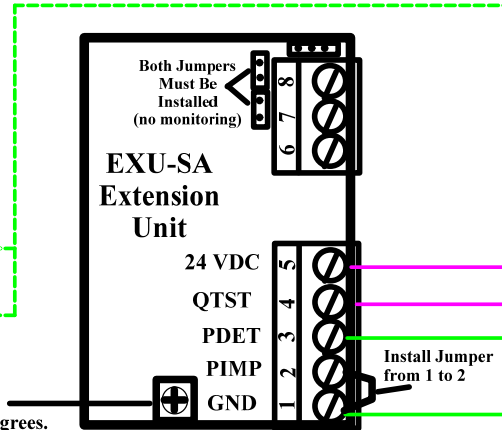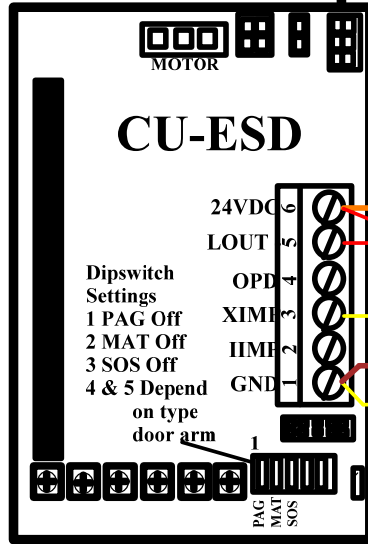

Pink Wires Used ONLY if Monitoring is enabled at Door Controller

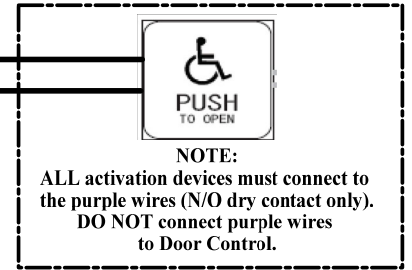

Title: Besam SW-100 /200 Sim Pair Or Double Egress with Elite Pro		Drawing # 01BES100ELIP Rev 1
Drawing By: JAS	Date: 04-18-25	Sheet: 1 of 1
Optex Technologies Inc. 10741 Walker St., Suite 300, Cypress, CA 90630 Office: (800)877-6656, Fax: (310)214-8644		