


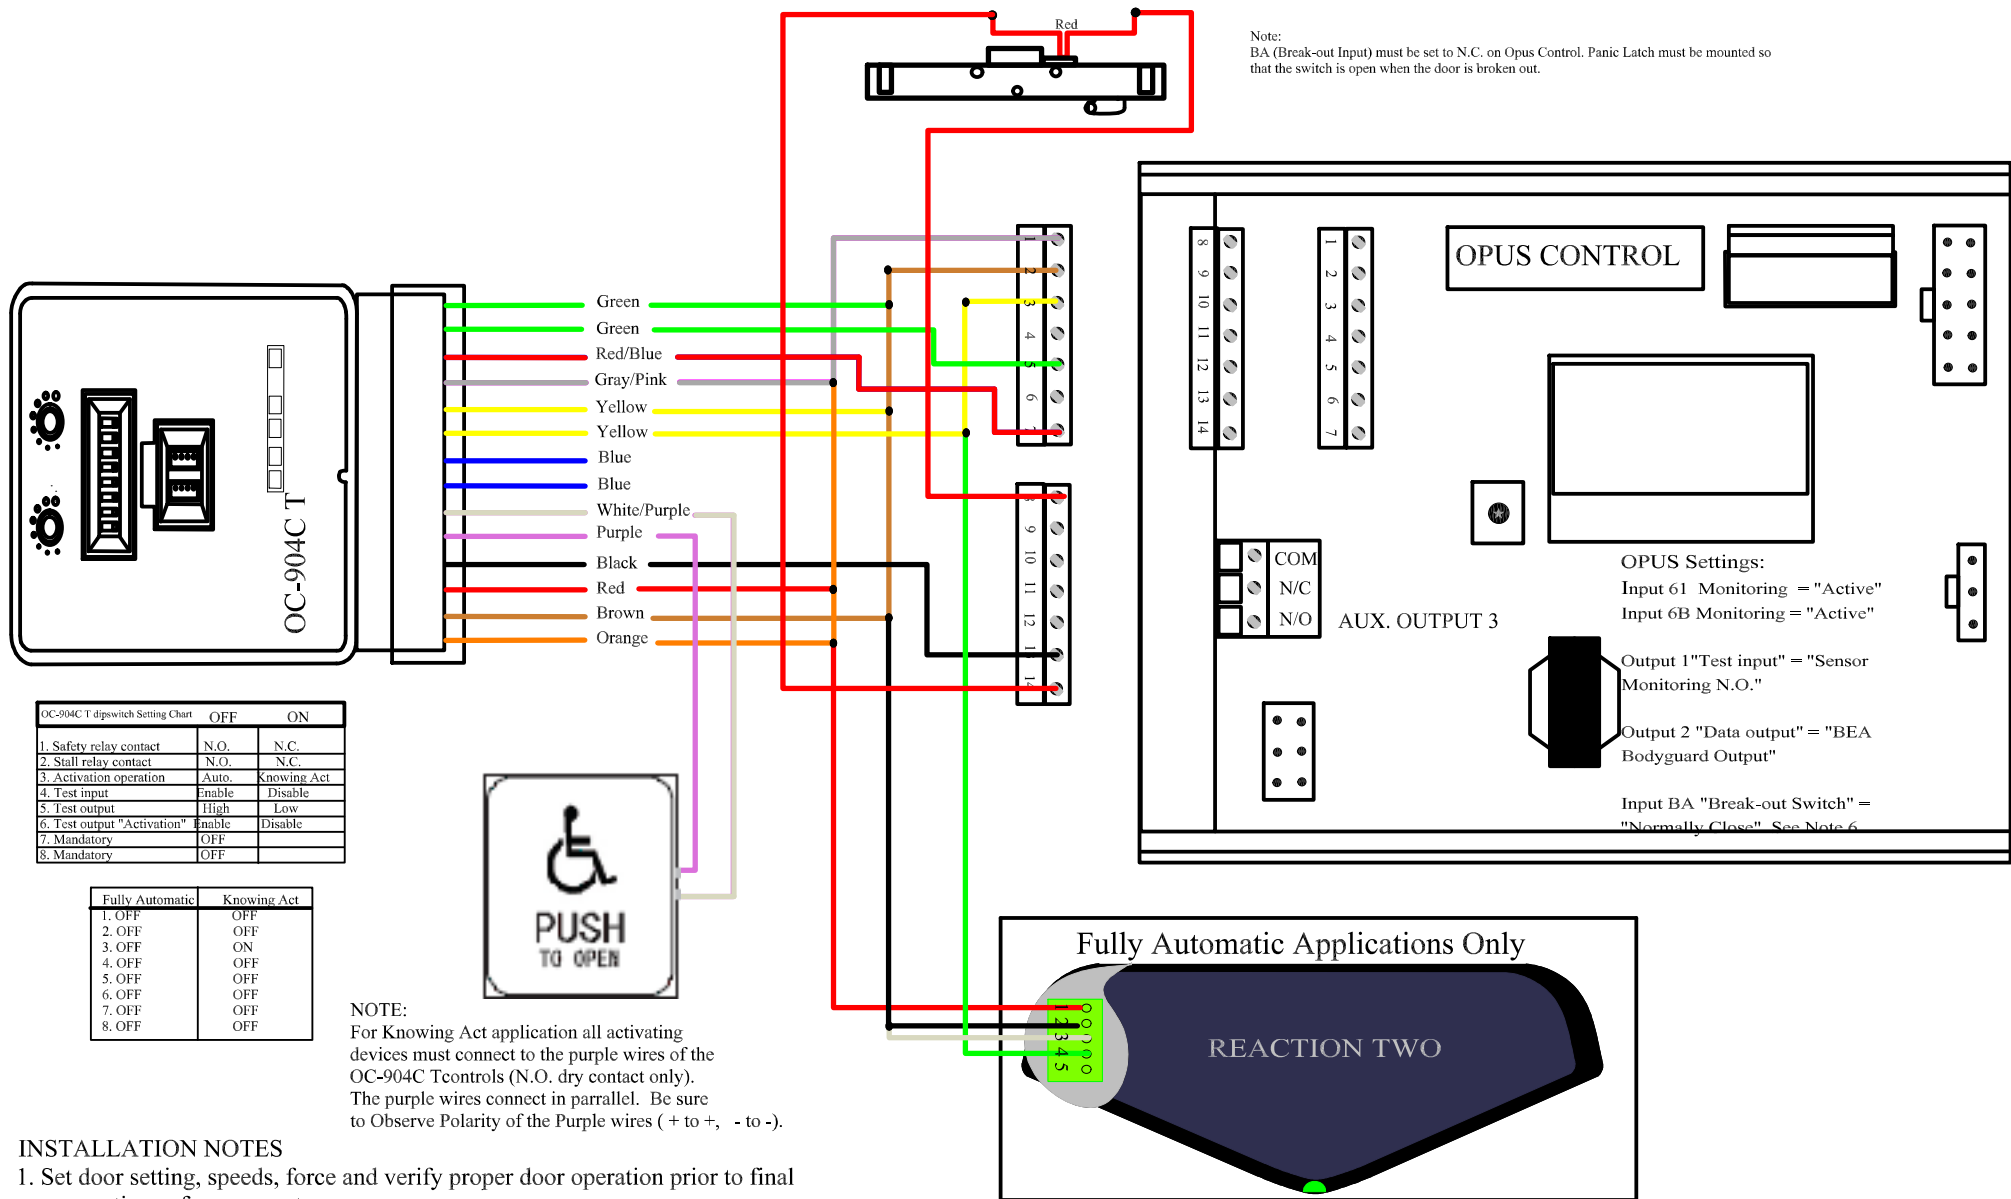

INSTALLATION NOTES

1. Set door setting, speeds, force and verify proper door operation prior to final connections of sensor system.
2. Technician MUST WALK TEST to verify function and detection patterns comply with ANSI/BHMA A 156.10 requirements.
3. On Knowing Act applications, Push/Pull activation must not be used.
4. When using two Opus controls (Sim-Pair or Double Egress) wire each control as shown and add Opus Sim-Pair Harness P/N M-01680.
5. When only one ON/OFF/Hold Open switch is used on pair of doors a jumper is required between both Opus controls, from pin 8 to pin 8.
6. Input BA "Break-out input" is set to default N.C. (Normally Closed). When Panic Latch is required, select Input BA = N.C. (Normally Closed).

Title: 16300330 OPUS Control with Panic Latch
with Elite T

Drawing #
16300330

Drawing By: RNG

Date: 8/15/16

Sheet: 1 of 1

Optex Technologies Inc.
18730 S WILIMINGTON AVE UNIT 100
RANCHO DOMINGUEZ, CA 90220
800-877-6656 FAX 310-898-1098