


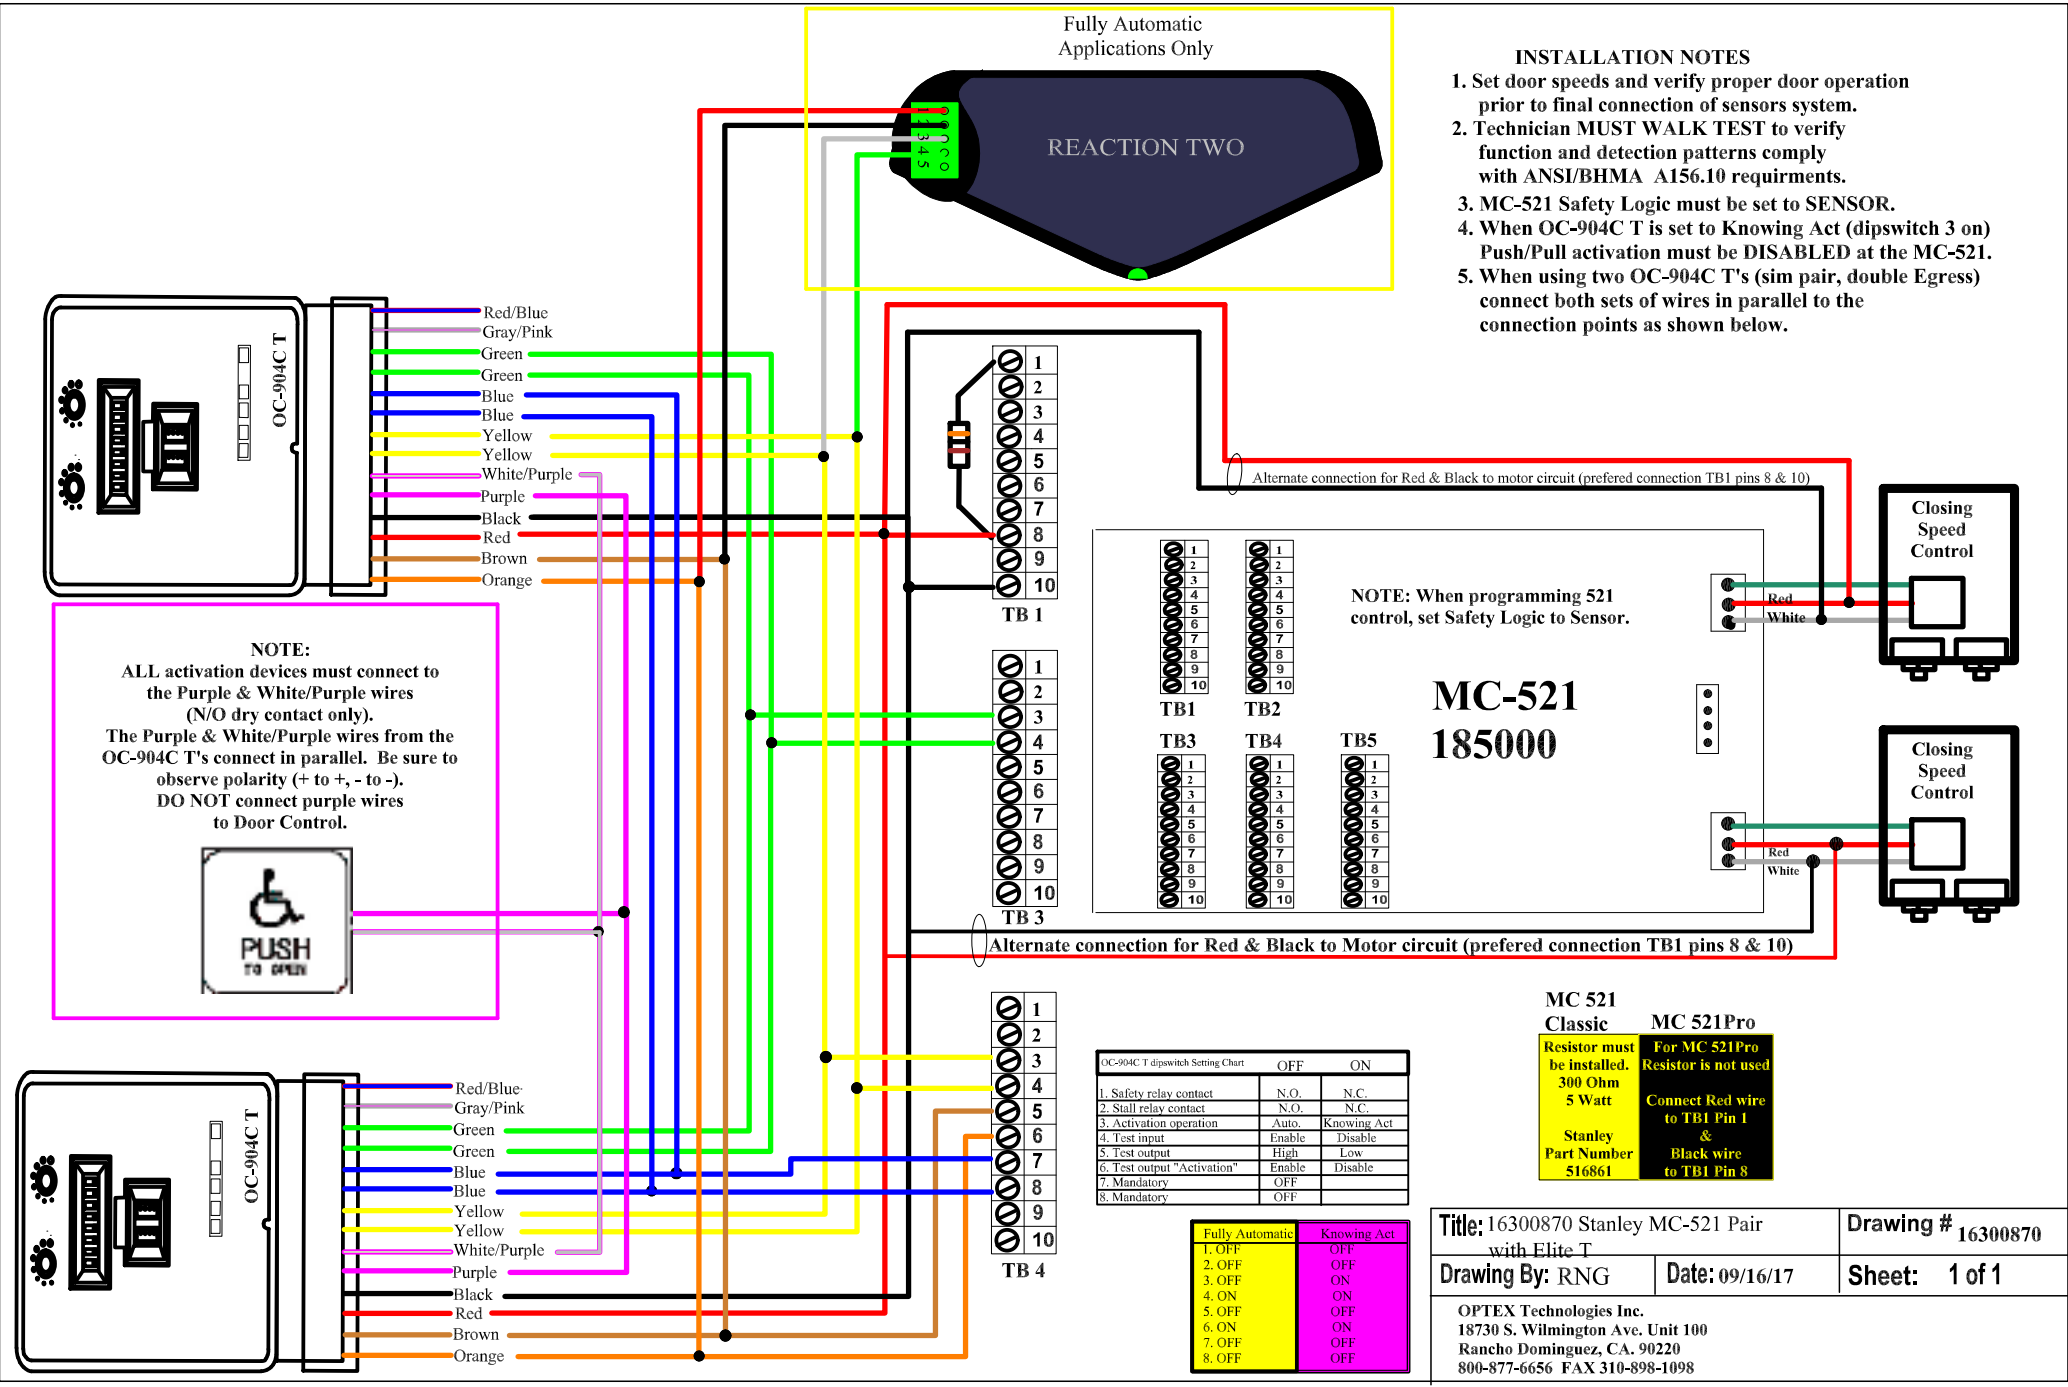

INSTALLATION NOTES

- 1. Set door speeds and verify proper door operation prior to final connection of sensors system.
- 2. Technician MUST WALK TEST to verify function and detection patterns comply with ANSI/BHMA A156.10 requirements.
- 3. MC-521 Safety Logic must be set to SENSOR.
- 4. When OC-904C T is set to Knowing Act (dipswitch 3 on) Push/Pull activation must be DISABLED at the MC-521.
- 5. When using two OC-904C T's (sim pair, double Egress) connect both sets of wires in parallel to the connection points as shown below.

NOTE: When programming 521 control, set Safety Logic to Sensor.

OC-904C T dipswitch Setting Chart		
	OFF	ON
1. Safety relay contact	N.O.	N.C.
2. Stall relay contact	N.O.	N.C.
3. Activation operation	Auto.	Knowing Act
4. Test input	Enable	Disable
5. Test output	High	Low
6. Test output "Activation"	Enable	Disable
7. Mandatory	OFF	
8. Mandatory	OFF	

MC 521 Classic

Resistor must be installed.
300 Ohm
5 Watt

Stanley
Part Number
516861

MC 521Pro

For MC 521Pro Resistor is not used

Connect Red wire to TB1 Pin 1 & Black wire to TB1 Pin 8

Fully Automatic	Knowing Act
1. OFF	OFF
2. OFF	OFF
3. OFF	ON
4. ON	ON
5. OFF	OFF
6. ON	ON
7. OFF	OFF
8. OFF	OFF

Title: 16300870 Stanley MC-521 Pair with Elite T

Drawing By: RNG

Date: 09/16/17

Sheet: 1 of 1

OPTEX Technologies Inc.

18730 S. Wilmington Ave. Unit 100

Rancho Dominguez, CA. 90220

800-877-6656 FAX 310-898-1098