

INSTALLATION NOTES

1. Set door speeds and verify proper door operation prior to final connections of sensors system.
2. Technician MUST WALK TEST to verify function and detection patterns comply with ANSI/BHMA A156.10 requirements.
3. Stanley Control TB1 pins 6 & 8 must be connected to the breakout status switch or be jumpered together.
4. Stanley Control switch S-1 set to L for Low energy Magic-Force singles. Set to H for all Magic-Swing and all Dual Magic-Force.


NOTE:

ALL activation devices must connect to the Purple & White/Purple wires (N/O dry contact only). The Purple & White/Purple wires from the OC-904C T's connect in parallel. Be sure to observe polarity (+ to +, - to -). DO NOT connect purple wires to Door Control.



OC-904C T dipswitch Setting Chart		
	OFF	ON
1. Safety relay contact	N.O.	N.C.
2. Stall relay contact	N.O.	N.C.
3. Activation operation	Auto.	Knowing Act
4. Test input	Enable	Disable
5. Test output	High	Low
6. Test output "Activation"	Enable	Disable
7. Mandatory	OFF	
8. Mandatory	OFF	

Fully Automatic	Knowing Act
1. OFF	OFF
2. OFF	ON
3. OFF	ON
4. ON	ON
5. OFF	OFF
6. ON	ON
7. OFF	OFF
8. OFF	OFF

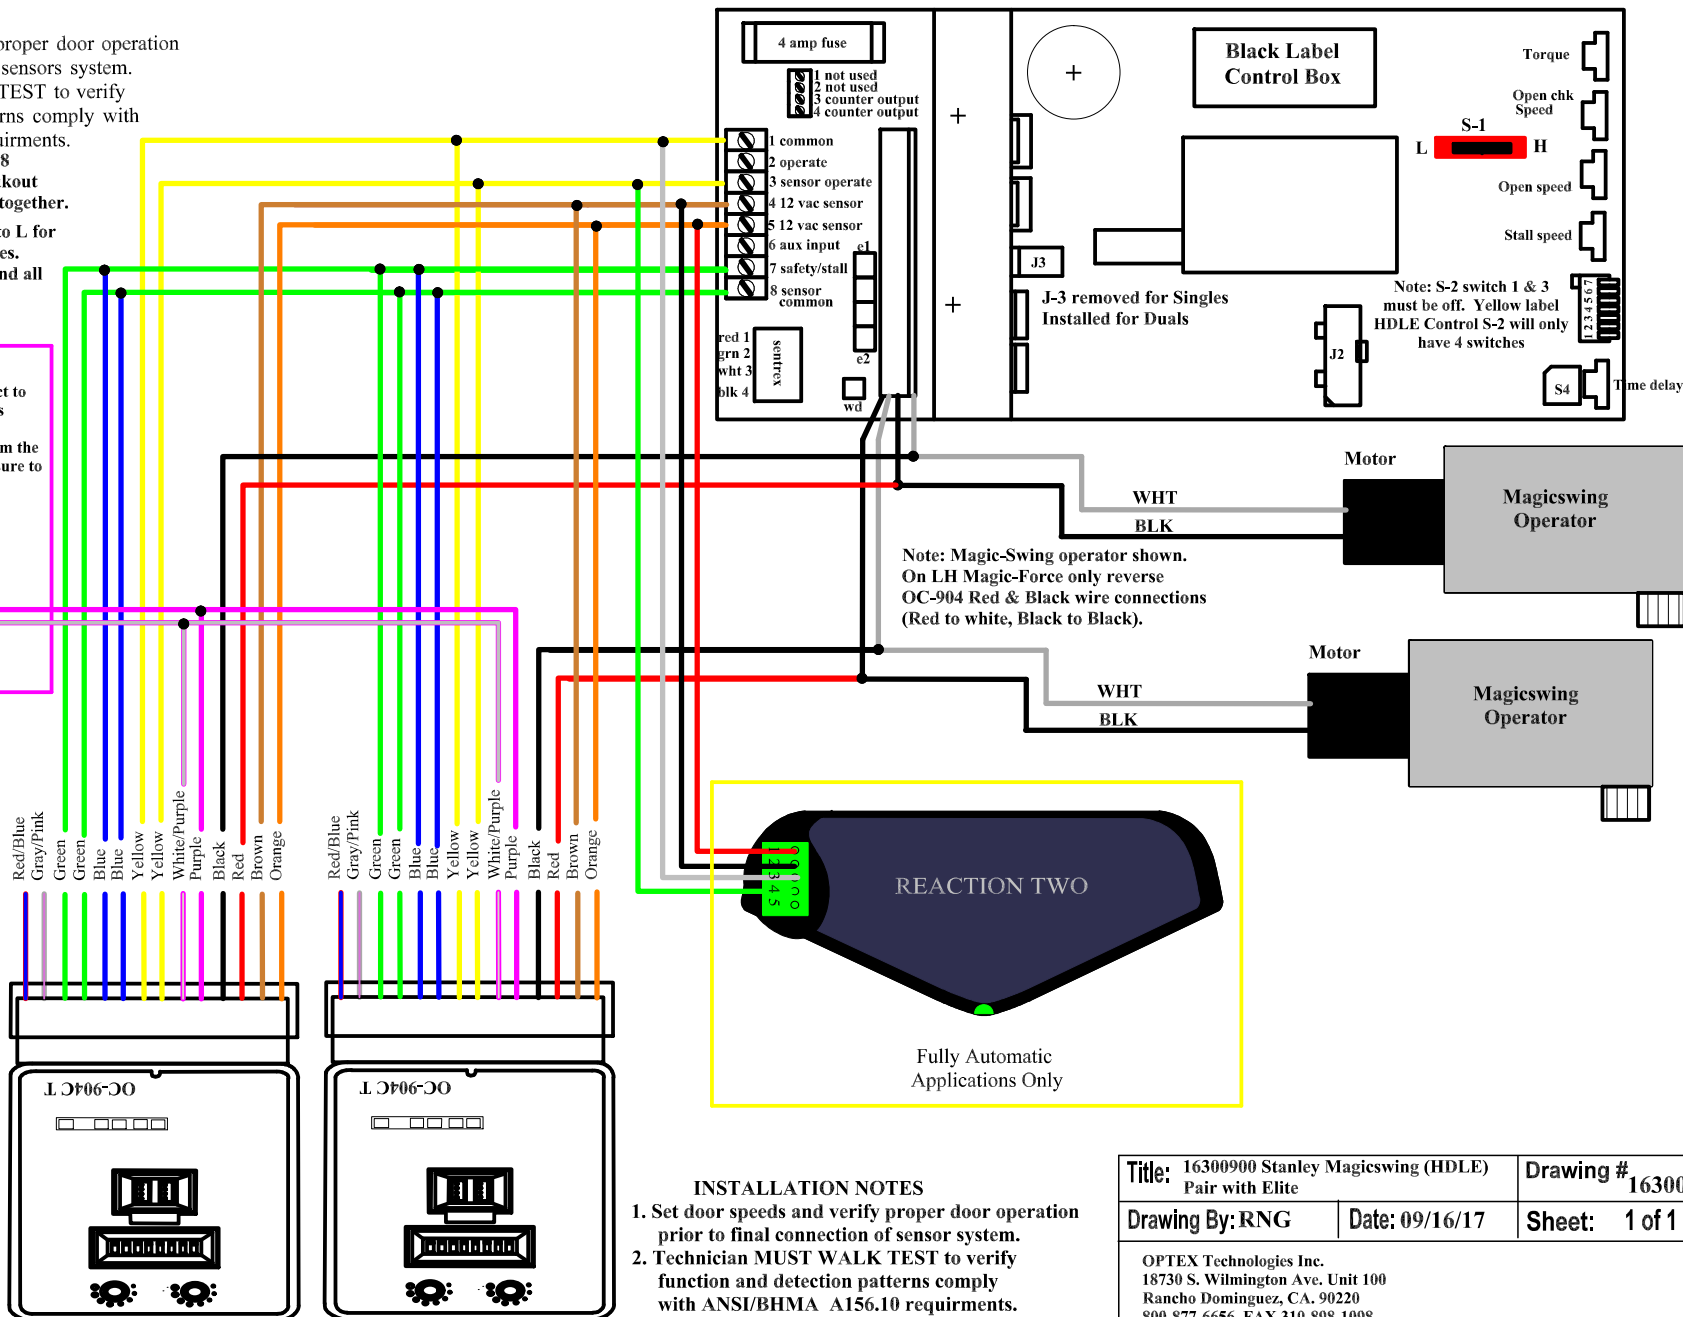

INSTALLATION NOTES

1. Set door speeds and verify proper door operation prior to final connection of sensor system.
2. Technician MUST WALK TEST to verify function and detection patterns comply with ANSI/BHMA A156.10 requirements.

Title: 16300900 Stanley Magicswing (HDLE) Pair with Elite		Drawing # 16300900
Drawing By: RNG	Date: 09/16/17	Sheet: 1 of 1
OPTEx Technologies Inc. 18730 S. Wilmington Ave. Unit 100 Rancho Dominguez, CA. 90220 800-877-6656 FAX 310-898-1098		