



Interior i-oneX T

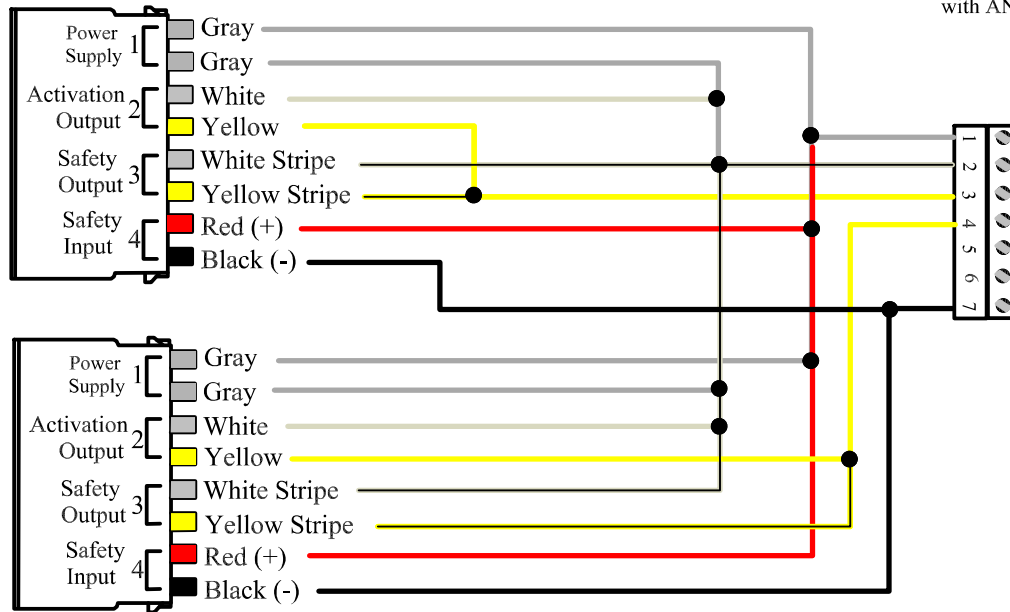


Exterior i-oneX T

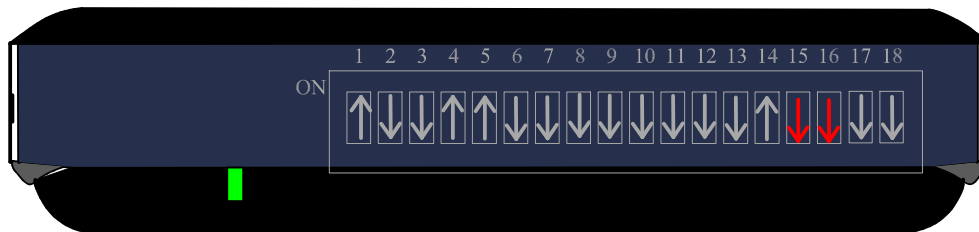

Notes:

1. Verify proper door operation prior to final connection of sensors.
2. Enable monitoring see OPUS CONTROL SETTINGS below.
3. Set i-oneX T dipswitch 15 OFF (down) Safety output "N.O."
4. Dipswitch 16 should be set to OFF (down) "High" for proper monitoring operation.
5. Set exterior i-oneX T sensor, dipswitch 4 ON.
6. Technician must perform a field test to verify substantial compliance with ANSI/BHMA A156.10 Section 8.

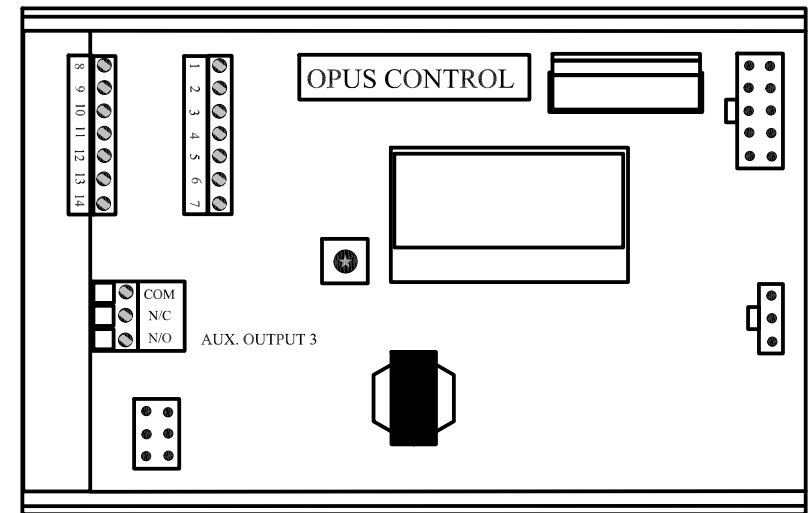

OPUS CONTROL SETTINGS:

1. Output 1, should be set to "Sensor Monitoring (N.O.)"
2. 61 Monitoring, should be set to "ACTIVE"
3. 62 Monitoring, should be set to "ACTIVE"

Title: 16300180 NABCO OPUS with i-oneX T		Drawing # 16300180
Drawing By: RNG	Date: 7/31/16	Sheet: 1 of 1
OPTEX Technologies Inc. 18730 S. Wilmington Ave. Unit 100 Rancho Dominguez, CA. 90220 800-877-6656 FAX 310-898-1098		