




Volume
5 levels




Push-to-Talk - press and hold button while you talk, blue LED is on. Mic and blue LED off when you release button.




Talk Lock - press button once, hands-free operation, blue LED is on, **Mic is on**. Press button again to switch off.

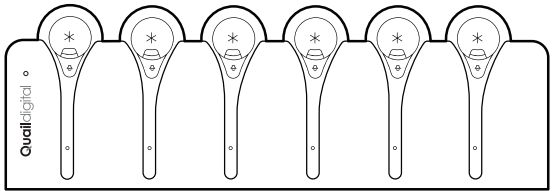





LED slow pulses - charging




LED solid - fully charged

**BEEP
BEEP
BEEP**

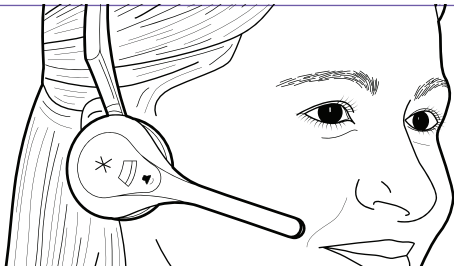





3 beeps
battery going flat

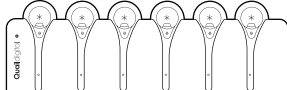



Place headset in charger

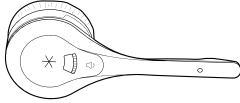
Headset LED fast flash - requires registering

Hold headset to registration point



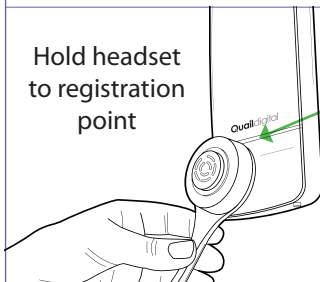


LED flashes




LED solid - registered, ready to use


Registering 3 headsets or more?
Reset system first...

Press 15 seconds







LED flashes while resetting




LED slow pulse green, ready to register headsets

Hold headset to registration point

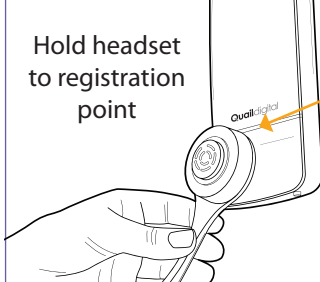





If LED shows red



repeat process after 30 secs, until LED goes solid green

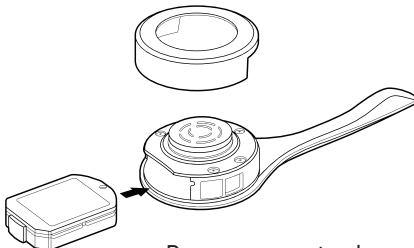

Remove cover to change battery

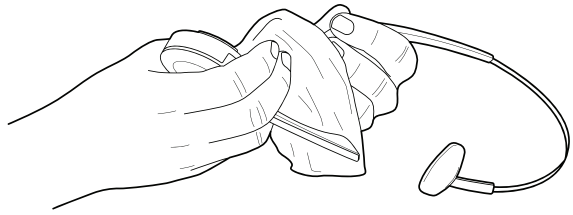

Clean with antibacterial dry wipes daily*

To view the Pro10 User Guide video, please visit:
<https://quaildigital.com/product/pro10>

***Recommendation:** clean headsets, headbands, neckbands, chargers and hangers daily or as your infection control guidelines. Clean with any antibacterial dry wipe which does not contain bleach or alcohol as either may cause premature wear to the headset housing; check the list of ingredients before use.