



FootGuardian

Patent # US 7568708

Installation Instructions:


Installation is easy and requires no more than five minutes. The pallet jack remains upright and resting on its wheels. All wheels remain on the pallet jack during installation. The pallet jack should be in a lowered position.



Tools Needed:

- 9/16" deep well socket wrench
- flat-head screwdriver
- measuring tape or a 3/4" block of material.

Parts List

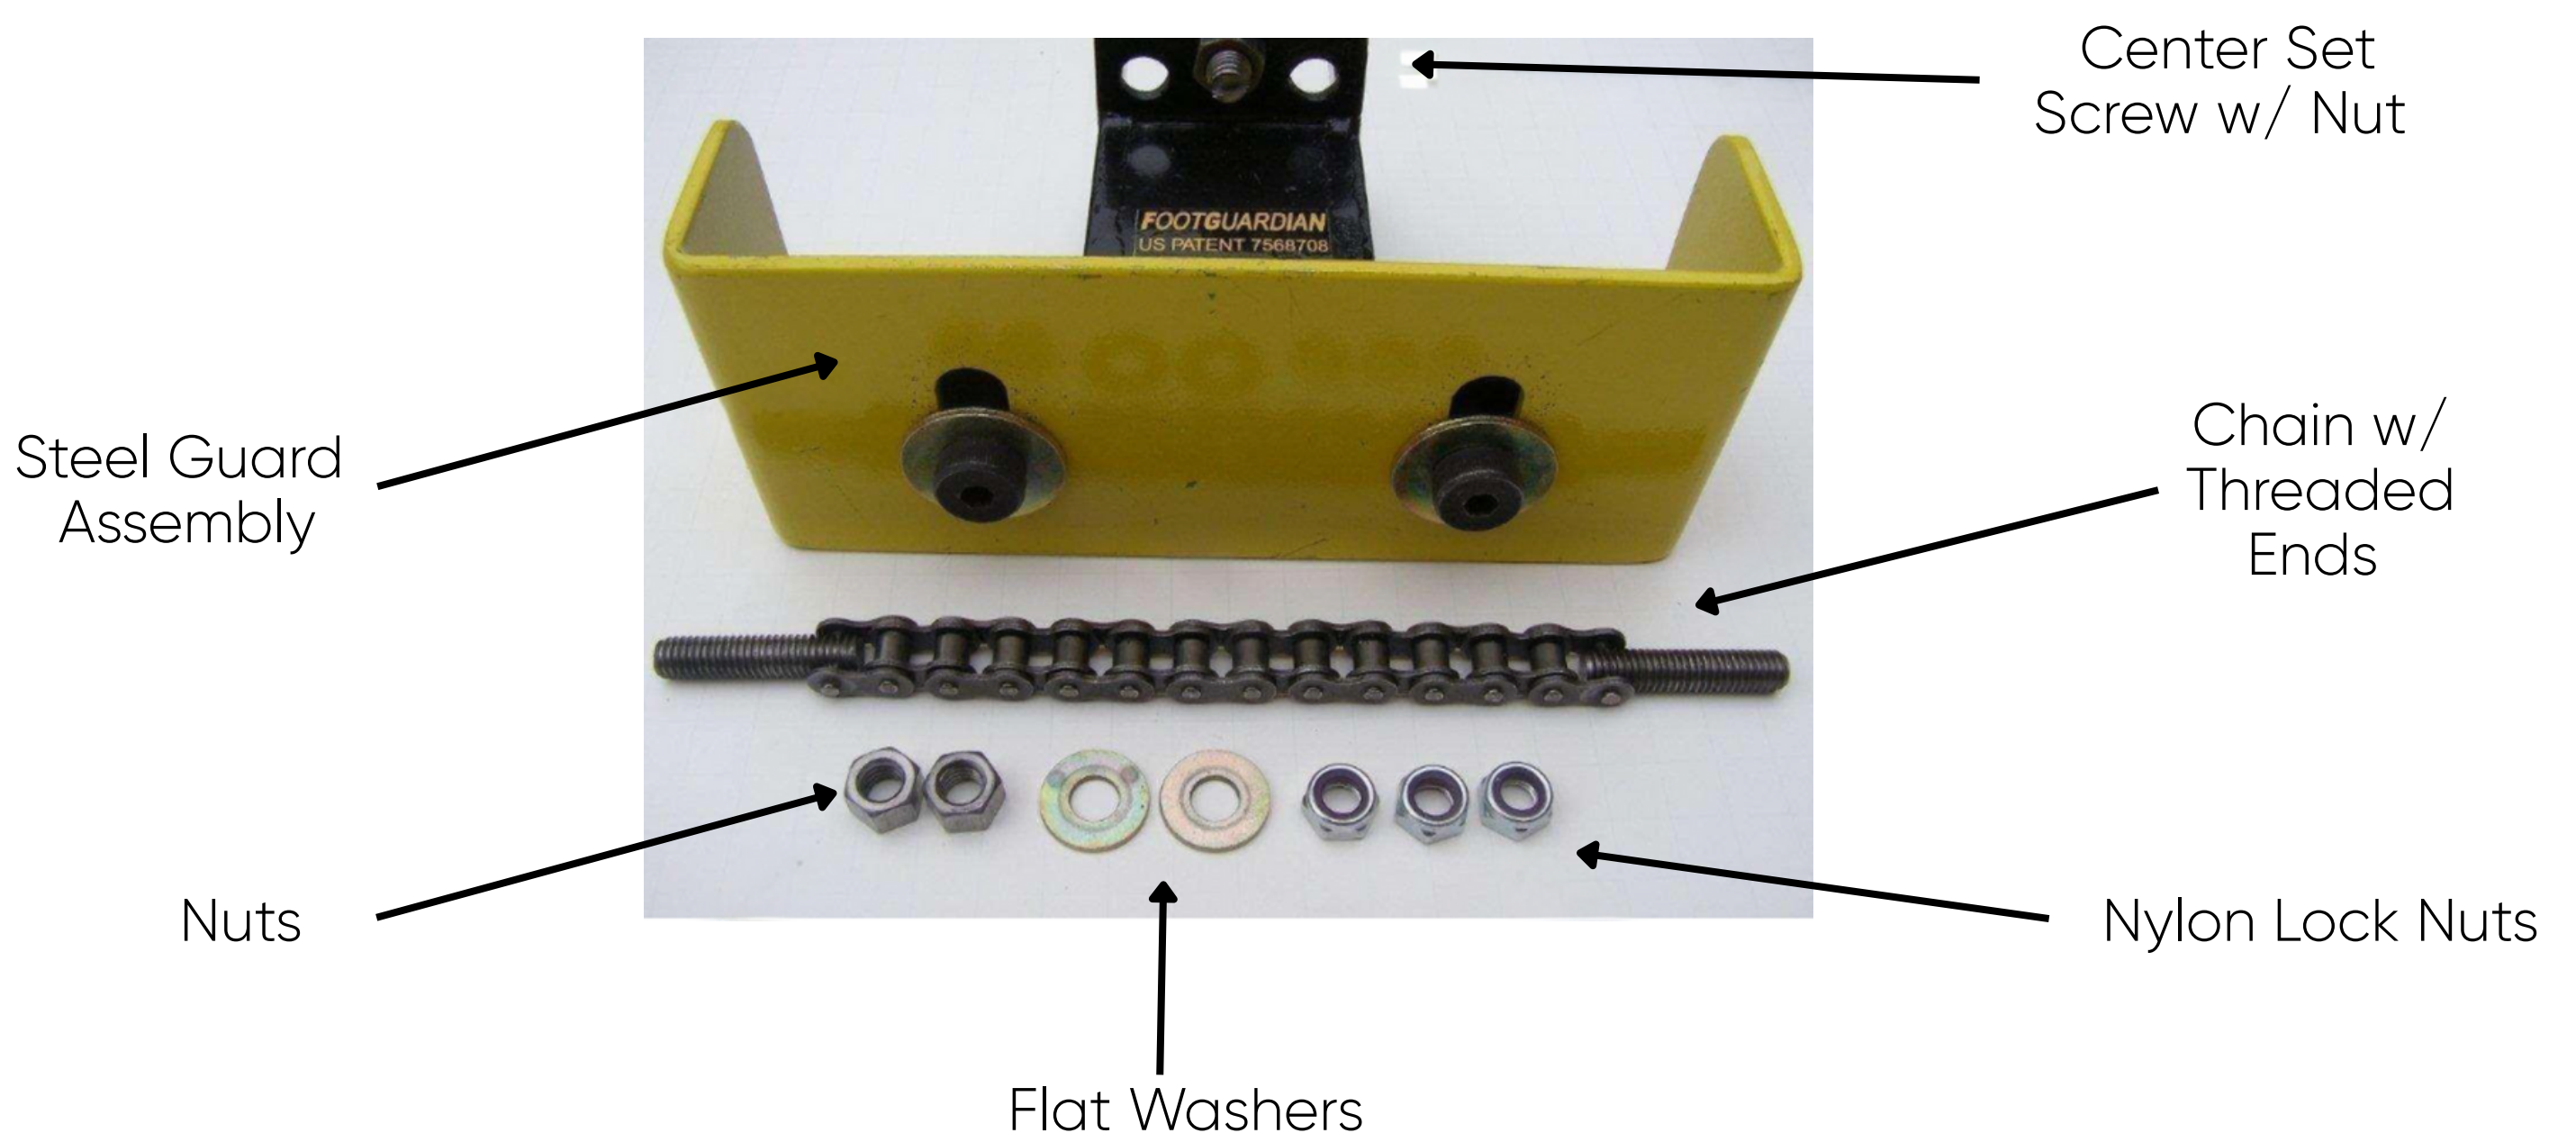

Installation

1

Attach one end of the chain to the guard (left or right of the center set screw), using a flat washer and nut.



2

Feed the chain around the pallet jack post as you align the guard with the axle.



3

Attach the other end of the chain to the guard using the other flat washer and 9/16" nut.



4

With the pallet jack lowered, back out center set screw and evenly tighten the left and right nut until you reach the recommended ground clearance of 1/2" to 3/4". There should be an equal amount of thread showing on both sides. The guard will be free to move. If needed, add flat washers to chain bolts to increase height of guard.

If the flat washers do not provide enough clearance, it will be necessary to remove a link from the chain. Using a chainbreak tool for a size 420 chain, remove a link and put the chain back together with either a masterlink or a pin.

5 With a flat-head screw driver, adjust the center set screw touching the post and then back it off one turn (slightly away from the pallet jack post). Then install and tighten the nut to keep center set screw in place.



6 Place a nylon lock nut on each of the two chain bolts and center screw. Tighten against the first nut in order to keep everything tightened. Do not tighten the first nuts on the chain bolts again.

7 When completed, the guard will be hanging from the chain with some freedom of movement between the black frame and the post. Notice: The frame is not totally tightened against the post

By design, the yellow plate rests on shoulder bolts, and by design it does not get tightened.

Please note:

- Due to continuous product improvement, specifications are subject to change without notice or obligation.
- Some pumps on manual pallet jacks may be narrow and to reduce chain slack, a link or two may need to be removed.