

How to check and replace the pressure sensor connection

When should you check the pressure sensor connection?

When the machine gives sensor error or 0 mbar

How to check the pressure sensor connection?

Step 1: Open the machine

Step 2: The pressure sensor is located in the machine next to the display or at the back

Step 3: Old versions can be broken in two. If this is the case. Immediately replace it with the upgraded pressure sensor connector



Step 4: Check if there is any pollution in the hole of the sensor and clean if necessary


Step 5: Check if the cable is well connected to the connector. Push gently to secure it

Step 6: Perform three empty test to see if it solved the problem. If not, replace the pressure sensor connector

How to replace the pressure sensor connection?

Step 1: Order a new pressure sensor connector if needed by [mailing Oxipack service](#)

Step 2: Disconnect the cable

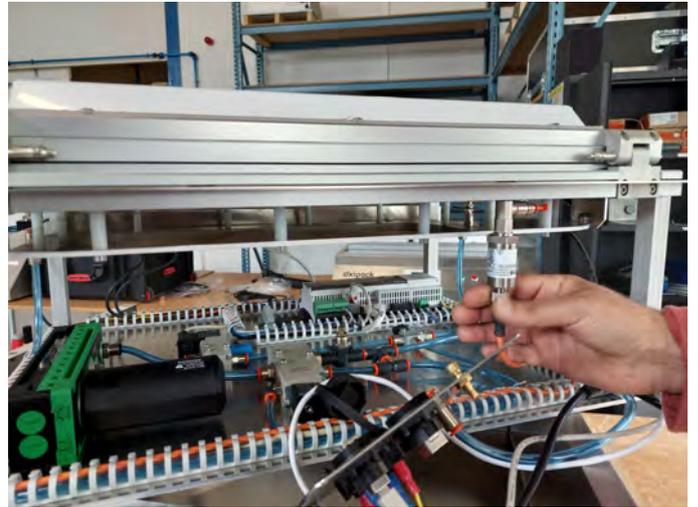

Step 3: Screw off the old pressure sensor

Step 4: Screw on the new pressure sensor and connect the cable

Step 5: Perform three empty tests to check if it solved the problem, if not, [contact Oxipack support](#)

