

INSTALLATION INSTRUCTIONS

DF/ED ICEMAKER ADAPTER KIT FOR FOLLETT HORIZON SERIES ICEMAKERS

⚠ WARNING:

Disconnect power to the unit before installing the adaptor following all lockout/tag out procedures established by the user. Verify that all the power is off to the unit before performing any work.

Failure to comply could result in serious injury, death or damage to the equipment.

⚠ WARNING:

All ice baffle plates and bin stats, if included or recommended in this kit, must be installed as directed in this manual or the equipment manufacturer's instructions.

Failure to comply could result in serious injury, death or damage to the equipment.

⚠ WARNING:

All of the attachment screws and plates must be installed as directed in this manual.

Failure to comply could result in serious injury, death or damage to the equipment.

1. Remove the plastic hopper lid(s) from the top of the dispenser.
2. Install soft ice agitator kit (sold separately) into the dispenser.

NOTE: This soft ice agitator kit is required for proper dispenser operation using “compressed” or “soft” ice types. Failure to install this kit may result in undesirable beverage quality.

3. Unpack and inspect the adapter kit.
4. Assemble the baffle assembly onto the adapter lid as shown in Figure 1.

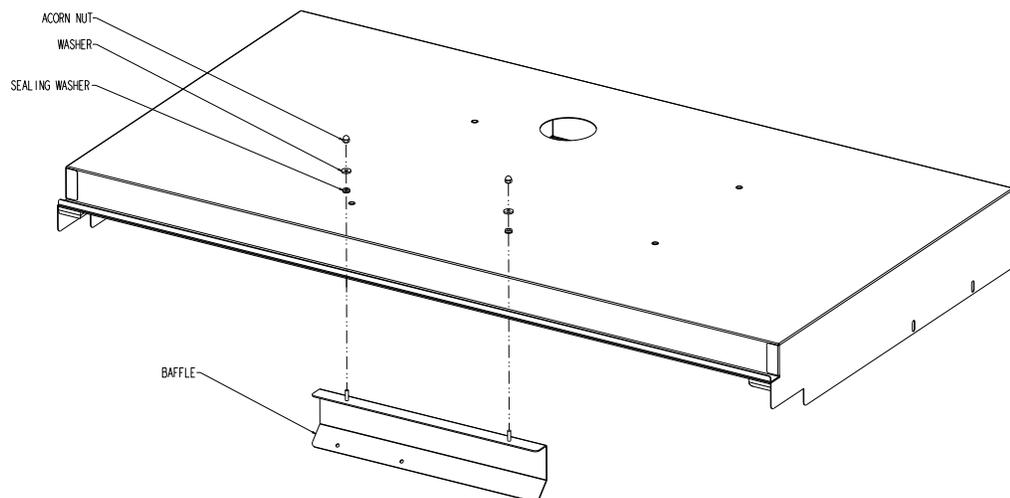


Figure 1.

5. Set and secure adapter lid onto the dispenser as shown in Figure 2.

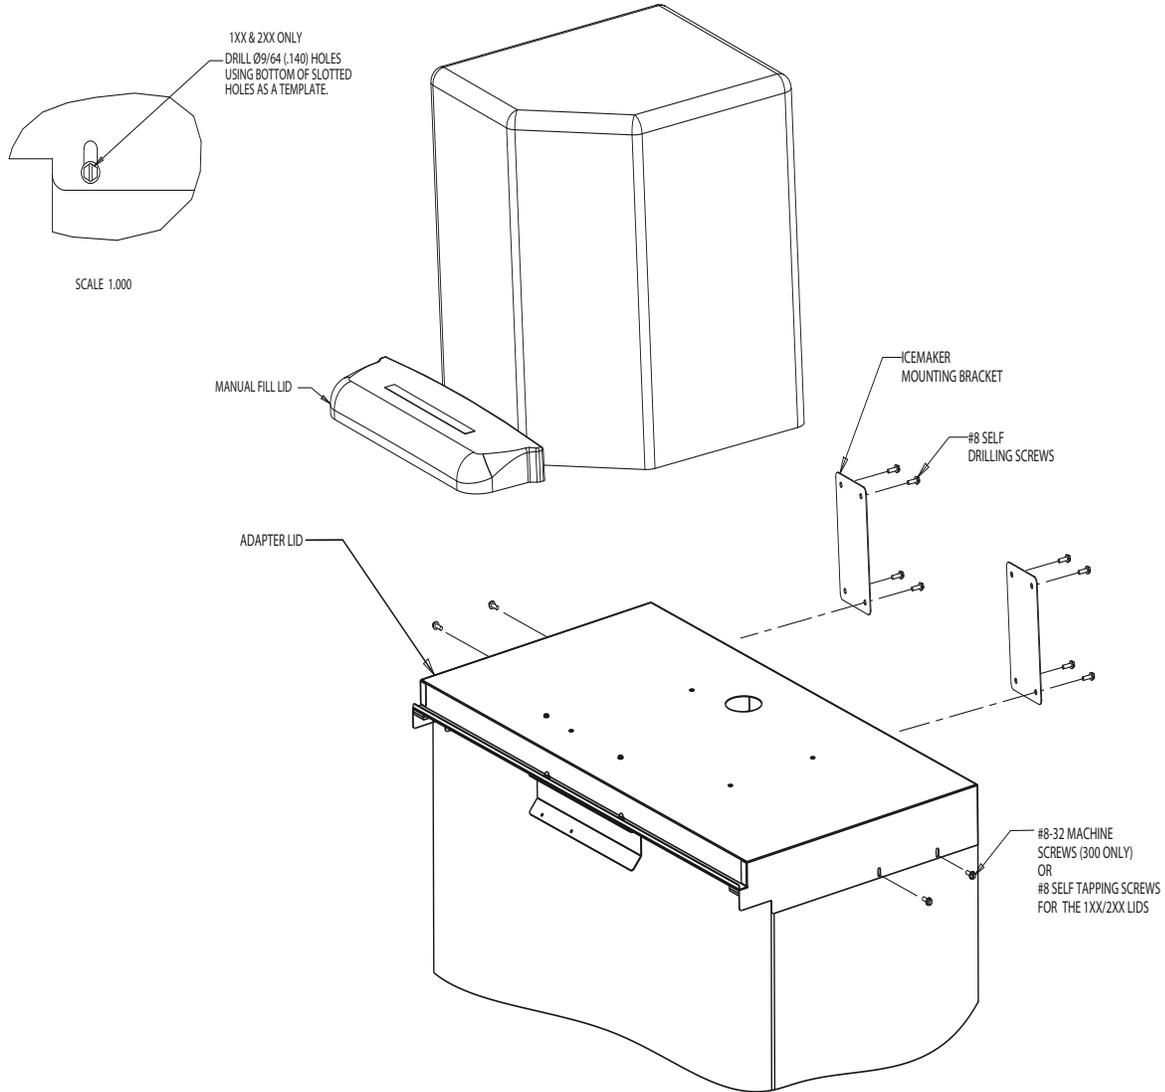


Figure 2. Dispenser Assembly

6. Remove merchandiser from dispenser by lifting up then pulling out. Set merchandiser aside.
7. Adjust the automatic agitator timing settings (located in the dispenser's electrical box) to 2 seconds ON, 3 hours OFF. See Figure 3.


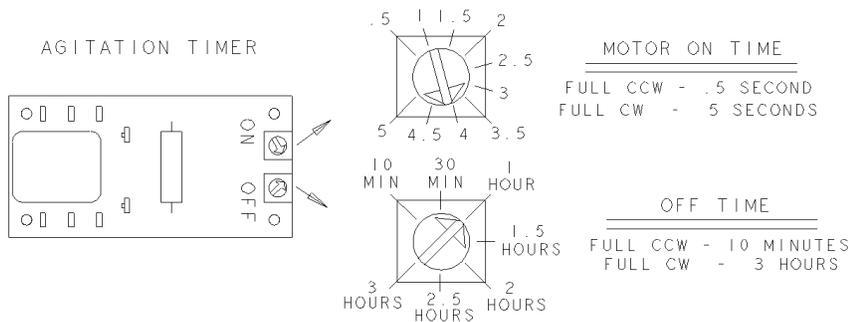


Figure 3.


8. Re-install the merchandiser back onto the dispenser.
9. Set icemaker onto the adapter kit. See Figure 4 and Figure 5 for location dimensions.

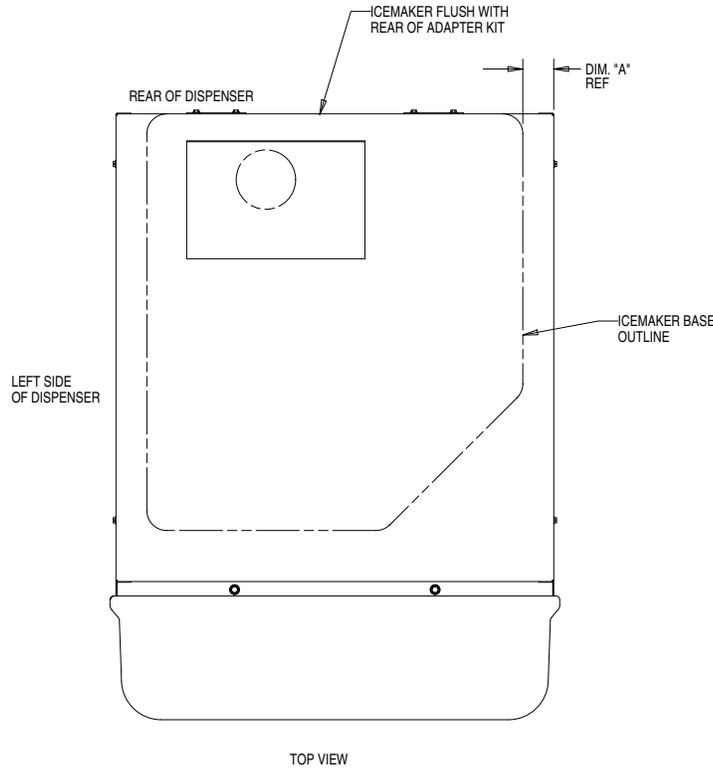

DISPENSER	ICEMAKER	DIM "A"
150	HCD1000RN	1-9/16
150	HCD1400RN	1-9/16
175	HCD1000RN	2-13/16
175	HCD1400RN	2-13/16
2XX	HCD1000RN	5-9/16
2XX	HCD1400RN	5-9/16
2XX	HCC1400AW	3/8
2XX	HCC1000AW	1-7/8

TOP VIEW
 ICEMAKER MOUNTING DETAILS
 THESE DIMENSIONS ARE TO AID IN INSTALLATION. ACTUAL LOCATION MAY VARY.

Figure 4. ED/DF 1XX and 2XX

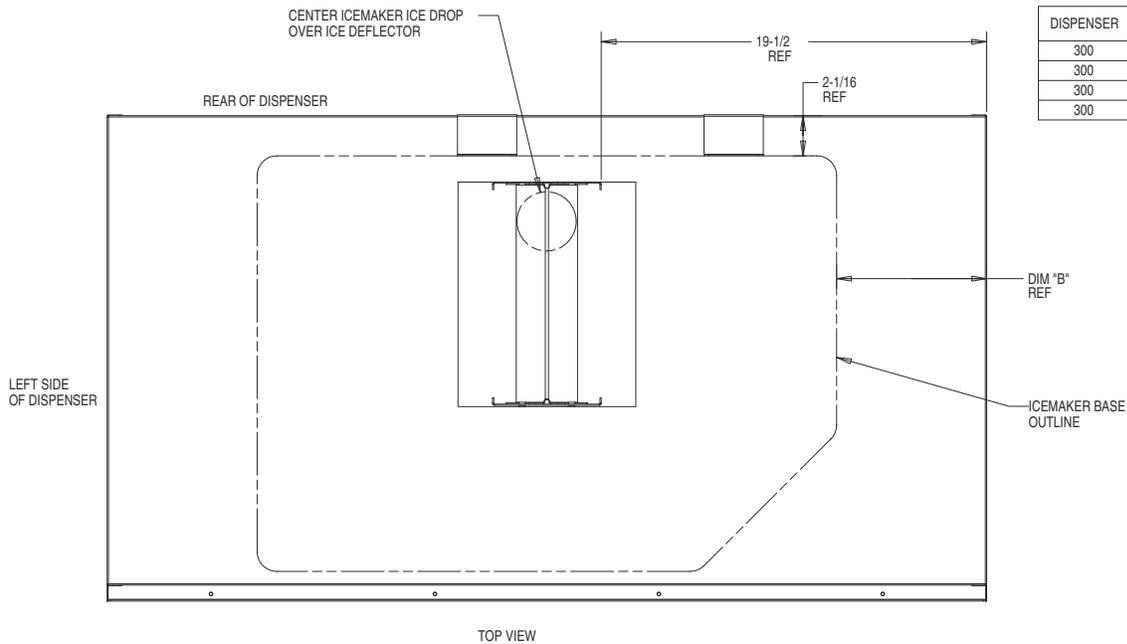

DISPENSER	ICEMAKER	DIM "B"
300	HCD1000RN	9-5/16
300	HCD1400RN	9-5/16
300	HCC1000AW	7-5/8
300	HCC1400AW	9-1/8

TOP VIEW
 ICEMAKER MOUNTING DETAILS
 THESE DIMENSIONS ARE TO AID IN INSTALLATION. ACTUAL LOCATION MAY VARY.

Figure 5. ED/DF300

NOTE: FOR ED/DF300 ONLY - Be sure to center the ice drop opening of the icemaker directly over the deflector plate. Failure to do so may result in un-even hopper fill.

10. ED/DF300 only – Tighten the four (4) ice deflector mounting screws.

11. Follow the icemaker manufacturing instructions to complete the installation of the icemaker.
12. Install icemaker bin thermostat just underneath ice deflector, see Figure 6 for location area.

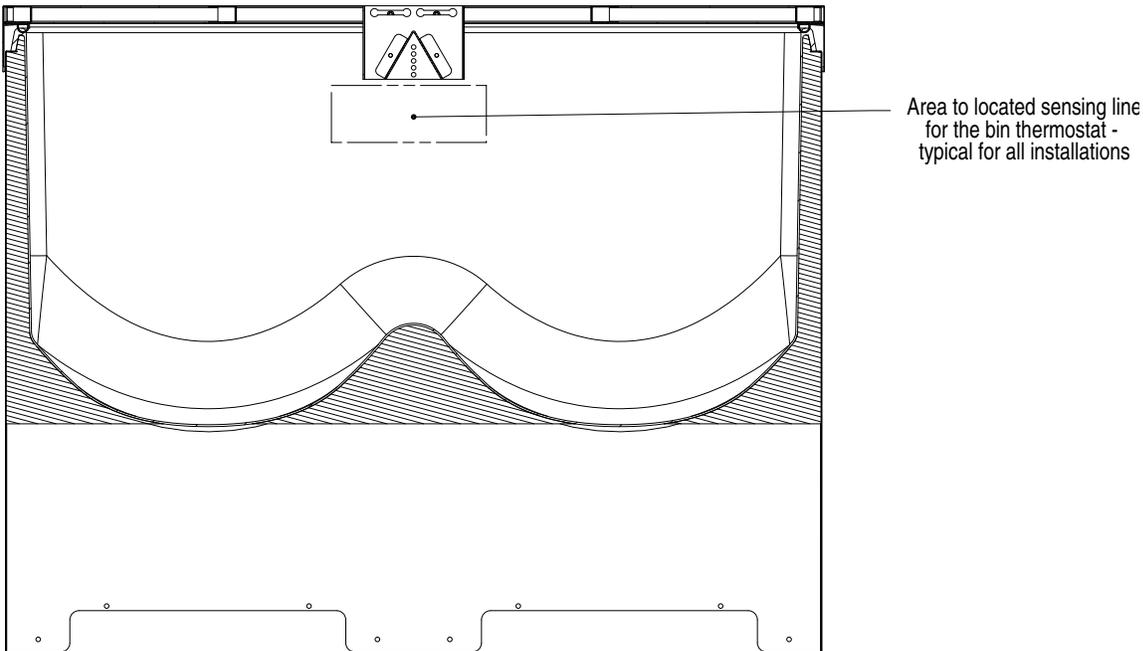


Figure 6.

NOTE: Failure to install a bin thermostat correctly may result in inadequate hopper fill, ice dispense issues, hopper “ice bridging”, and/or possible damage to the icemaker.

13. Apply a continuous bead of NSF International (NSF) listed silastic sealant (Dow 732 or equivalent) to seal the ice maker to the top of the adapter lid. All excess sealant must be wiped away immediately.
14. Install the ice maker mounting brackets on the back of the ice maker by drilling 9/64” diameter holes, using one of the two supplied brackets as a template, into the rear of the ice maker and the rear of the adapter lid. **Use extreme care no to drill into any ice maker components!** Secure the icemaker to the adapter lid using the #8 self drilling and mounting brackets provided.
15. Re-connect electrical power to the dispenser.
16. Verify function and operation of both icemaker and dispenser.