
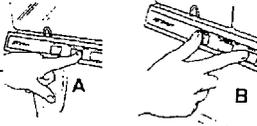
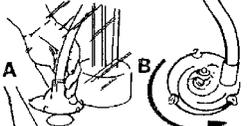
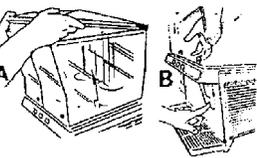
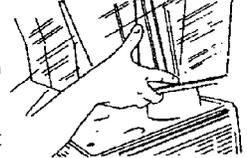
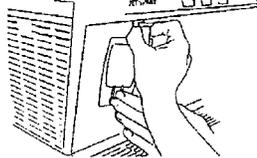
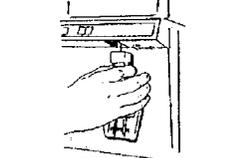
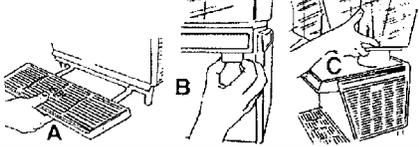
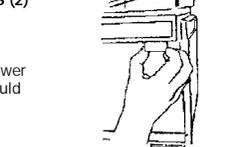
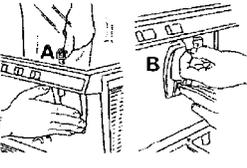
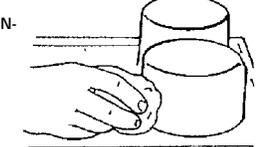
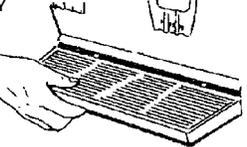
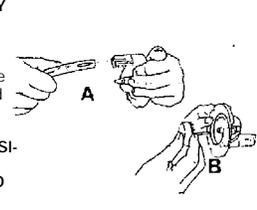
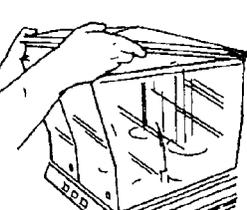


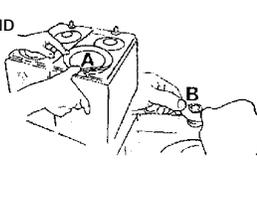

2401 N. Palmer Drive Schaumburg, IL 60196 1-800-344-4600
CLEANING INSTRUCTIONS TJ3/C-TJ3

Recommended cleaning cycle is one week.

<p>1 CONTINUE TO DISPENSE BEVERAGES UNTIL BOWL IS SUFFICIENTLY DRAINED.</p> <p>TURN OFF ALL UNIT SWITCHES, REFRIGERATION AND SPRAY.</p> <p>DRAIN REMAINING BEVERAGE FROM BOWL.</p> 	<p>9 TURN BOWL UPRIGHT, DROP PUMP HOUSING INTO BOWL WITH THE THREE TABS ON BOWL BASE GOING THROUGH THE CUTOUTS IN THE PUMP. TURN PUMP ASSEMBLY COUNTER CLOCKWISE TO LOCK DOWN IN BOWL.</p> 
<p>2 LIFT OFF BOWL COVER.</p> <p>REMOVE PUNCH TUBES.</p> <p>Push handle back until it stops. This will release tube which then can be lifted out.</p> 	<p>10 REPLACE BOWL ONTO BASE</p> <p>Slide bowl over cooling domes and press down in one motion. Be careful not to wrinkle the gaskets as it will result in the bowl leaking.</p> <p>BE SURE BOWL GASKETS ARE WET BEFORE MOUNTING BOWL.</p> 
<p>3 REMOVE PUSH HANDLES.</p> <p>Push handle back until it stops, grasp the white clips and squeeze. Pull handle straight down.</p> 	<p>11 REPLACE PUSH HANDLES.</p> <p>Push handles straight up through opening provided. Handle is installed when clips into place.</p> 
<p>4 REMOVE...</p> <p>Drip Tray Assembly . Condensate Drains. Remove Bowl.</p> 	<p>12 REPLACE CONDENSATE DRAINS (2)</p> <p>Push straight up in hole provided. Be sure the lower open slot faces the front panel of unit. Drain should snap into place.</p> 
<p>5 DISASSEMBLE BOWL</p> <p>Remove pump assemblies. Check to see that the impeller spins freely. If not remove and clean. Remove spray tubes from pump assemblies. Remove front and rear gaskets.</p> 	<p>13 REPLACE PINCH TUBES</p> <p>Wet the tube. Push handle back and insert tube through spout hole inside the bowl. Tube end should pass below end of spout with no kinks or wrinkles. With handle pushed back grasp end of tube and pull down. This will seat the tube in the spout.</p> 
<p>6 THOROUGHLY CLEAN PARTS IN WARM WATER USING A MILD NON-ABRASIVE DETERGENT, RINSE PARTS THOROUGHLY. WIPE COOLING DOME AND SURROUNDING AREA WITH A DAMP CLOTH.</p> <p>CAUTION: ABRASIVE CLEANERS WILL SCRATCH THE PLASTIC PARTS.</p> 	<p>14 REPLACE DRIP TRAY ASSEMBLY</p> 
<p>7 RE-ASSEMBLE PUMP ASSEMBLY</p> <p>Lock spray tube into pump housing. Be sure tube is aligned to the proper position and has snapped into place. Re-install impeller and pin.</p> <p>BE SURE IMPELLER FINS ARE IN THE UP POSITION AND THE MAGNET SPINS FREELY BEFORE PUTTING PUMP ASSEMBLY BACK INTO BOWL.</p> 	<p>15 REFILLING THE BOWL</p> <p>Refill the bowls, be sure to always mix the water and concentrate in a separate container first.</p> <p>REPLACE THE BOWL COVER</p> 
<p>8 TURN BOWL UPSIDE DOWN IN SET GASKET INTO GROOVE AND PRESS INTO PLACE.</p> <p>Wetting gasket eases installation.</p> <p>RE-INSTALL FRONT SPOUT GASKETS OVER THE OUTLET SPOUTS.</p> 	<p>16 TURN ON REFRIGERATION SWITCH (A). TURN ON SPRAY SWITCHES (B). NEVER RUN SPRAY PUMPS IN A EMPTY BOWL.</p> <p>BEVERAGE SHOULD BE AT PROPER SERVING TEMPERATURE IN ABOUT 2 HRS.</p> <p>TO INSURE MAXIMUM EFFICIENCY MACHINE SHOULD BE LEFT ON 24 HRS. A DAY.</p> 