

INSTALLATION INSTRUCTIONS

Landmark - Retrofit Static Bar and Dynamic Bar

The following instructions describe how to replace the dynamic and static bar.



CAUTION - Disconnect and lockout power from *Landmark* before performing any service.

1. Remove top lid and empty ice from bin. (This can be minimized if done early in the morning.)
2. On the inside front wall of bin, remove thumb screw and adjustable ice gate and discard.
3. Turn the dynamic bar counter-clockwise to remove it from the dispense wheel assembly. If removing dynamic bar becomes difficult, removing the three-piece assembly from the bin will allow better leverage. Applying heat to the hub area will also help.
4. Remove existing static bar.
5. Install new static bar with attached ice gate, making sure tongue of static bar is inside chute.
6. Thread new dynamic bar through static bar and into dispense wheel by turning clockwise. Tighten completely.
7. Seal the threaded insert (located inside bin above ice door) with silicone sealant.
8. Fill bin with ice and replace top lid.
9. Turn on power to dispenser.

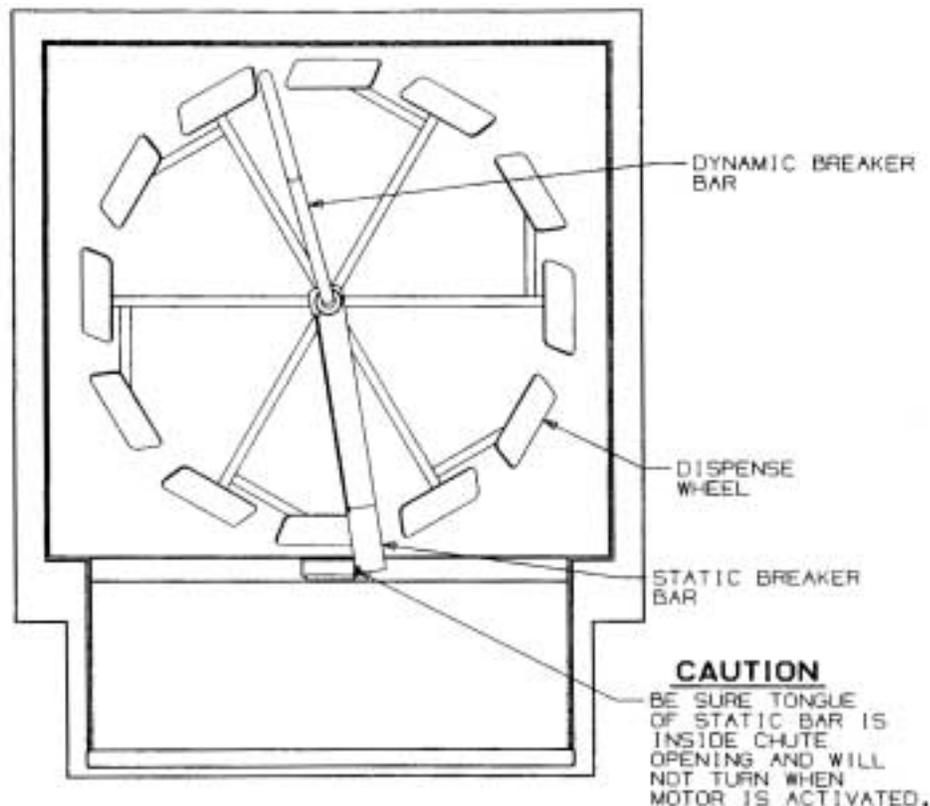


FIGURE 1 Top View