



INSTALLATION INSTRUCTIONS

Landmark - Add Spacer Washer to Sanitary Ice Lever Switch

There should be two (2) washers backing up the sanitary ice lever switch to properly position the switch. *Landmarks* shipped prior to April 28, 1996, contained one (1) washer. The following instructions show how to add a second washer. Please refer to the accompanying figure for greater detail.



CAUTION - Disconnect and lockout power from *Landmark* before performing any service.

REMOVAL OF MERCHANDISER AND ICE CHUTE

1. Remove the ice bin cover and three screws holding the merchandiser housing to the top of the ice bin.
2. Lift up the merchandiser to clear the two tabs located at the bottom rear of the merchandiser housing.
3. Pull the merchandiser forward and remove the four-pin plug from the control box. Then disconnect the power plug from the side of the control box.
4. Remove the merchandiser housing from the dispenser.
5. Remove the drip tray by gently lifting upward then outward to clear shoulder rivets.
6. Remove the splash plate by gently pulling downward.

REMOVAL AND REPLACEMENT OF SPACER

1. Remove the two screws and metal bracket holding the ice dispensing lever. Note how the lever is installed in the slot on the valve mounting plate so it can be reinstalled correctly after the spacer is replaced. Remove the ice dispense lever.
2. With a 7/16-inch wrench, loosen the nut on the switch plunger.
3. Slide the switch out, being careful not to lose the existing spacer washer.
4. Place the additional spacer washer, supplied with the kit, on the shaft with the other spacer washer. A total of two (2) washers should be installed on switch when completed. Two washers are supplied in the washer kit if both are needed.
5. Replace the switch and retaining nut previously removed.
6. Install the lever, placing the top of the lever in the slot on the valve mounting plate.

NOTE: Hooked end of lever must be fully engaged behind valve mounting plate! Otherwise switch plunger may jam in "ON" position. Replace the lever bracket and two screws.

7. Turn on power to dispenser and verify that lever does not stick and the lever actuates the switch properly. Pushing the lever will turn on the agitator motor and the ice bin door will open. Releasing the lever will shut off the motor and close the door.
8. Re-install merchandiser and ice chute.
9. Manually rotate the ice chute door to ensure that the mechanism moves freely.

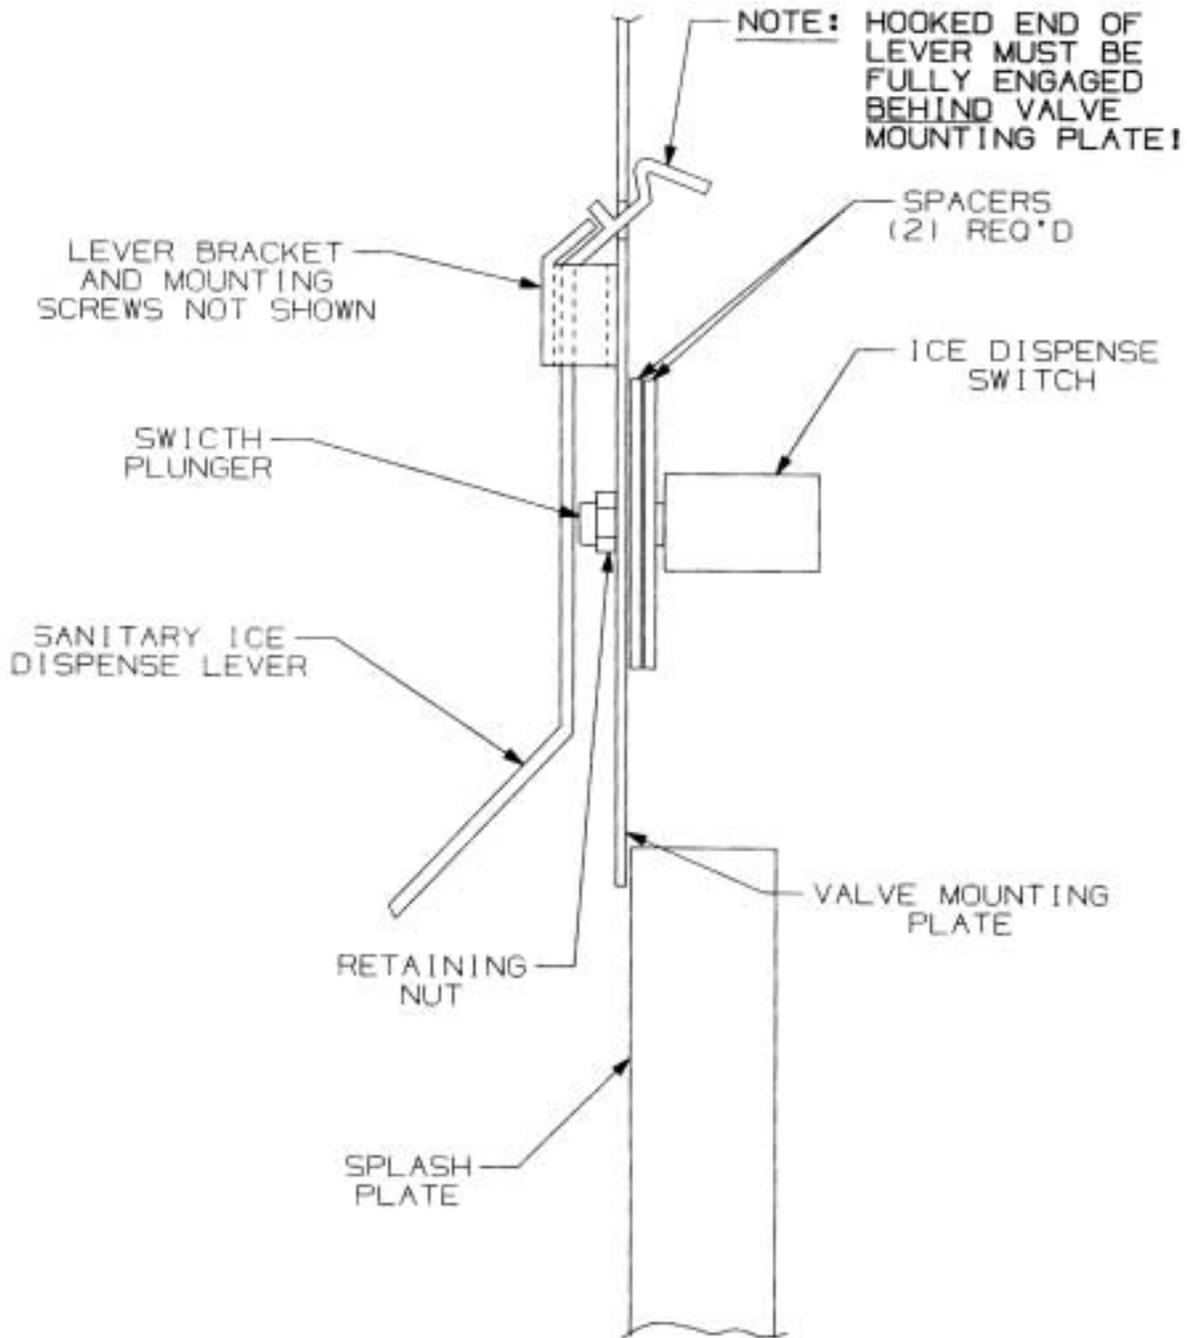


FIGURE 1 Side view of ice dispense switch assembly