

# INSTALLATION INSTRUCTIONS

## ED2XX ICE MAKER ADAPTER KIT P/N 629087962

Table 1. Applicable Models

| Ice Maker           | Width |
|---------------------|-------|
| Ice-O-Matic ICE1506 | 30"   |

Table 2. Parts List

| Item No. | Part Number  | Description                   | Qty. |
|----------|--------------|-------------------------------|------|
| 1        | 620046139    | Icemaker Adapter Lid          | 1    |
| 2        | 620050521    | Manual Fill Cover             | 1    |
| 3        | 620051215    | Icemaker Mounting Bracket     | 2    |
| 4        | 50904        | RTV Sealant 3 oz. Tube        | 1    |
| 5        | 620701601    | # 10 x 1/2" Sheet metal Screw | 8    |
| 6        | 629087962INS | Installation Instructions     | 1    |

**⚠ WARNING:**

Disconnect power to the unit before installing the adaptor following all lockout/tag out procedures established by the user. Verify that all the power is off to the unit before performing any work.

**Failure to comply could result in serious injury, death or damage to the equipment.**

**⚠ WARNING:**

All ice baffle plates and bin stats, if included or recommended in this kit, must be installed as directed in this manual or the equipment manufacturer's instructions.

**Failure to comply could result in serious injury, death or damage to the equipment.**

**⚠ WARNING:**

All of the attachment screws and plates must be installed as directed in this manual.

**Failure to comply could result in serious injury, death or damage to the equipment.**

Refer to Figure 1 for the following procedure:

1. Position the icemaker adapter lid (item 1), flush with the rear of the cabinet, on the dispenser.
2. Seal the icemaker base to the adapter lid as follows:
  - A. Locate the icemaker 2 inches from the rear and flush with the sides of the lid. Run a bead of RTV inside the perimeter of the icemaker base so that the base will set on the RTV.
  - B. Set the icemaker onto the lid. Note: If installing the icemaker from the front of the dispenser, use a piece of 1" PVC pipe or larger as a "roller" to slide the icemaker over the front mounting bracket of the manual fill cover.
  - C. Wipe away any excess RTV.
3. With the icemaker installed on top of the adapter lid, drill 0.147" diameter holes (# 26 drill) into the dispenser cabinet using the slotted holes in the side flanges of the lid as templates. Be careful not to drill into the ice storage hopper. Use of a drill stop (1/4 in.) is recommended. Secure the lid to the cabinet with (4) # 10 sheet metal screws (item 6).
4. Drill 0.147" diameter holes into the icemaker cabinet and adapter lid using the icemaker mounting brackets (item 3) as templates. **Be careful not to drill into any icemaker component (condenser, tubing, etc.).** Secure the mounting brackets to the icemaker and adapter lid with the # 10 sheet metal screws (item 6) provided in the kit.
5. Follow the icemaker manufacturer's instructions to complete the icemaker installation. **Important: Ice-O-Matic bin thermostat kit must be installed to prevent over-filling the ice storage hopper. The thermostat capillary tube location in the hopper must not interfere with agitator rotation.**

6. Check that the automatic agitation timer, located in the dispenser's electrical control box, is set for automatic fill cube ice. The control box is located behind the merchandiser. Remove the merchandiser by lifting up on the sides to disengage the mounting "hooks" from the cabinet slots and rotate it forward. Refer to the label in the control box for setting agitation times.
7. Install the manual fill cover (item 2) on the adapter lid (item 1). Insert the hinge pins into the pivot brackets on the adapter lid with the cover open. Check that cover opens and closes correctly.
8. The unit is now ready for operation.

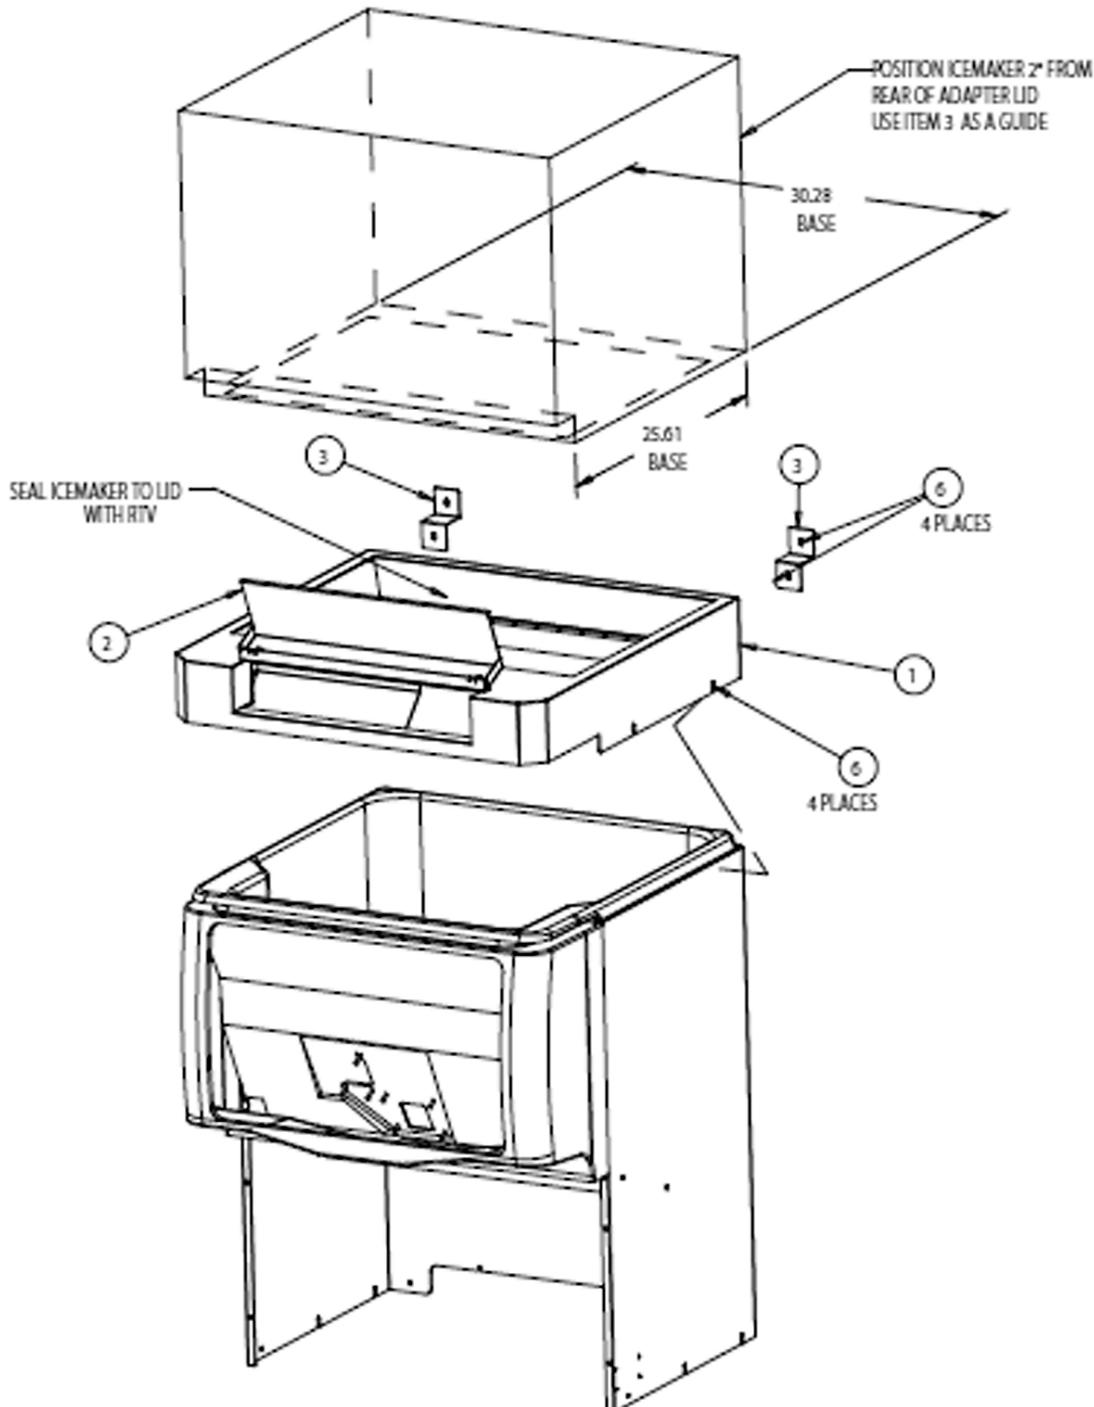


Figure 1.