

INSTALLATION INSTRUCTIONS

DF/ED ICEMAKER ADAPTER KIT USING SINGLE WCC SERIES ICEMAKERS

SAFETY INSTRUCTIONS

 **WARNING:**

Before starting installation, read and understand all safety label and warnings on the machine. Also review and understand all safety instructions in the owners, installation and service manuals.

Failure to comply could result in serious injury, death or damage to the equipment.

QUALIFIED SERVICE PERSONNEL

 **WARNING:**

Only trained and certified electrical, plumbing and refrigeration technicians should service this unit.

All wiring and plumbing must conform to national and local codes. Failure to comply could result in serious injury, death or equipment damage.

SAFETY PRECAUTIONS

This unit has been specifically designed to provide protection against personal injury. To ensure continued protection observe the following:

 **WARNING:**

Disconnect power to the unit before servicing. Follow all lock out/tag out procedures established by the user. Verify all power is off to the unit before performing any work.

Failure to comply could result in serious injury, death or damage to the equipment.

 **CAUTION:**

Always be sure to keep area around the unit clean and free of clutter.

Failure to keep this area clean may result in injury or equipment damage.

 **WARNING:**

All ice baffle plates and bin stats, if included or recommended in this kit, must be installed as directed in this manual or equipment manufacturer's instructions.

Failure to comply could result in serious injury, death or damage to the equipment.

 **WARNING:**

All of the attachment screws and plates must be installed as directed in this manual.

Failure to comply could result in serious injury, death or damage to the equipment.

1. Remove the plastic hopper lids from the top of the dispenser.
2. Install soft ice agitator kit (*sold separately*) into the dispenser.

NOTE: This soft ice agitator kit is required for proper dispenser operation using “compressed” or “soft” ice types. Failure to install this kit may result in undesirable beverage quality.

3. Unpack and inspect the adapter kit.
4. Remove the merchandiser from dispenser by lifting up then pulling out. Set the merchandiser aside.
5. Remove and save the front two screws securing the cabinet to the hopper. Set the lid assembly onto the dispenser, see Figure 1.
6. Fasten lid to the dispenser with (4) #8-32 machine screws, (two on each side) and re-install the two front screws that were removed in Step 5, see Figure 1.
7. Re-install merchandiser onto unit.
8. Install ice deflector in adapter opening using four #8-32 screws, see Figure 4. Do not completely tighten screws at this time.
9. Set icemaker onto the adapter kit. See Figure 2 and Figure 3 for location dimensions.

NOTE: Be sure to center the ice drop opening of the icemaker directly over the deflector plate. Failure to do so may result in un-even hopper fill.

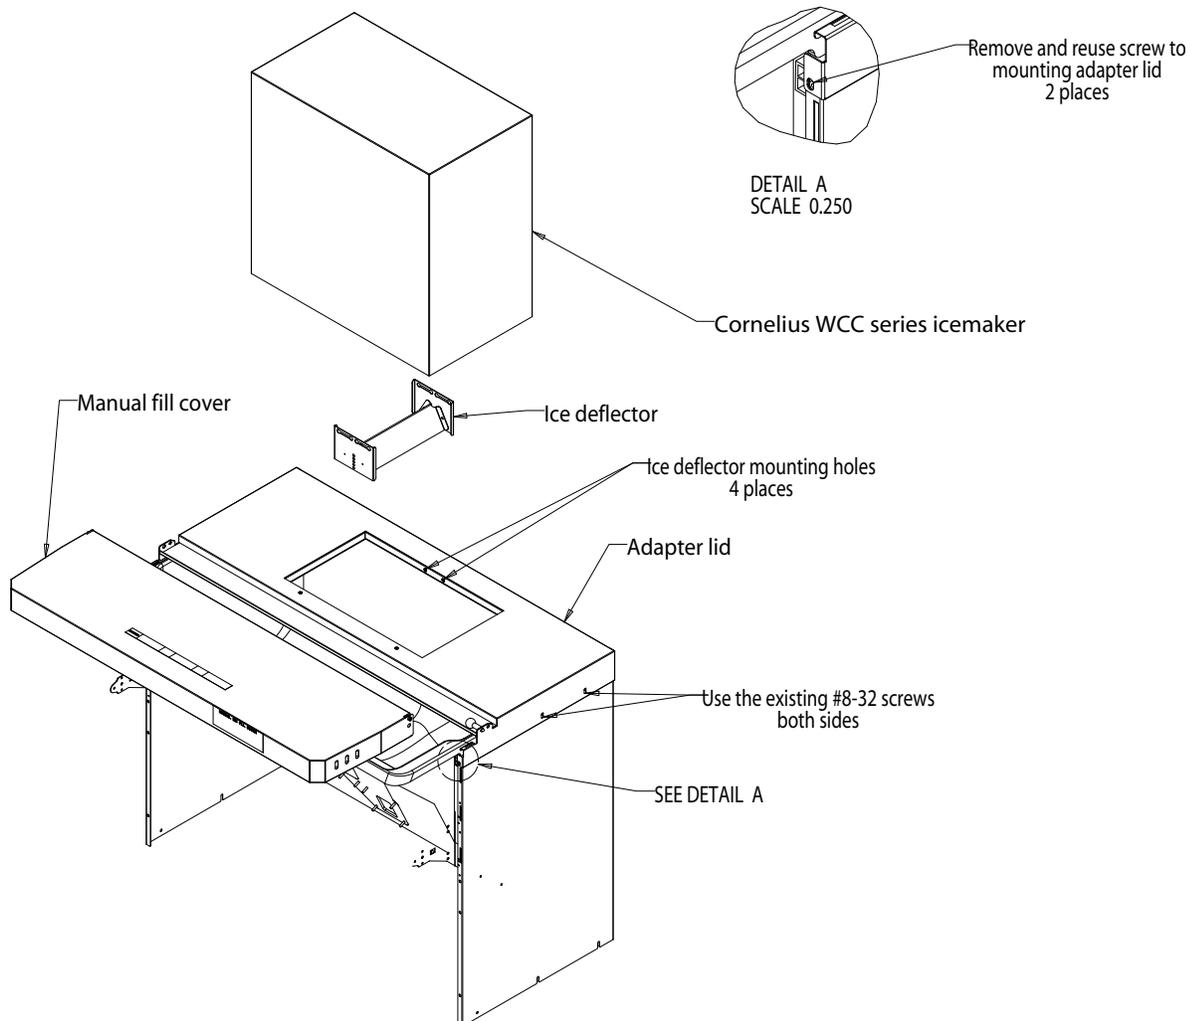


FIGURE 1.

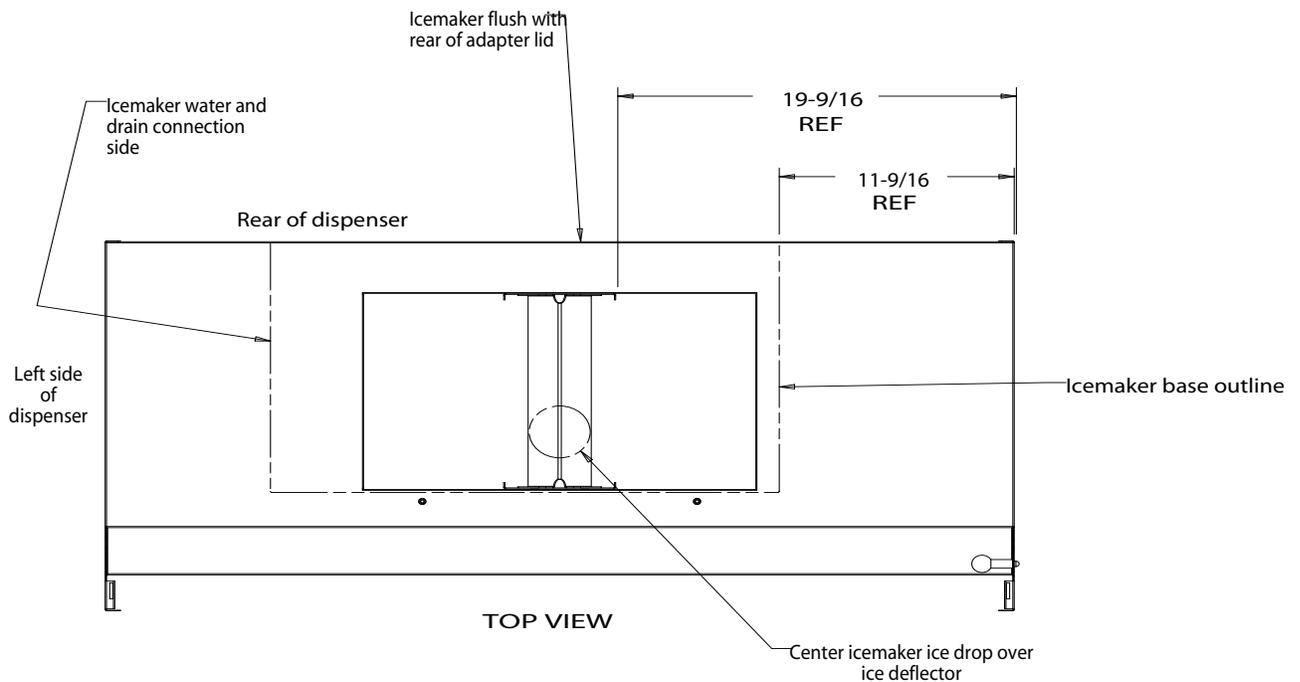


Figure 2.. Icemaker Mounting Details (Option A)
 These dimensions are to aid in installation. Actual location may vary.

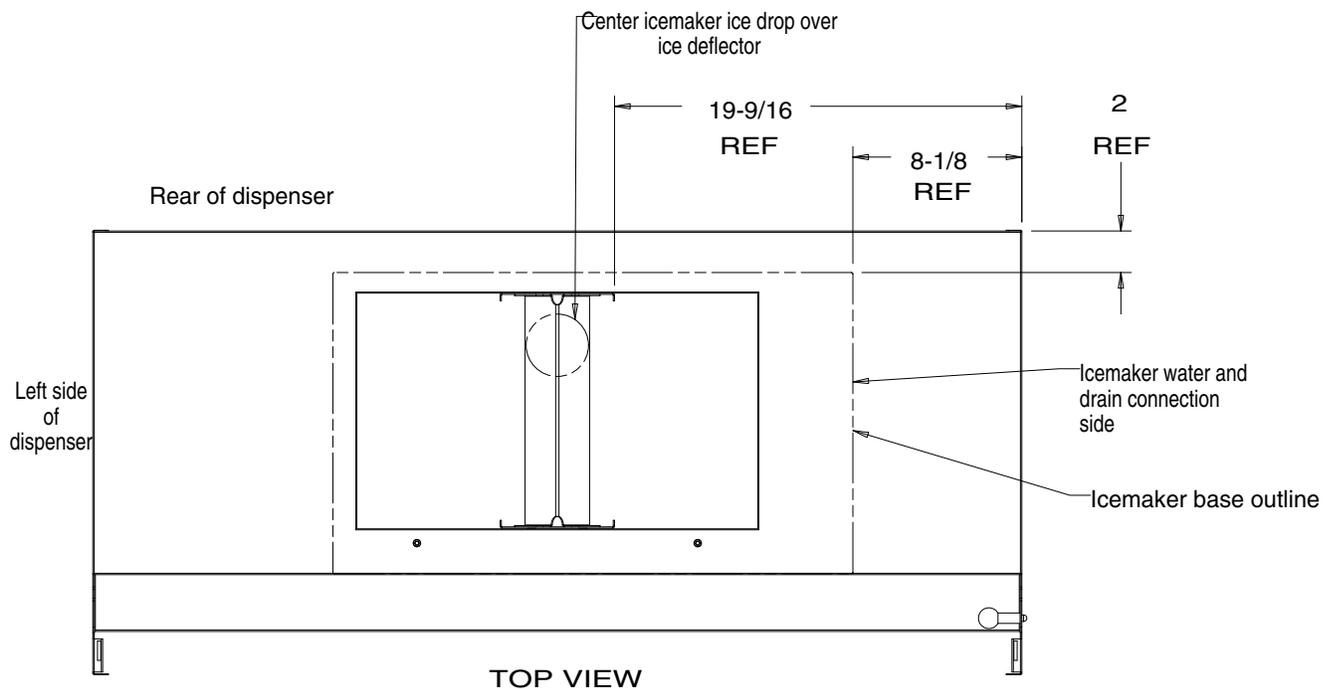


Figure 3.. Icemaker Mounting Details (Option B)
 These dimensions are to aid in installation. Actual location may vary.

10. Tighten the four ice deflector mounting screws.
11. Follow the icemaker manufacturing instructions to complete the installation of the icemaker.
12. Install icemaker bin thermostat just underneath ice deflector. See Figure 4 for location area.

NOTE: Failure to install a bin thermostat correctly may result in inadequate hopper fill, ice dispense issues, hopper “ice bridging”, and/or possible damage to the icemaker.

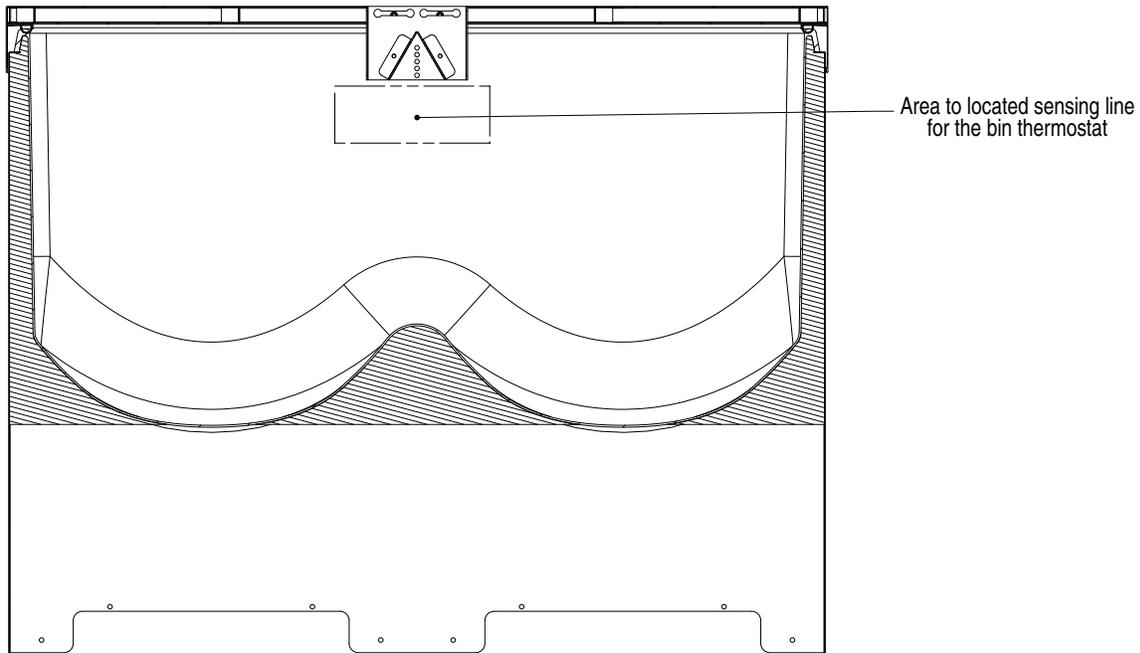


FIGURE 4.

13. Apply a continuous bead of NSF International (NSF) listed silastic sealant (Dow 732 or equivalent) to seal the icemaker to the top of the adapter lid. All excess sealant *must* be wiped away immediately.
14. Secure the manual fill cover to the adapter lid with the two shoulder screws, washers, and locknuts (see Figure 5). Check for proper operation of the manual fill cover by opening and closing the cover. The cover latch should engage in the fully open positions and hold the cover open. Pull the red knob on the latch to release the cover.

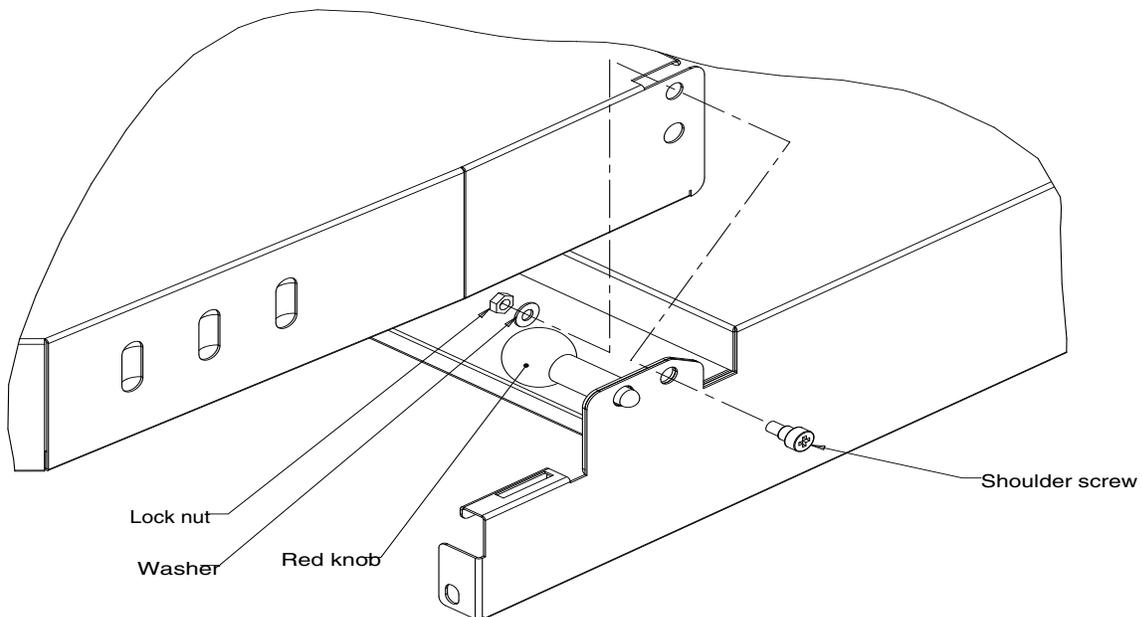


FIGURE 5.

15. Re-connect electrical power to the dispenser.
16. Verify function and operation of both icemaker and dispenser.