

# INSTALLATION INSTRUCTIONS

## FOR ICE MAKER ADAPTER KIT P/N 629097216TE FOR MODEL ED300 DISPENSER

Item No.	Part No.	Name	Qty.
1.	22127	Brkt Mtg S Beam	4
2.	50436	Bag, Plastic	1
3.	50904	Sealant 732, RTV 3 Oz. Tube	2
4.	620057062	Lid, Ice Maker Assembly	1
5.	620701601	Screw TF SM 10-16	16
6.	620807203	Bag, Plastic Ziplock	1
7.	629097216TEINS	Manual, Installation Instructions	1
8.	620915101	Label, Notice	1
9.	80349	Bag, Mailer	1
10.	80422	Bag, Poly	1
11.	80884	S-Crtn ED300 Kits	1
12.	91957	Label, Warning	1
13.	620064177	Lid and Lanyard Assy Black	1
14.	43164	Screw MA 08-32 TRPH 10 SS	2
15.	70100	Nut Hex 08-32 SS Nylok	2

**WARNING:**

Disconnect power to the unit before installing the adaptor following all lockout/tag out procedures established by the user. Verify that all the power is off to the unit before performing any work.

**Failure to comply could result in serious injury, death or damage to the equipment.**

**WARNING:**

All ice baffle plates and bin stats, if included or recommended in this kit, must be installed as directed in this manual or the equipment manufacturer's instructions.

**Failure to comply could result in serious injury, death or damage to the equipment.**

**WARNING:**

All of the attachment screws and plates must be installed as directed in this manual.

**Failure to comply could result in serious injury, death or damage to the equipment.**

**WARNING:**

The dispenser must be secured with 3/8-16 bolts (6) to the counter before installing this ice maker adapter kit. Refer to the installation manual and NOTE: for the counter mounting template.

1. Remove the top plastic bin covers (2) from the dispenser and discard.
2. Refer to Figure 3 for adjusting the automatic agitation timer:
  - A. Remove the upper front panel/merchandise from the dispenser.
  - B. Loosen/rotate the top (2) mounting screws that secure the white reflector panel/electrical control box cover in place and lower the cover to expose the automatic agitation timer.
  - C. Adjust the timer to 1 second on and 1 hour off as shown in Figure 3.

- D. Secure the electrical control box cover in place and install the upper front panel/merchandiser.
3. Place the ice maker adapter lid on top of the dispenser as shown in Figure 1.
4. Using the slotted holes in the lid as a template, drill (4) 0.147" diameter holes (#26 drill) at the bottom of the slots (see Figure 1, Detail A). **BE CAREFUL NOT TO DRILL INTO THE ICE STORAGE BIN.** Secure the lid to the dispenser with (4) #10 sheet metal screws.
5. Seal the ice makers to the dispenser lid as follows (see Figure 1):
  - A. Run a bead of RTV inside each of the ice maker perimeter outlines on the lid so that both ice makers set on the RTV.
  - B. Set the ice makers onto the lid and position them as shown in Figure 1.
  - C. Wipe away any excess RTV.
6. Drill 0.147" diameter holes into the ice maker cabinet and the dispenser lid using the ice maker mounting brackets as templates. **USE CAUTION SO AS NOT TO DRILL INTO ANY ICE MAKER COMPONENTS (CONDENSER, TUBING, ETC.).** Secure the brackets using the #10 sheet metal screws provided.
7. Follow the ice maker instructions to complete the installation of the ice makers including the bin thermostat if so equipped or required.

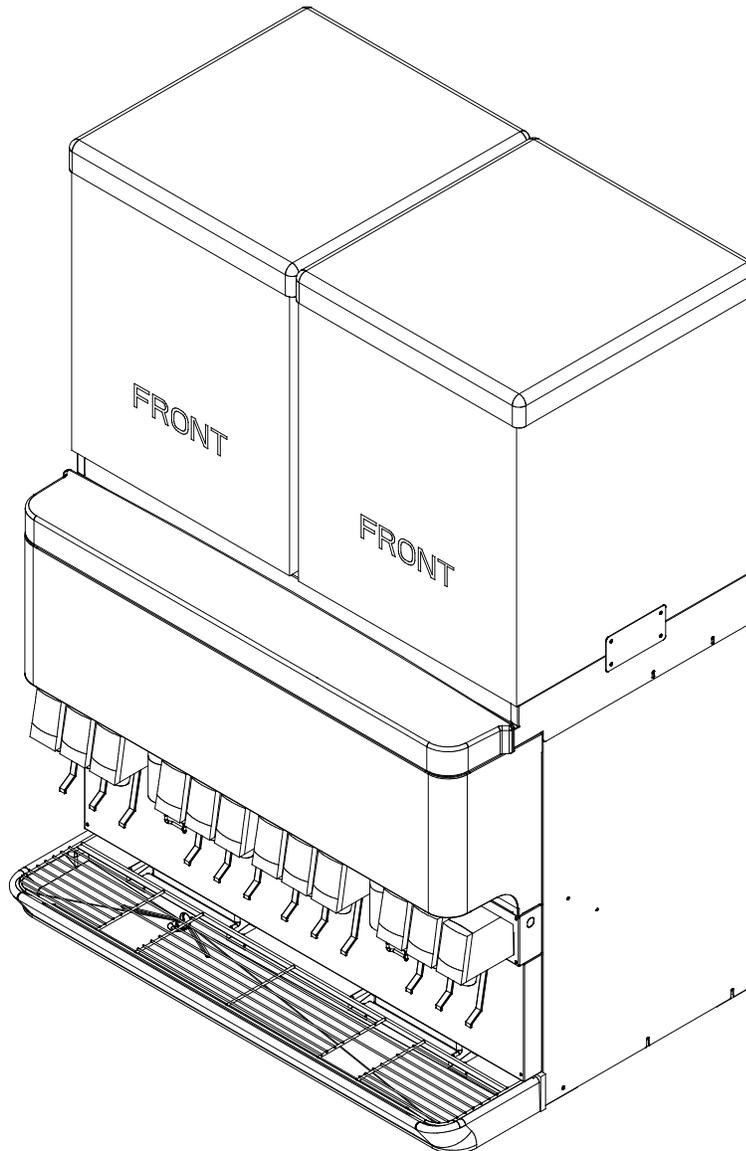


Figure 1. Ice Maker Adapter Kit

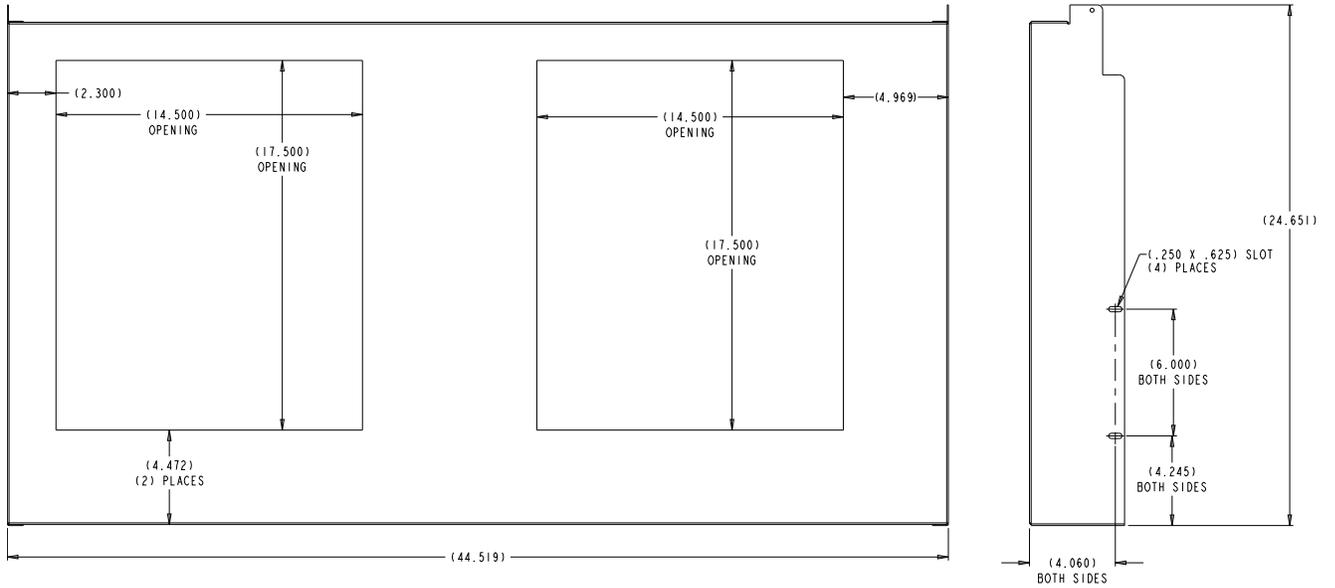


Figure 2. Reference Sheetmetal Cover Opening Dimensions for Mounting Ice Maker.

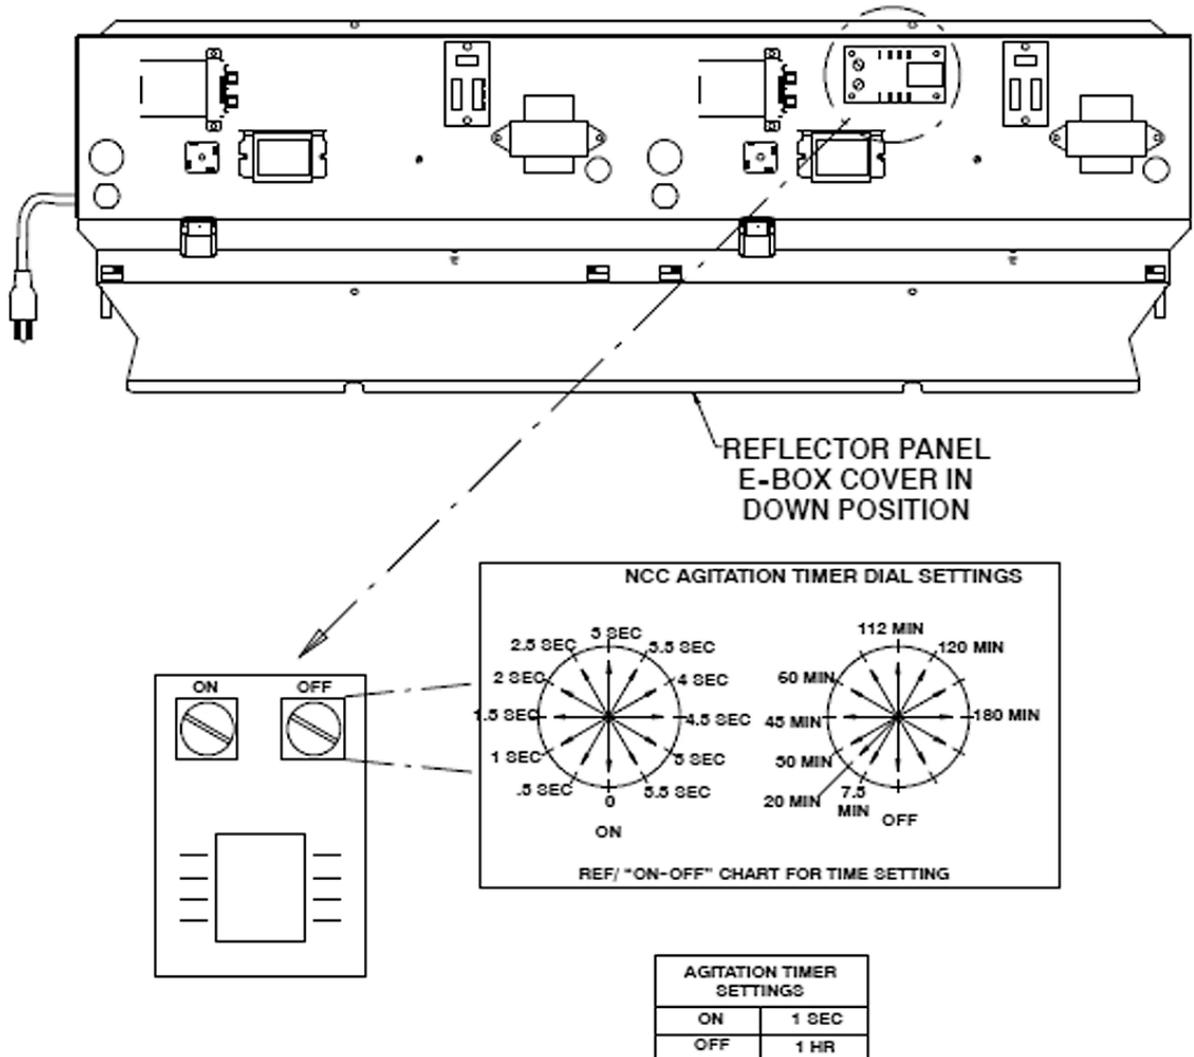


Figure 3. Agitator Timer