


KIT #1946/1951

Installation Instructions

For installing a Reynolds CF-3-CH/CF-6-DH icemaker on a Remcor Model TJ90 dispenser.

1. Disconnect power to dispenser.
2. Remove upper front panel from dispenser.
3. Using Fig. 1 as a guide:
 - A. Install ice cutter.
 - B. Install agitation timer in electric box with screws (2) provided.
(Fig. 4) See wiring diagram for timer harness hook-up. Note that the red lead from the terminal board to the capacitor is to be connected to the timer (remove from capacitor). Check that cycle time dials are set as shown below (2 sec. on and 20 min off).
 - C. Install agitator provided in kit.
 - D. Locate gaskets on dispenser top cover and ice storage hopper.
 - E. Using the top covers as templates, locate and drill (4) .136 dia holes (#29 drill size) in left and right sides of dispenser cabinet.
 - F. Secure top covers to dispenser with (4) sheet metal screws provided.
4. Remove front panel and U-shaped cabinet wrapper from Reynolds icemaker. Remove cover from ice drop chute.
5. Drill and tap #8-32 mounting hole in icemaker base for ice level control bracket as shown in Fig 2.
6. Place icemaker on gasket on dispenser top cover.
7. Secure ice level control bulb to mounting bracket with plastic clamp and mount to icemaker base (see Fig 2).
8. Locate icemaker mounting brackets as shown in Fig 3. Using the brackets as templates drill .136 dia. holes (#29 drill size) in both the dispenser and icemaker cabinets and secure with sheet metal screws provided.
9. Follow manufacturer's instructions to complete installation of icemaker.

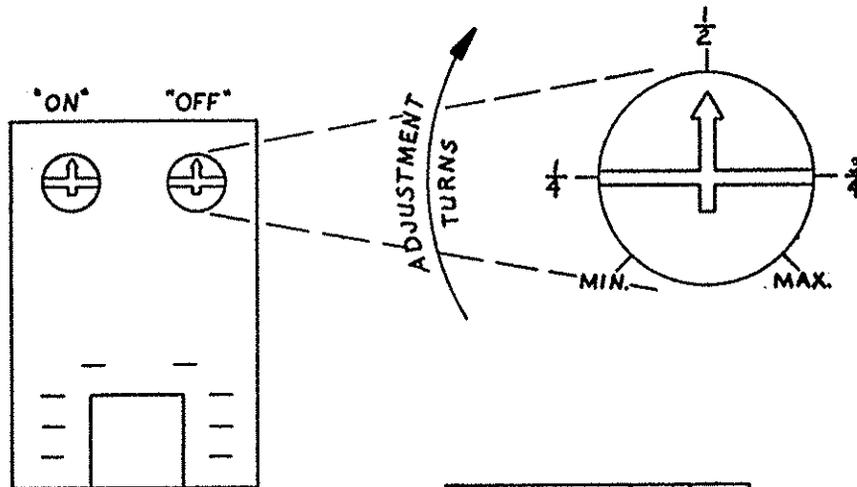

CYCLE DIAL	ON	OFF
SETTING	1/2	MIN.

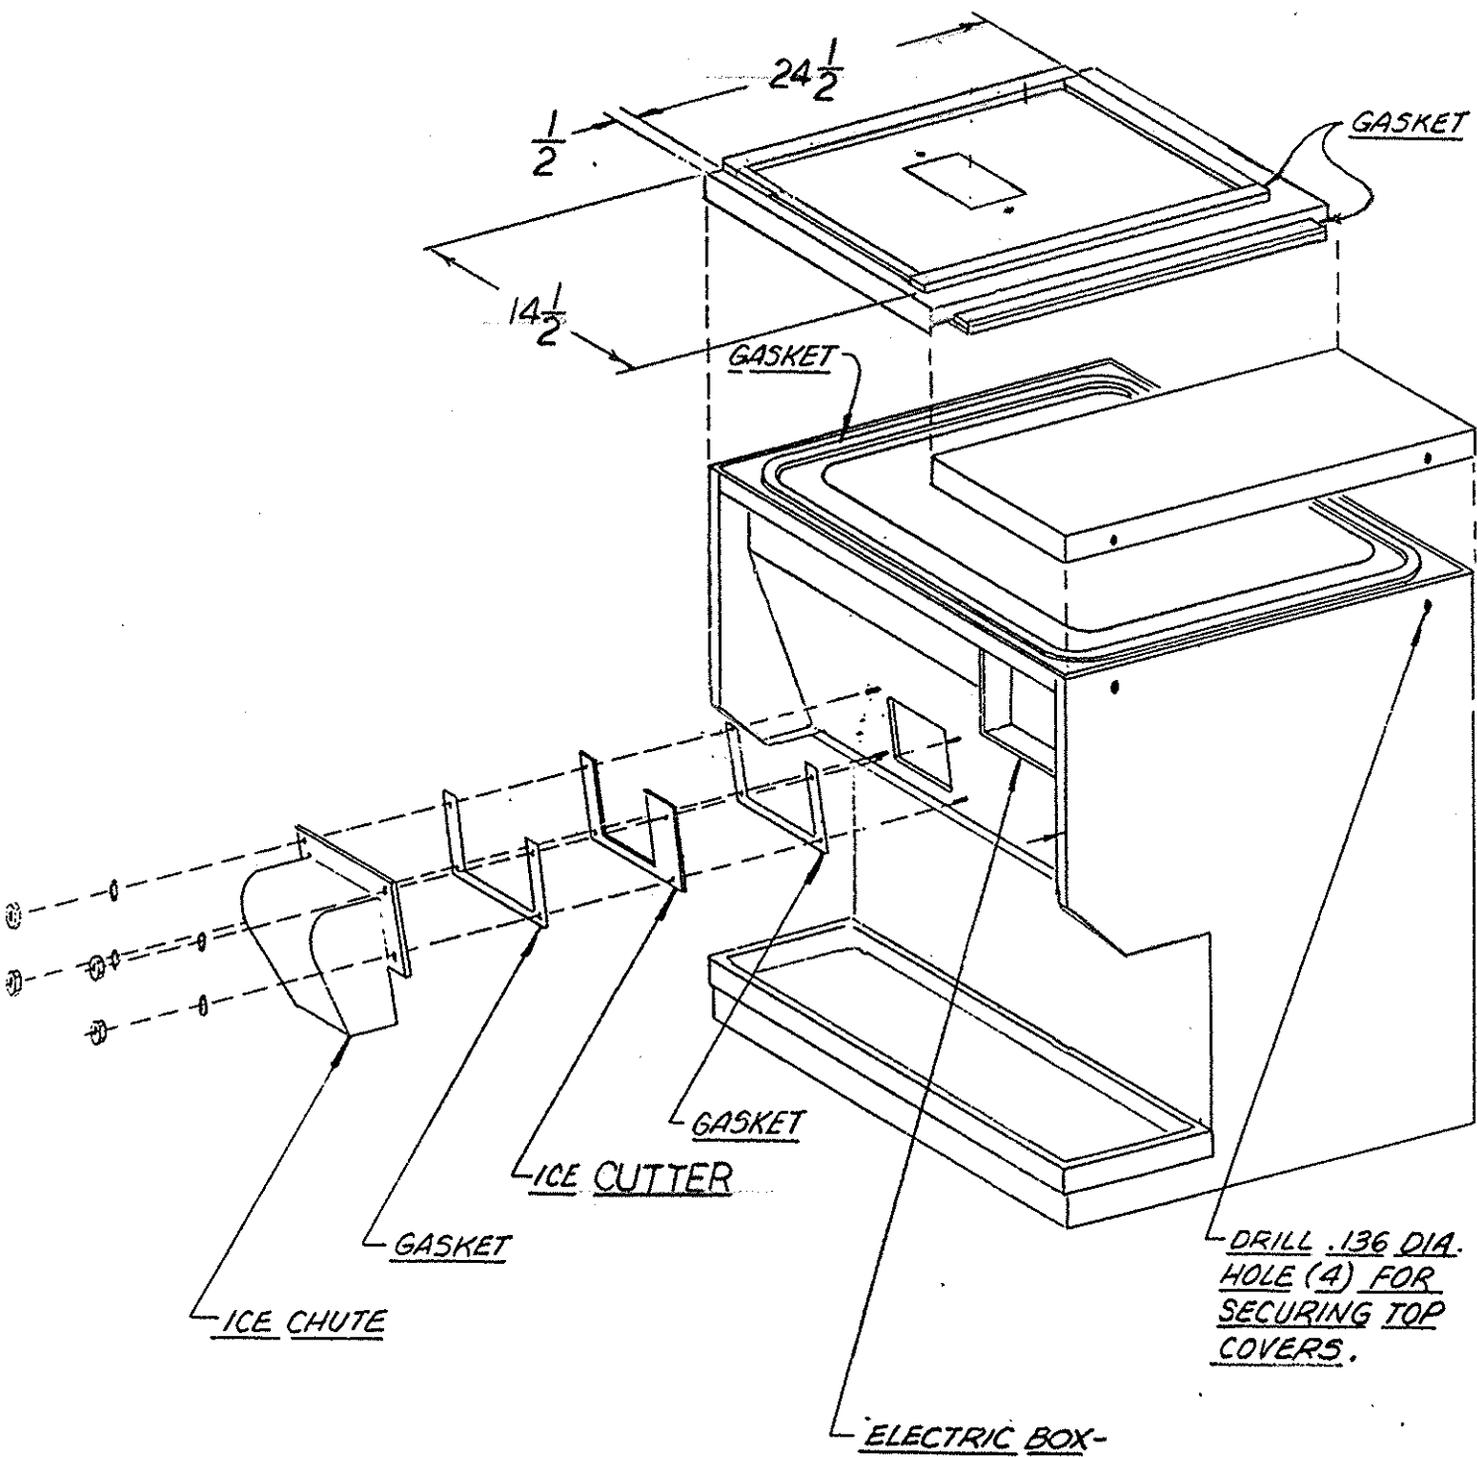


FIG. 1
 (UPPER FRONT PANEL REMOVED)

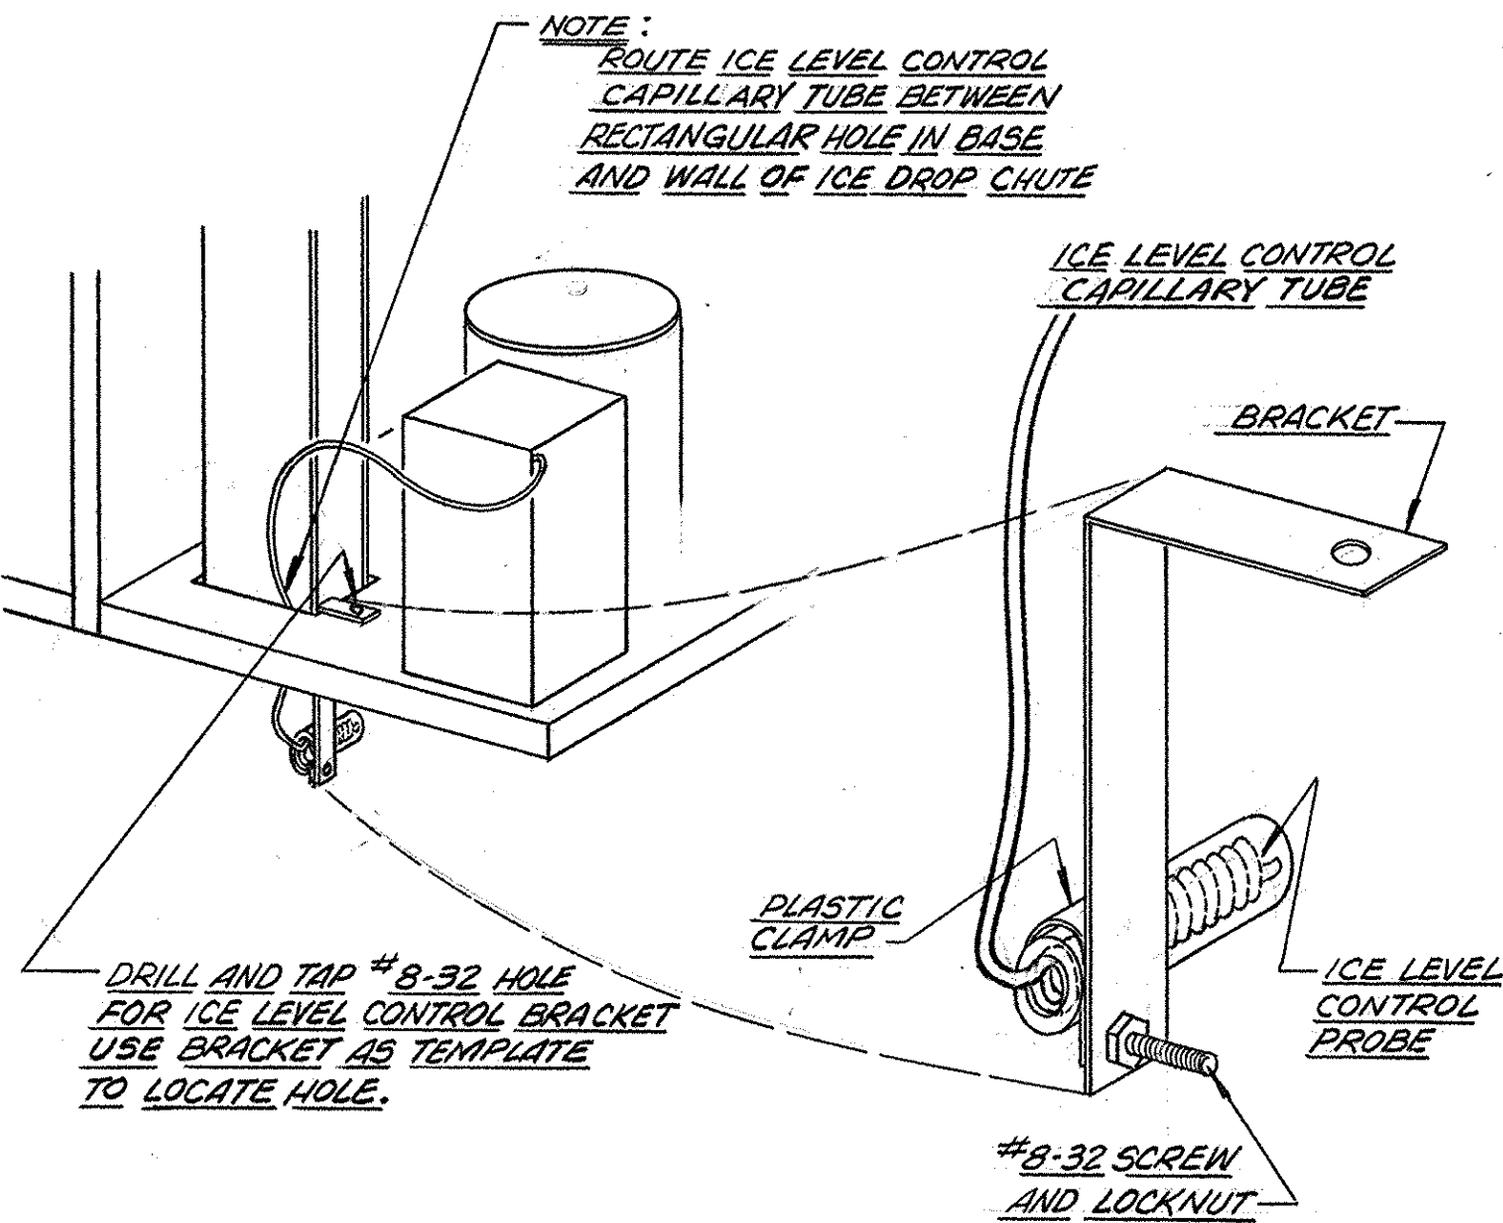


FIG. 2

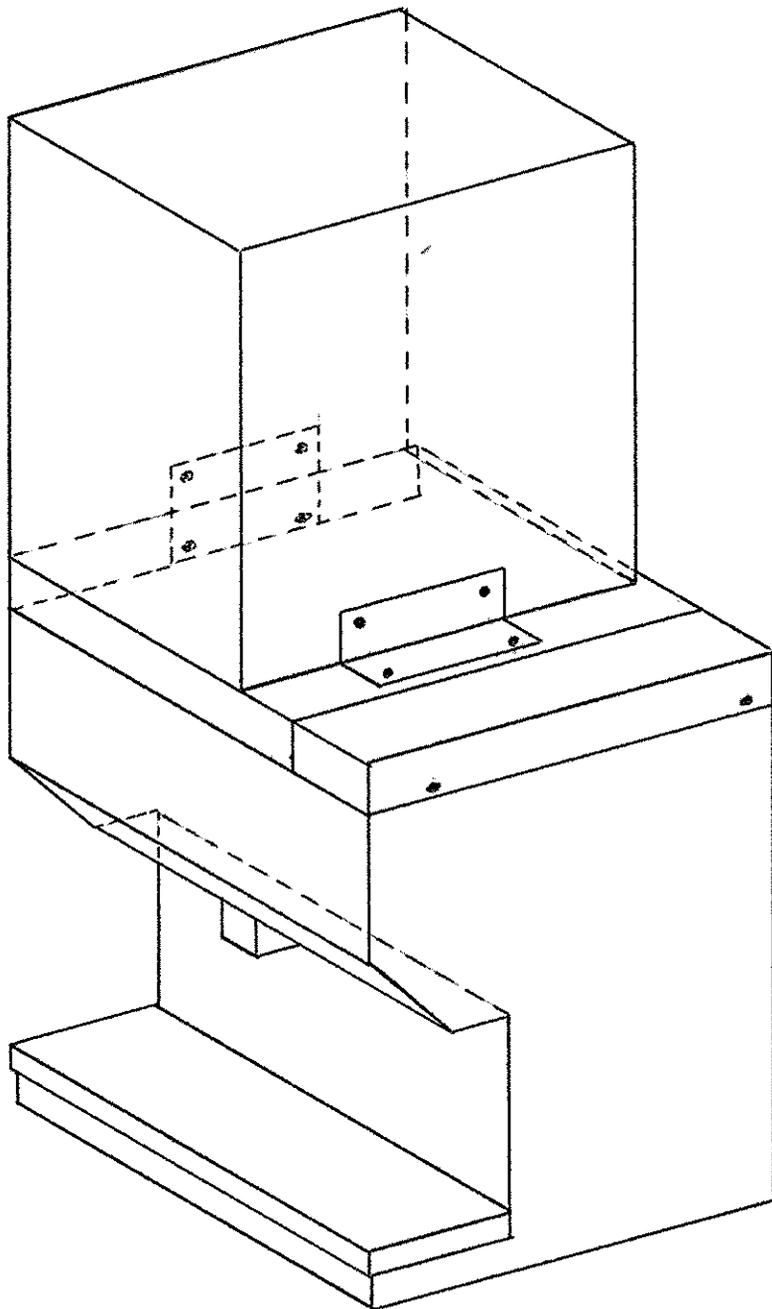


FIG. 3


WIRING DIAGRAM

TJ90-K. DISPENSER

SERVICE INFORMATION

DANGER! ELECTRIC SHOCK HAZZARD DISCONNECT POWER BEFORE SERVICING UNIT

* 1-1/4 AMP TIME DELAY FUSE

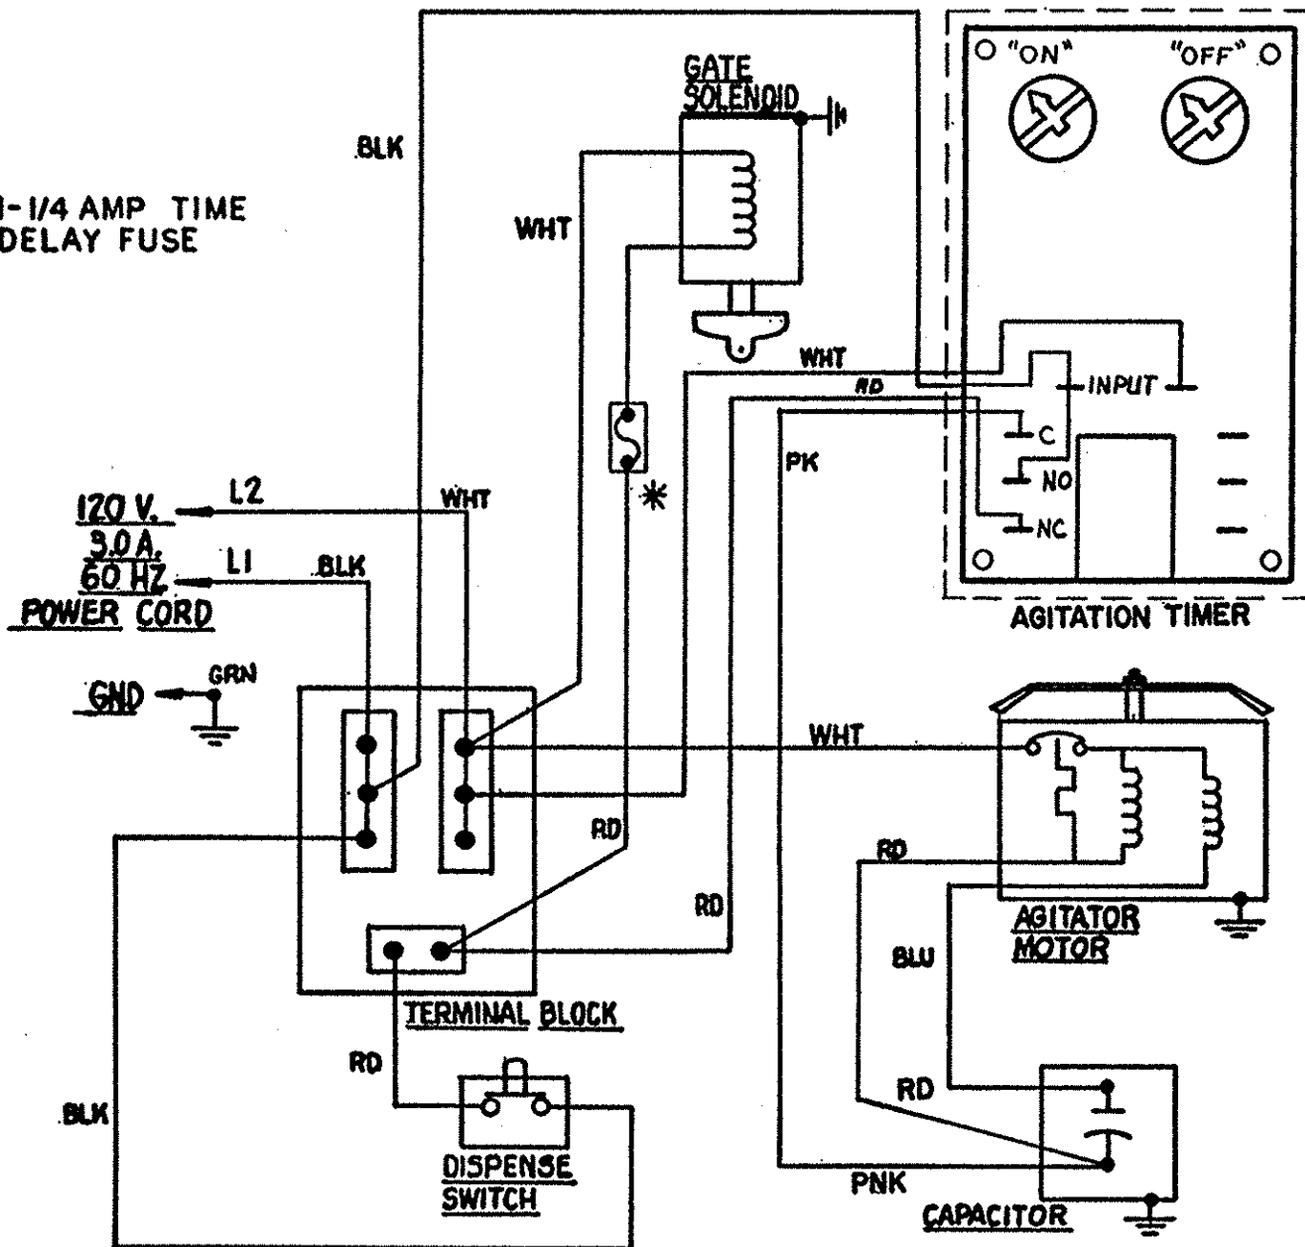

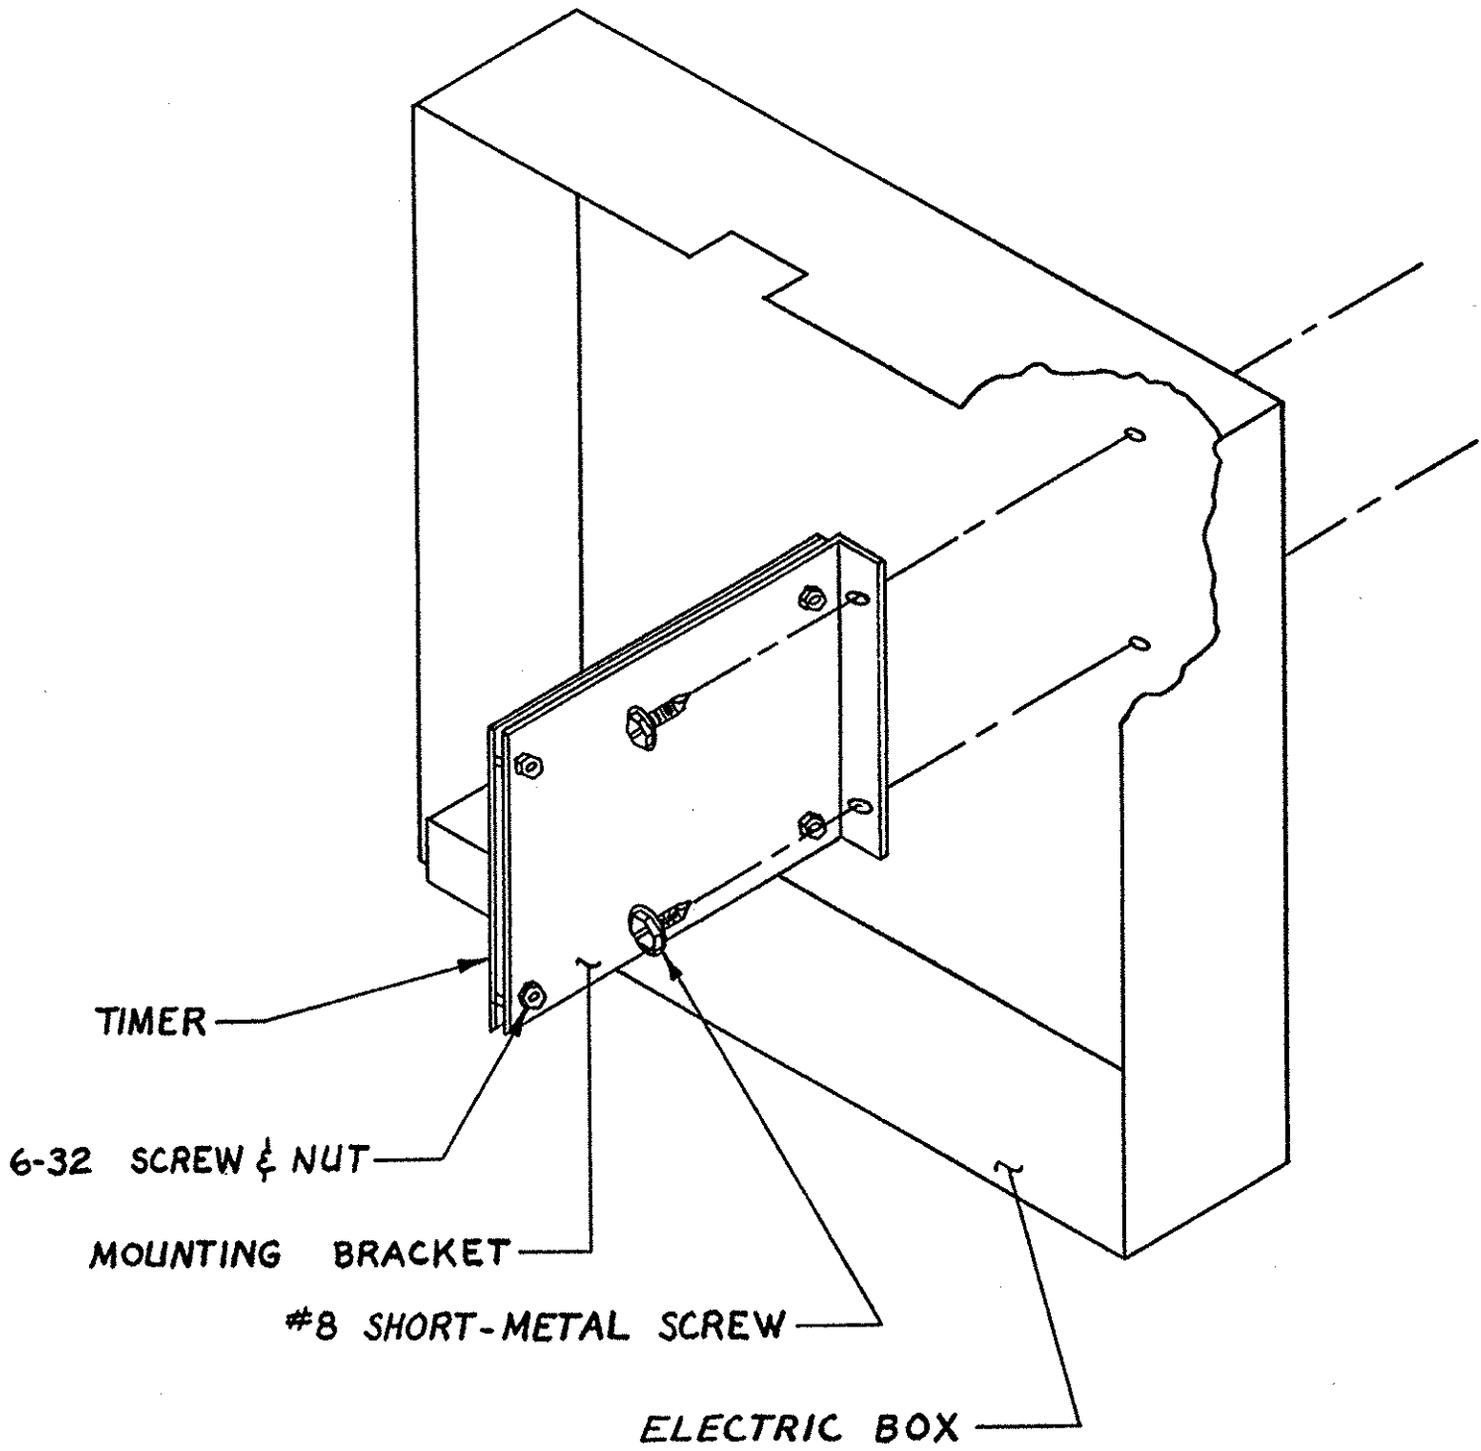


FIG. 4