


**KITS 02136 and 02137**

**INSTALLATION INSTRUCTIONS**

**SID 350 Dual-Tec Lighted Display**

1. Disconnect electrical power to both units.
2. Remove upper front panel from both units.
3. Connect electrical cord supplied with kit to the electrical control box of the left side unit. (See Figure 1) Remove the control box cover. Hook-up the white lead to the terminal board (neutral) and the black lead to the common terminal of the stop/run switch (See wiring diagram). Connect ground lead to the control box.
4. Install the two (2) front panels supplied with the kit on the units. Route the electrical cord on the left side unit installed in step 3 through the 2 inch diameter hole in the panel. This cord will supply power to the lighted display.
5. Position the two (2) units together and install the lower front panel spacer and sink spacer as shown in Figure 2.
6. Install two (2) screws supplied with the kit in the upper holes (#8 - 32) on the front panels of the units. Leave screws about 1/4 inch out from panel. The lighted display will "hang" on these screws. Complete the installation as shown in Figure 3.
7. Connect power to units. Units are ready for operation.

# WIRING DIAGRAM

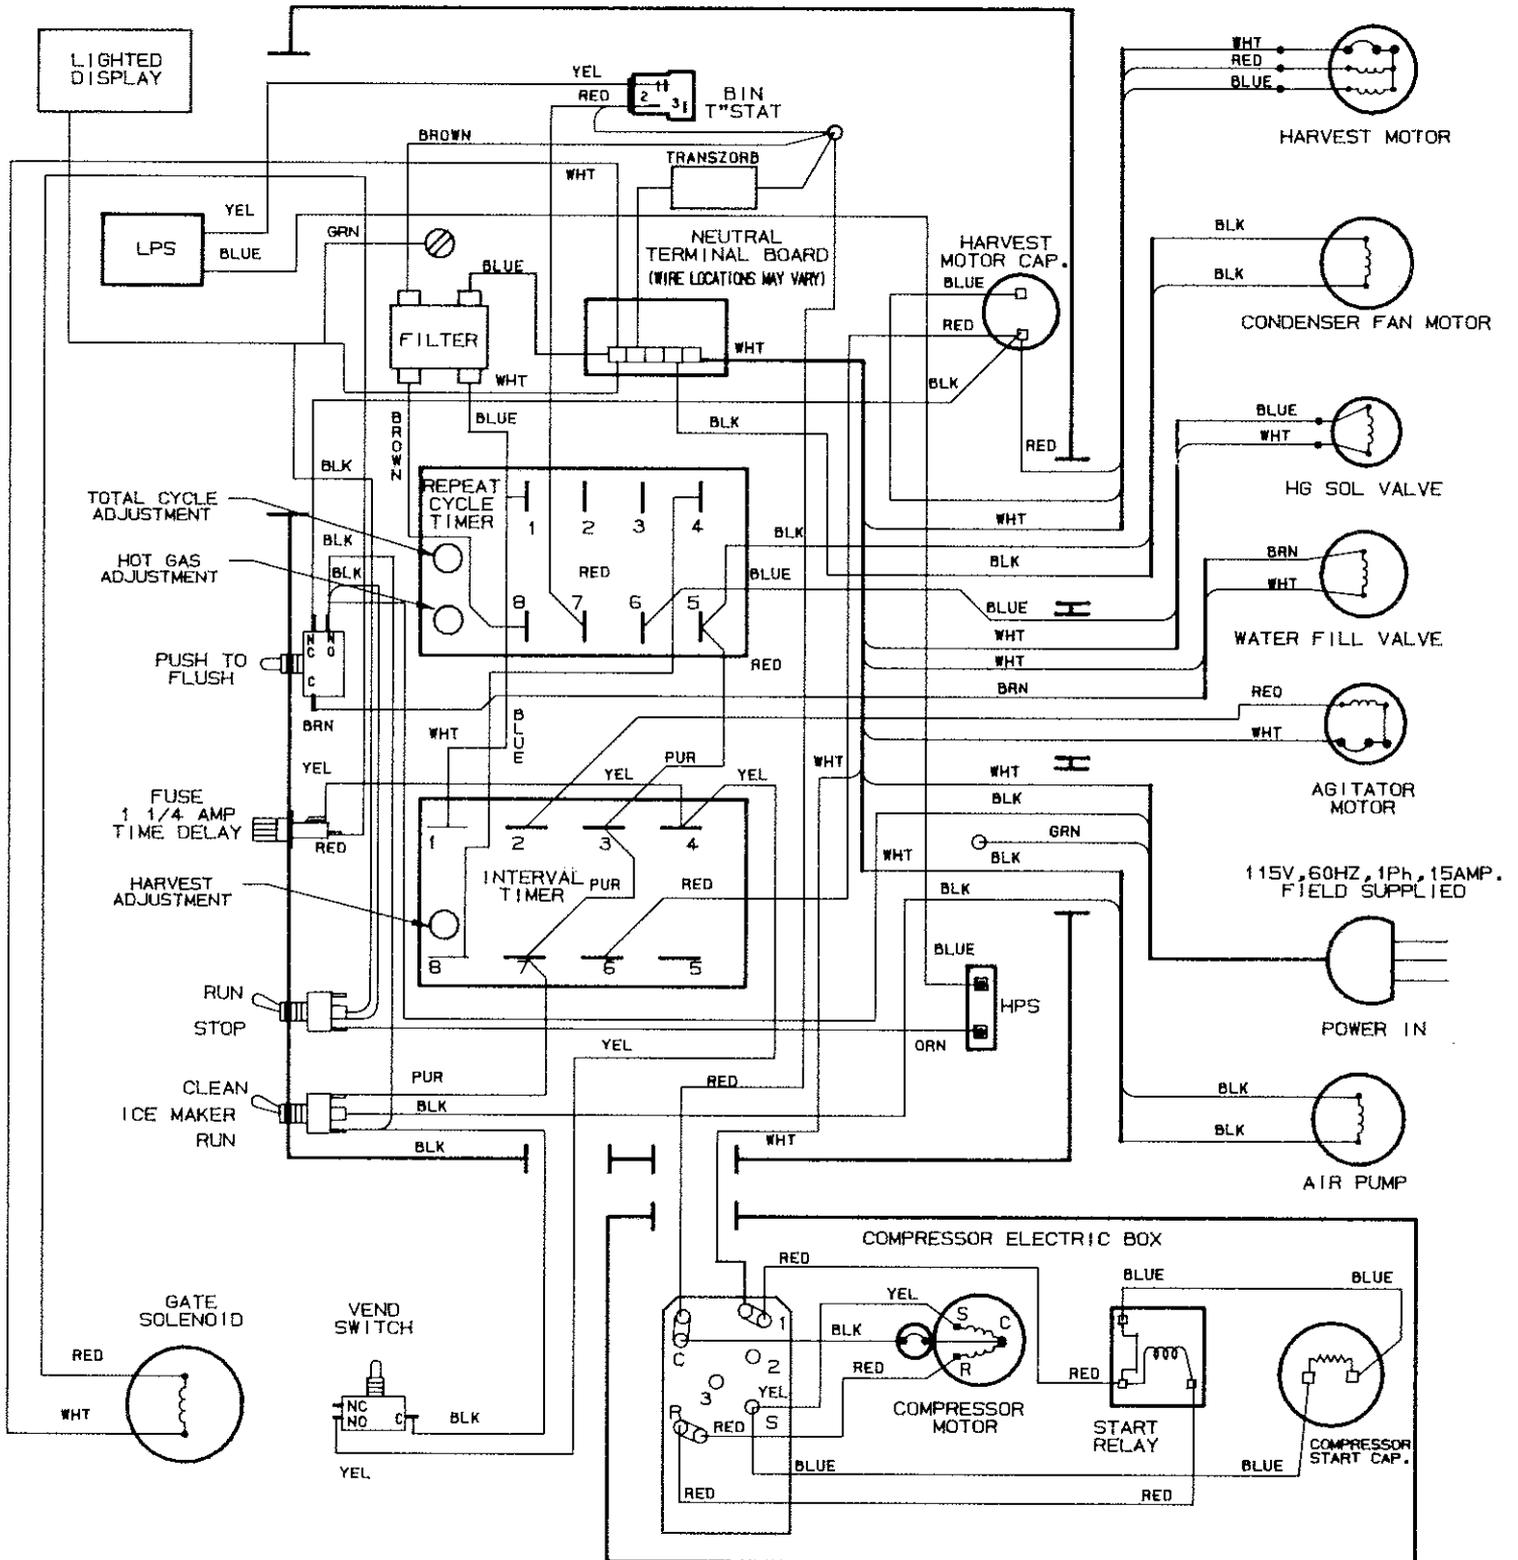


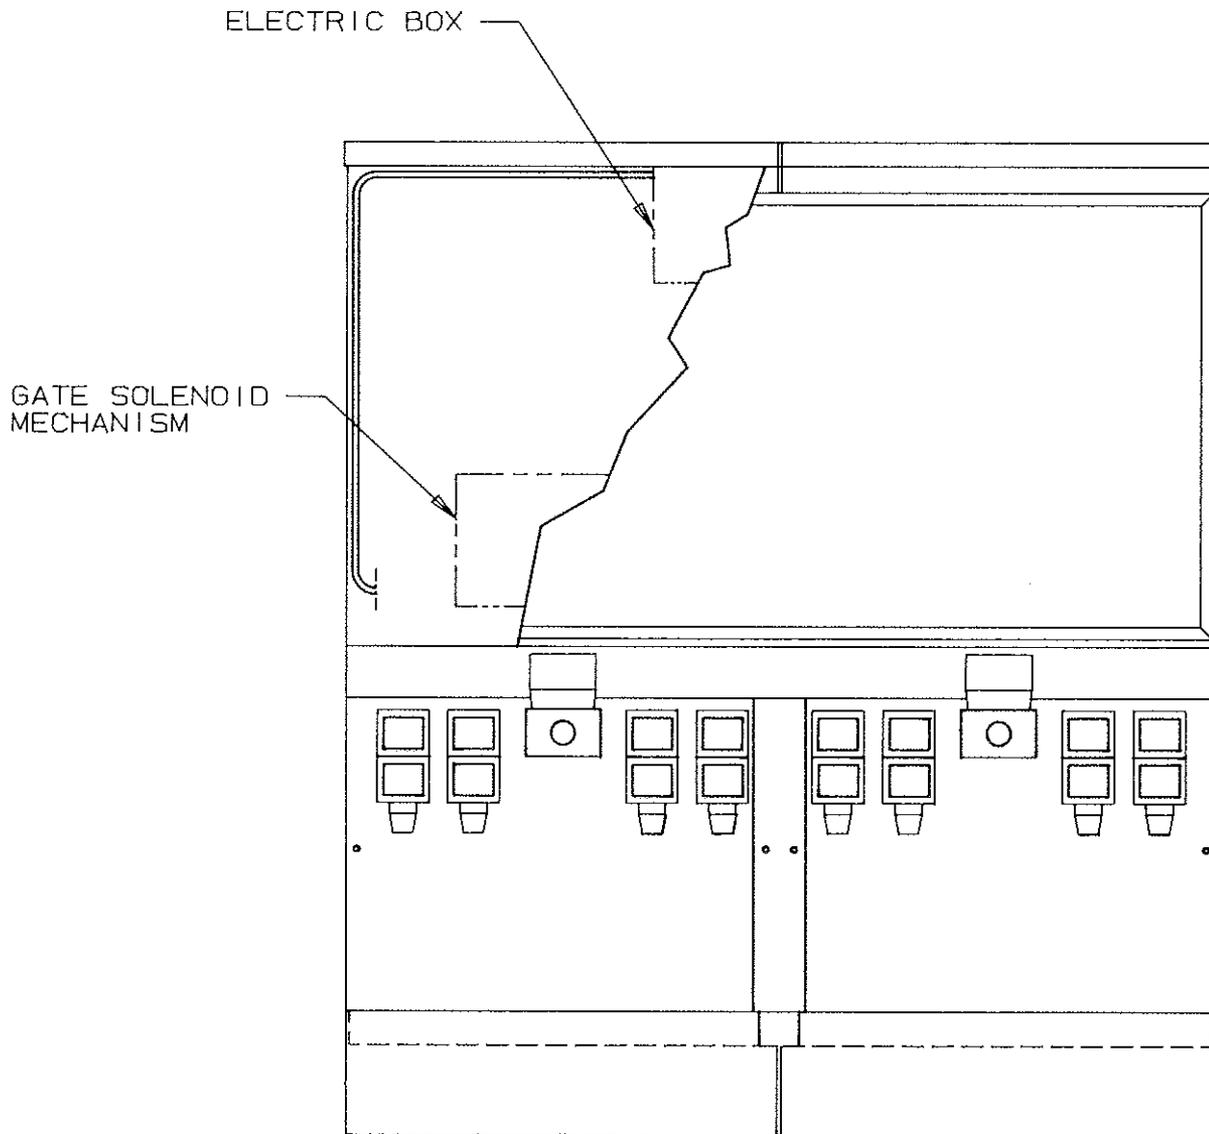


FIG. 1

NOTES

- 1) LOCATE ADHESIVE BACKED CABLE MOUNTS AND TIES TO SECURE LIGHTED DISPLAY POWER CABLE FROM THE GATE SOLENOID MECHANISM.
- 2) INSTALL LIGHTED DISPLAY POWER CORD IN LEFT-SIDE UNIT.

SID 350-B MODELS

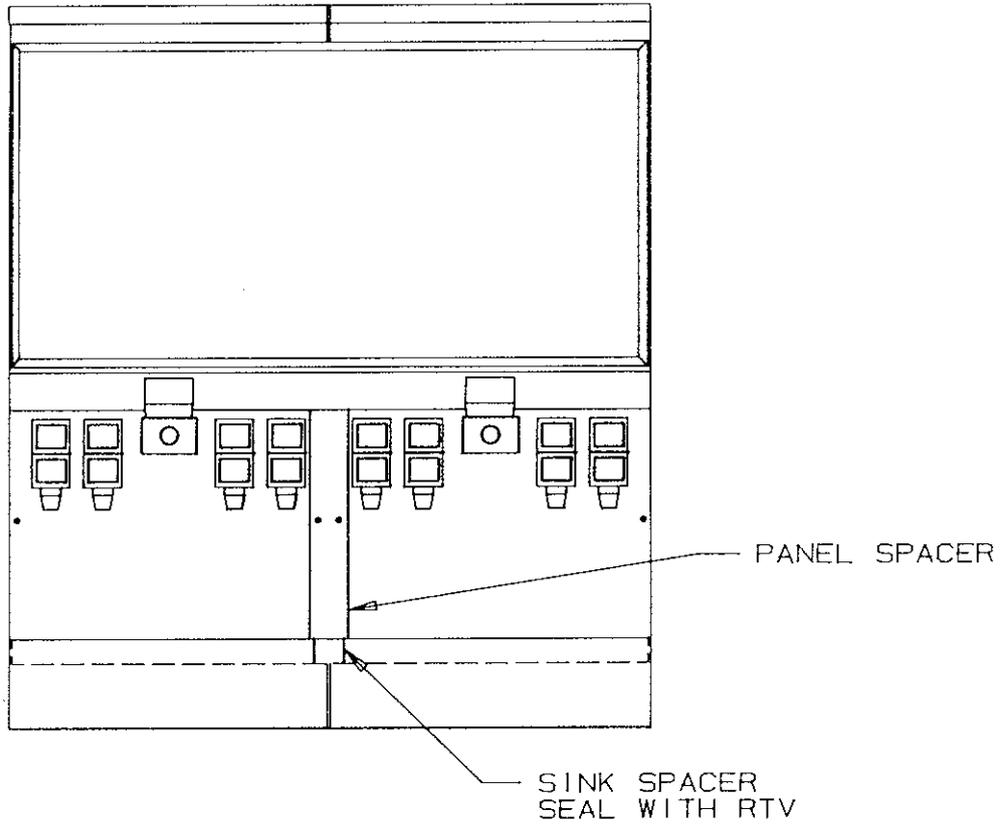

SID 350-BZ MODELS

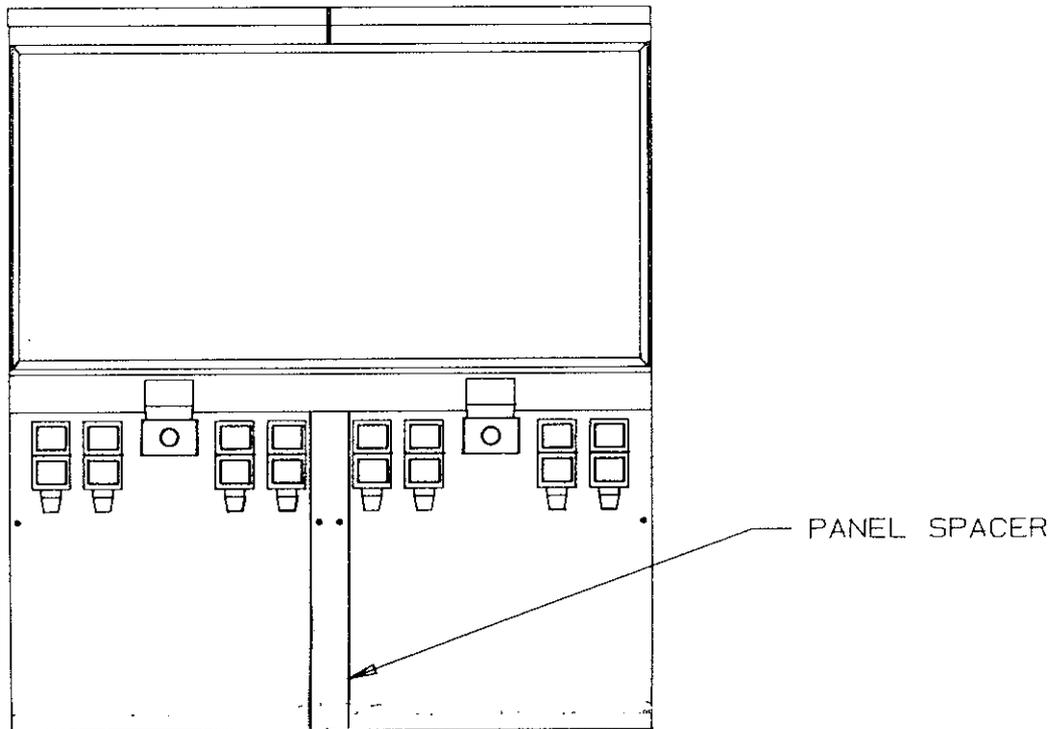


FIG. 2

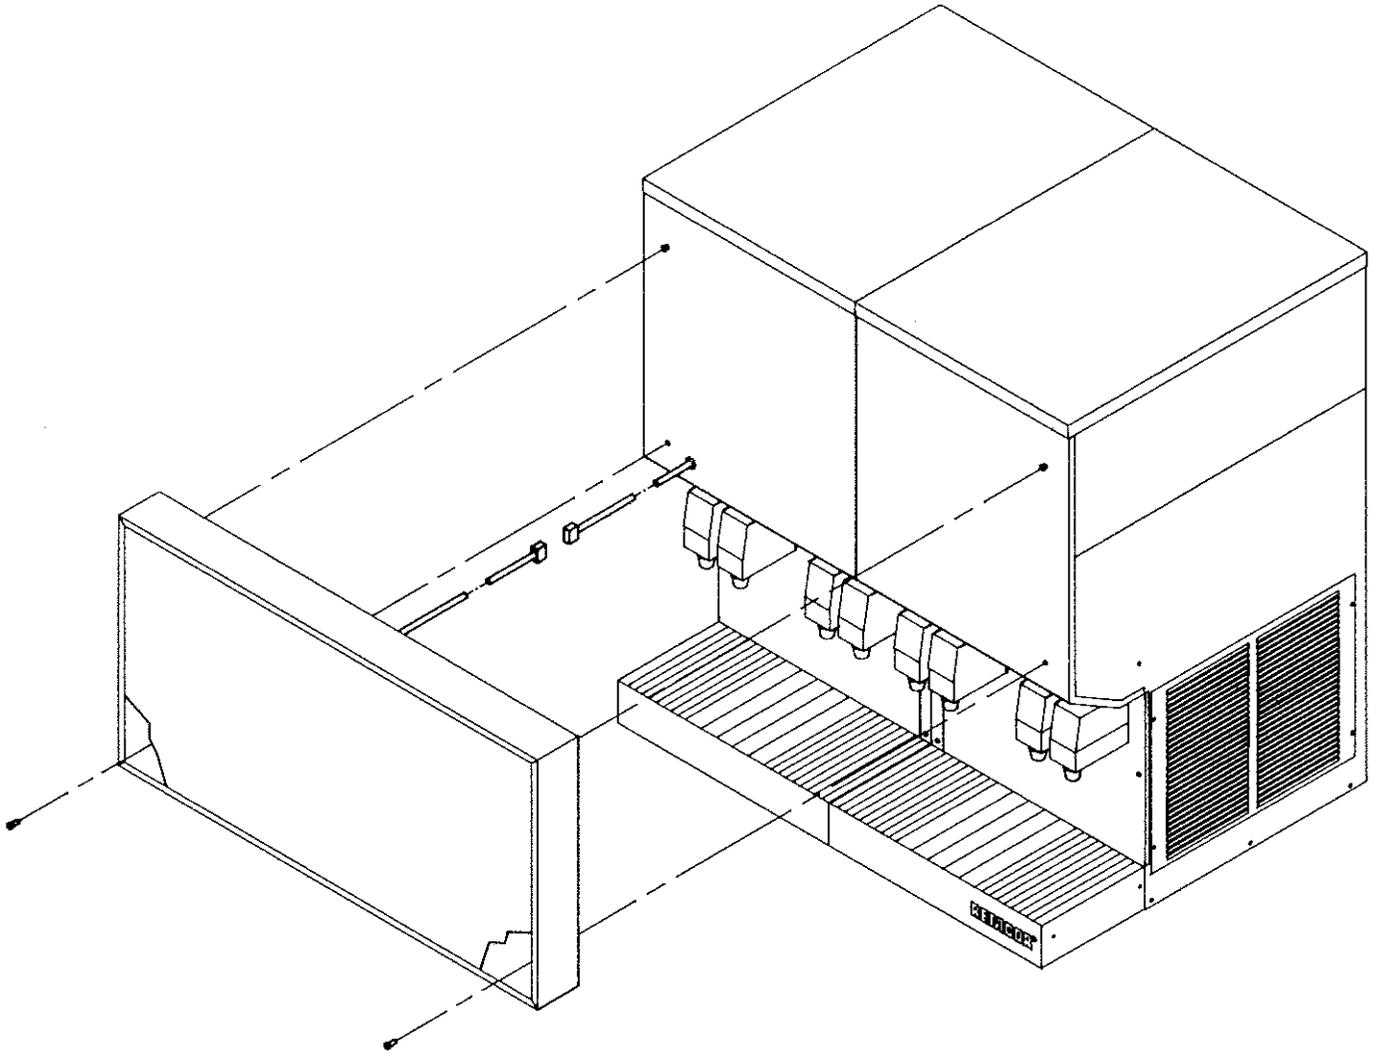


FIG. 3

NOTES

---

- 1) REMOVE FRONT PANELS (2) FROM LIGHTED DISPLAY.
- 2) INSTALL TOP (2) #8-32 ROUND HEAD SCREWS. LEAVE OUT 1/4" FROM PANEL.
- 3) CONNECT LIGHTED DISPLAY CABLES.
- 4) HANG LIGHTED DISPLAY ON TOP SCREWS.
- 5) SECURE LIGHTED DISPLAY WITH BOTTOM SCREWS. TIGHTEN TOP SCREWS AS REQUIRED.