



## DB150 & DB275 DISPENSE LEVER/SWITCH REPLACEMENT

Tools Required:     Phillips screwdriver  
                              1/2" wrench or adjustable(Crescent) wrench

- 1) Disconnect power from unit.
- 2) Remove splash panel to access dispense switch.
- 3) Remove screws attaching ice dispense lever retaining bracket to beverage panel.
- 4) Remove ice dispense lever from beverage panel.
- 5) Remove switch boot (1/2" wrench) and dispense switch from beverage panel.
- 6) Disconnect wires from old dispense switch.
- 7) Connect black (or brown) wire to COMMON terminal of new dispense switch.
- 8) Connect red (or yellow) wire to NORM OPEN terminal of new dispense switch. Clear boot must cover both terminals on dispense switch.
- 9) Install spacer onto the threaded bushing of dispense switch before mounting switch to beverage panel with new switch boot. (Spacer fits between beverage panel and dispense switch.)
- 10) Assemble new ice dispense lever to beverage panel using retaining plate provided and two screws; orient retaining bracket as shown.
- 11) Replace splash panel and mounting screws.
- 12) Reconnect power to unit.
- 13) Verify proper operation of the new dispense lever and switch. If dispenser operates continuously after reconnecting power, red (yellow) wire is probably incorrectly connected to NORM CLOSED terminal of switch. Remove red (yellow) wire from switch and reconnect to NORM OPEN terminal.

P/N 92394  
June 1996  
REV D

# DB150/275 DISPENSE LEVER/SWITCH REPLACEMENT

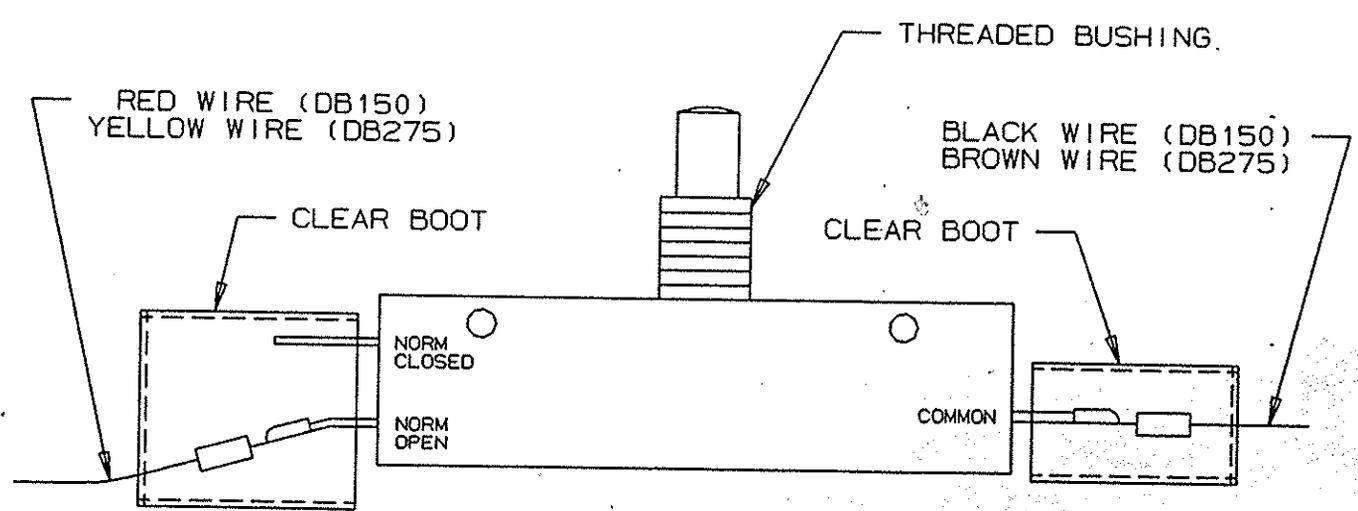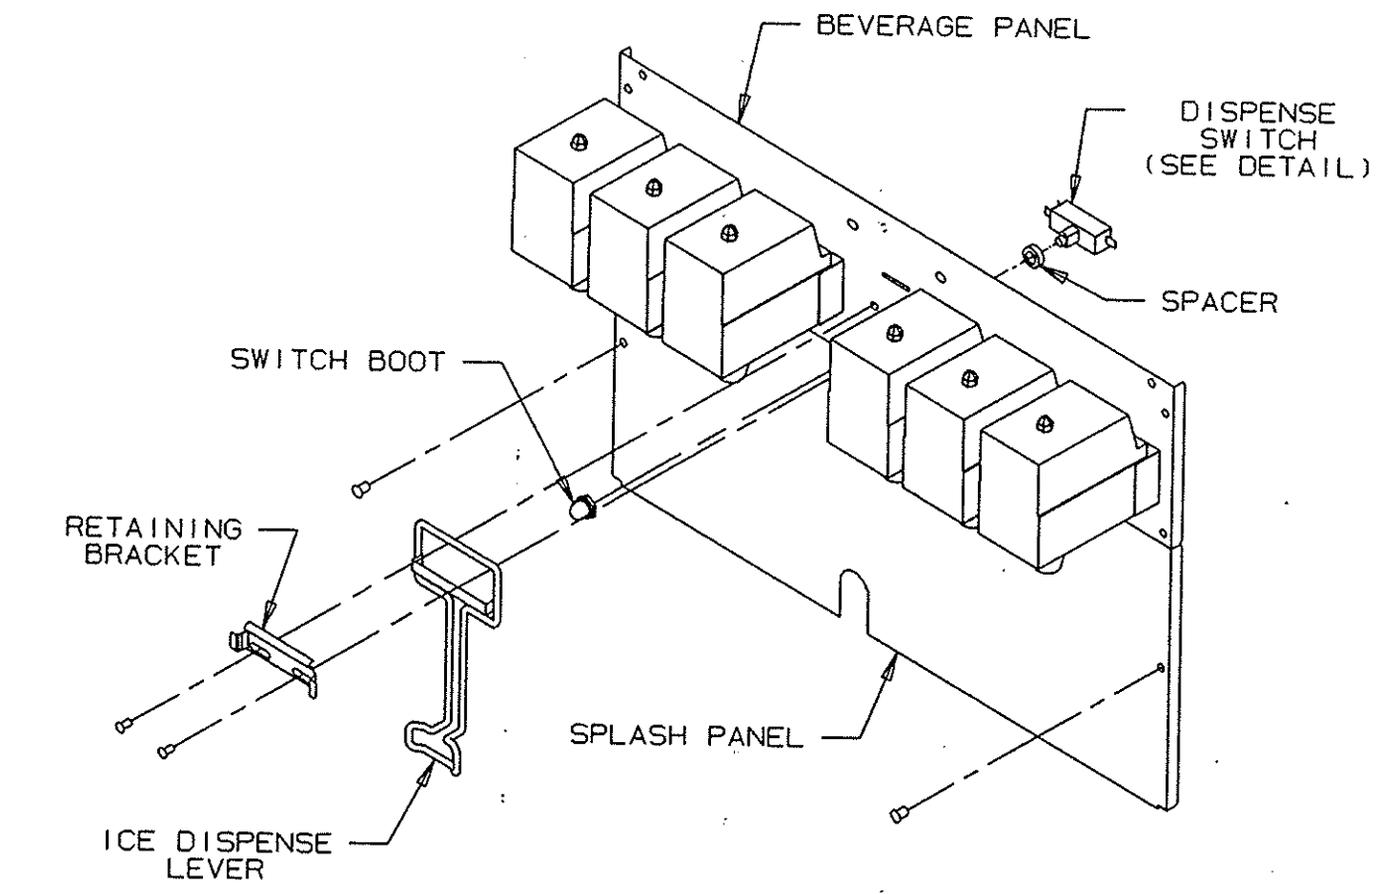

DISPENSE SWITCH DETAL