



ED250 PRO GATE/ED300 - Monthly Cleaning Procedure - Clean/Sanitize Ice Chute

Supplies

Equipment Needed

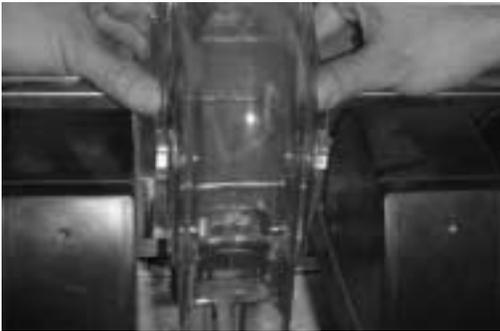
- Two Clean blue towels

Products Needed

- K Chemicals
 - Cleaning Chemical (KAY Liquid Storm Power Wash Detergent)
 - Sanitizing Solution (KAY Sink Sanitizer)

WARNING: DISCONNECT POWER BEFORE CLEANING! DO NOT USE SOLVENTS OR OTHER CLEANING AGENTS, AS THEY MAY ATTACK THE PLASTIC/METAL.

Step	Action	Photo
1.	Wash and sanitize hands.	
2.	A. Change ice switch to "Manual" mode and remove all ice from ice chute (for ED250 Pro Gate).	
	B. Remove merchandiser (for ED300).	
3.	Remove the ice chute (snap fit) by spreading the sides apart slightly to disengage the tabs in the cover from the ice chute and sliding down to remove the cover. The ice chute (rear half) are now exposed for cleaning.	
	 <p style="text-align: center;">ED250 Pro Gate</p>	 <p style="text-align: center;">ED300</p>

4.	Remove the black plastic access cover for the air cylinder from the splash panel (ED250 Pro Gate only).	
5.	Dip and hold the ice chute in the 1st compartment of the 3 compartment sink. Rinse thoroughly in the 2nd sink compartment.	
6.	Sanitize parts in the 3rd sink compartment. Make sure sanitizer solution reads between 100-200 PPM.	
7.	A. Reassemble the air cylinder access cover and ice chute (ED250 Pro Gate only).	B. Reinstall the Ice chute (ED300).
	 <p data-bbox="470 1633 673 1663">ED250 Pro Gate</p>	 <p data-bbox="1104 1537 1185 1564">ED300</p>