

ADJUSTMENT PROCEDURES

LEV DISPENSING VALVE PORTION CONTROL

The following are instructions for adjusting the LEV Dispensing Valve Control for size of drinks dispensed. Retain these instructions as part of your equipment manual.

ADJUSTING PORTION CONTROL FOR SIZE OF DRINKS DISPENSED

1. **Step 1.** Press both outside buttons at the same time as shown. Hold them “pressed in” until light starts blinking

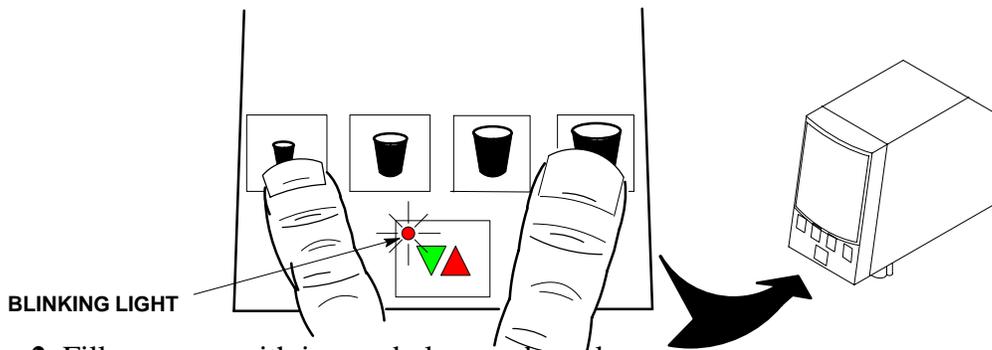


2. **Step 2.** Fill your cup with ice, and place under valve.
3. **Step 3.** Push the button of the size too be set (small, medium, large or extra large). Hold button in until cup fills, then release button..
4. **Step 4.** Wait for foam to settle, then push the button again for top off, then release button.
5. **Step 5.** Repeat steps 2, 3 and 4 for remaining drink sizes.
6. **Step 6.** After setting all drink sizes on each valve, press and release the “cancel/pour” to return to dispensing operation. The blinking light will go out.



7. **Step 7.** Repeat steps 1 thru 6 for remaining valves.

Adjustment Procedure

coded Autoselect portion control with top off feature

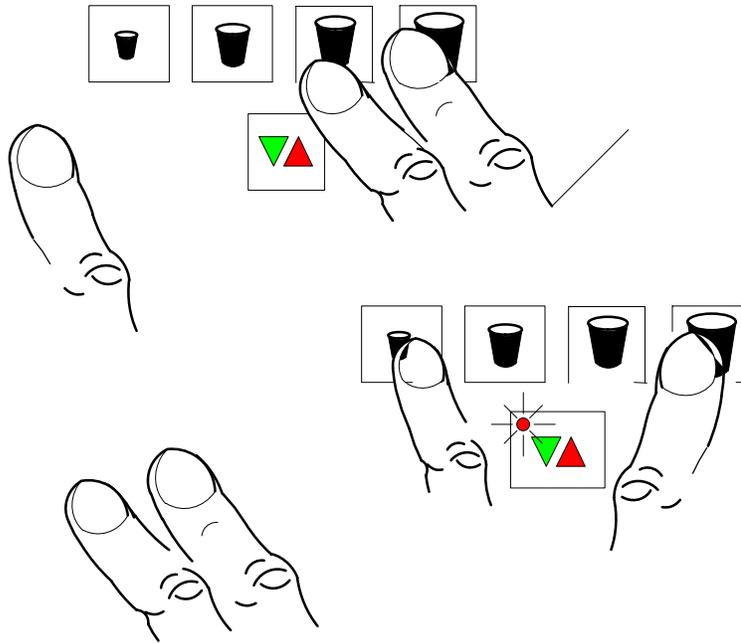


Adjustment Procedure

coded Autoset portion control with top off feature

Follow these instructions to program the portion size of each drink.

Step 1. Press both outside buttons at the same time as shown. Hold them "pressed in" until light starts blinking

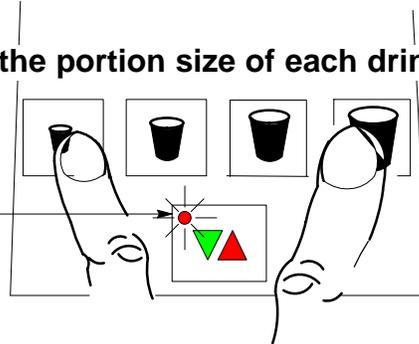

Step 2. Fill your cup with ice, and place under valve.

Step 3. Push the button of the size to be set (small, medium, large or extra large). Hold button in until cup fills, then release button..

Step 4. Wait for foam to settle, then push the button again for top off, then release button.

