

Additional Insulation Foam* *optional*

Remove the white adhesive backing from one end of the Insulation Foam and press against the Mandible surface



"Fu Manchu" configuration provides improved wind protection for the boom mic with less breath restriction



"Chin Foam" configuration provides best wind protection for boom mic but has more breath restriction



RAT^H



Rotarywing Advanced Tactical Helmet

Maxillofacial Mandible Manual



Lightweight environmental protection that provides improved comfort, boom-mic noise attenuation and overall speech intelligibility

One-handed operation for face access



100 Cargo Center Drive
Blountville, TN 37617
423-574-2139
www.vne-aero.com


Document Version 2025.11.18

MANDIBLE INSTALLATION


*** Mandibles are helmet size specific **
(sizes are marked on packaging and Side Arms interior)*

Side Arm - RIGHT Side Attachment


Slide the Interior Tab on the mandible Side Arm (RIGHT) into the front opening on the right helmet Rail

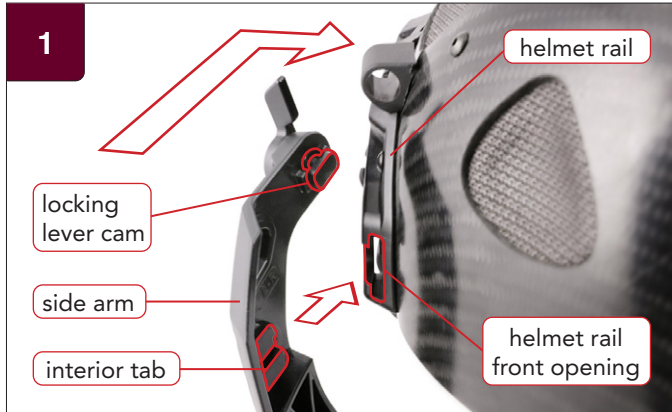

Continue sliding the Side Arm onto the helmet Rail until the Locking Lever Cam fits into the horizontal Rail Slot

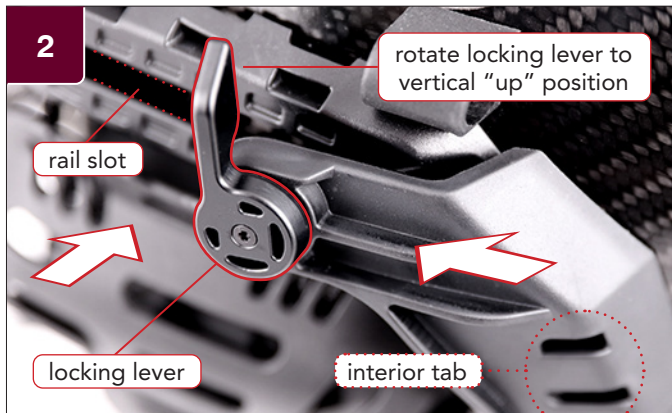


Once the Locking Lever Cam is inside the Rail Slot, rotate the Locking Lever down to the horizontal position

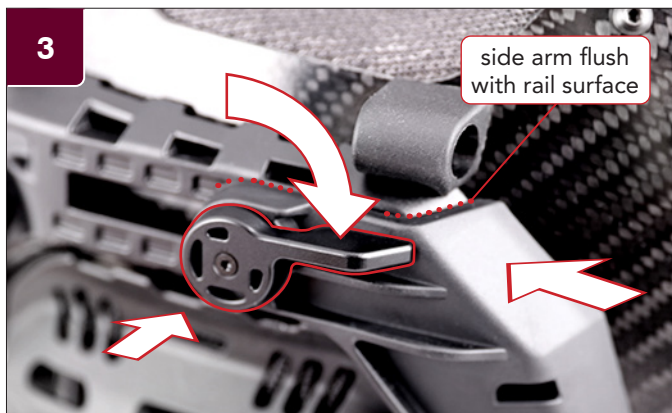


Side Arm - LEFT Side Attachment

Actuate the helmet Visor Knob to the down position. Repeat STEP 1 procedure to mandible Side Arm (LEFT)

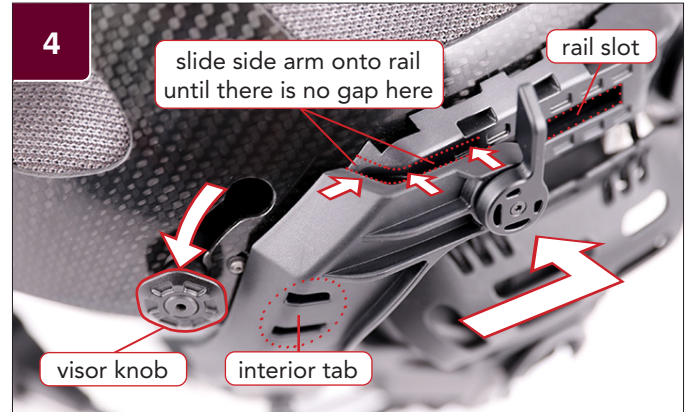

Repeat STEP 2 procedure to mandible Side Arm (LEFT)
* ensure Side Arm interior is flush with the Helmet Rail

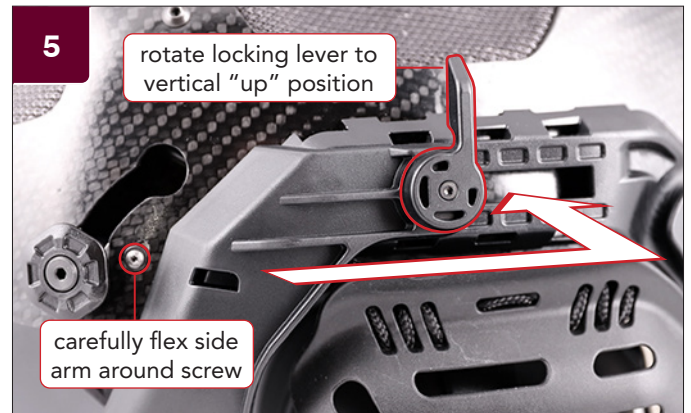

Repeat the STEP 3 procedure to lock the mandible Side Arm (LEFT) onto the helmet Rail

