

1

Cut the roofing sheet for the pipe size (template provided)



2

Put the ProFlash sheet from left to right, peeling off the perforated backing



3

Place the BAL mesh over the ProFlash sheet



4

Put the ProFlash tape along the flue ensuring there are no gaps between the ProFlash and the flue




5

Cut the flashing to the right pipe size



6

Slide the flashing over the flue

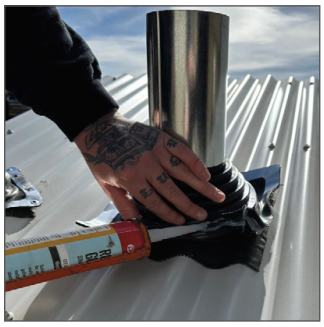

7

Apply the sealant and form the flashing to the roof profile



8

Start with screwing one vertical edge and then move across with the screws being between the valleys



9

If required, trim the excess BAL mesh




10

Flash Kit Installation complete. Mount Isodrive® motor (refer to instructions) or vent cap

BAL-40 CERTIFIED

INSTALL VIDEO

NOTE: Ensure all edges of the ProFlash sheet are completely sealed and if required reinforce them with a bead of silicone for improved protection.

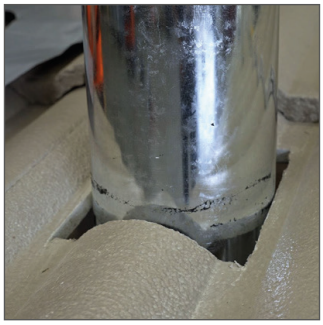


1

Make a hole in the roof tile for the required pipe size and insert the pipe



2

Put the ProFlash sheet over the pipe and peel off the backing from left to right, forming to the tile profile.

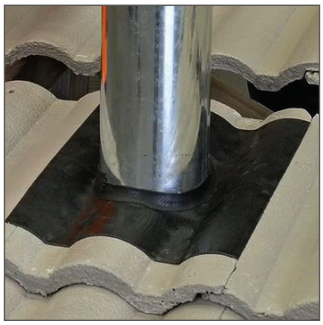

3

Put the ProFlash tape along the pipe ensuring there are no gaps between the ProFlash and the pipe



4

Flash Kit Installation complete. Mount Isodrive® motor (refer to instructions) or vent cap

BAL-29 COMPLIANT

NOTE: Ensure all edges of the ProFlash sheet are completely sealed and if required reinforce them with a bead of silicone for improved protection.

View the full range of Schweigen spare parts and accessories

schweigen

Australia 4/1-5 Lake Drive, Dingley Village, Victoria 3172. **Phone** 1300 881 693
Email sales@schweigen.com.au **Web** www.schweigen.com.au