
TEMPLATE FOR ESG
F08 & F08T
SARGENT 8800 SERIES
RIM EXIT DEVICE

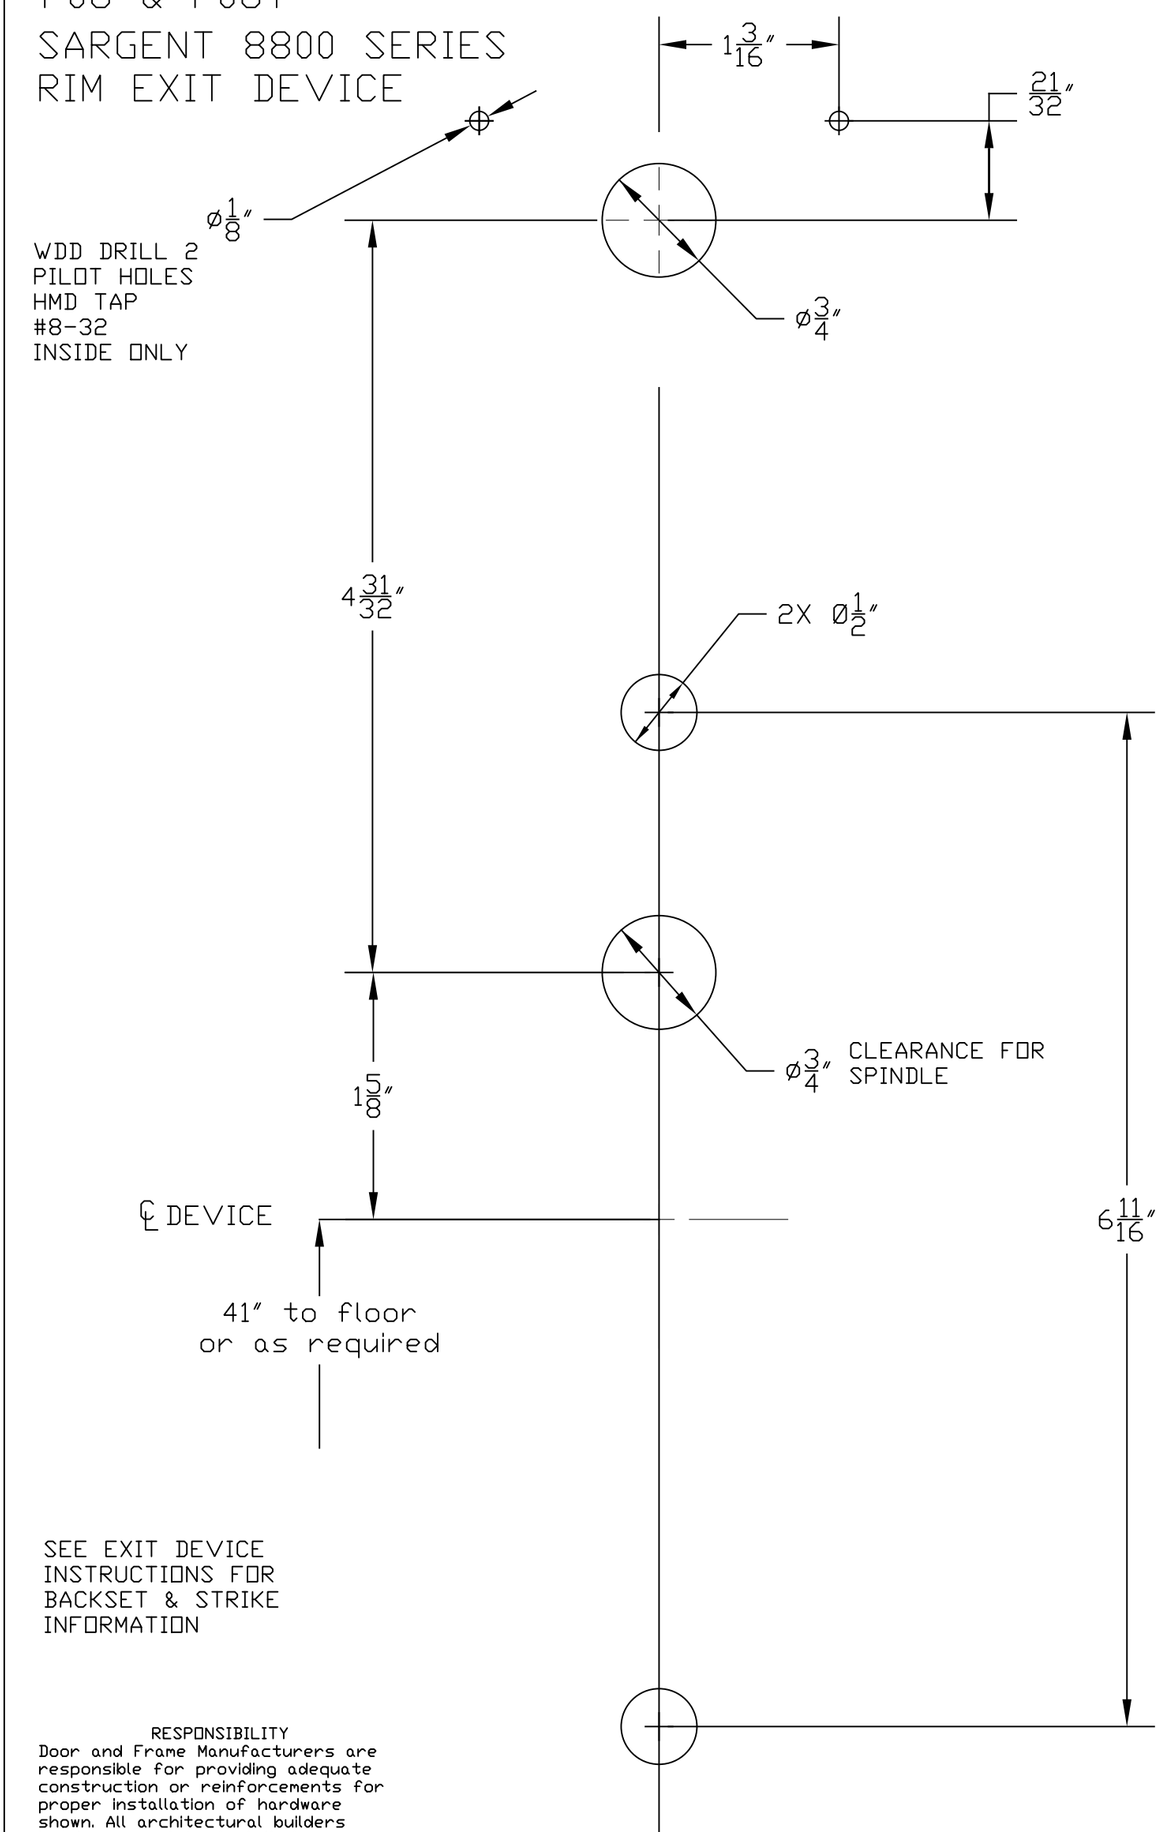

SEE EXIT DEVICE
INSTRUCTIONS FOR
BACKSET & STRIKE
INFORMATION

RESPONSIBILITY
Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames, regardless of the type, material, or method of construction.

TEMPLATE SCALE IS 1:1 IF THIS MEASURES 1":

CRG
10/23/26