INSTALLATION INSTRUCTIONS

For Quest wire Harness Repair

(Glendale Heights Work Instruction GHWI-01711D)

SAFETY INSTRUCTIONS

WARNING:
Before starting installation, read and understand all safety label and warnings on the machine. Also review and understand all safety instructions in the owners, installation and service manuals.

Failure to comply could result in serious injury, death or damage to the equipment.

QUALIFIED SERVICE PERSONNEL

WARNING:
Only trained and certified electrical, plumbing and refrigeration technicians should service this unit.

All wiring and plumbing must conform to national and local codes. Failure to comply could result in serious injury, death or equipment damage.

SAFETY PRECAUTIONS

This unit has been specifically designed to provide protection against personal injury. To ensure continued protection observe the following:

WARNING:
Disconnect power to the unit before servicing. Follow all lock out/tag out procedures established by the user. Verify all power is off to the unit before performing any work.

Failure to comply could result in serious injury, death or damage to the equipment.

CAUTION:
Always be sure to keep area around the unit clean and free of clutter.

Failure to keep this area clean may result in injury or equipment damage.

© 2009-2014, Cornelius Inc.

ASSEMBLY INSTRUCTIONS

1. Drill a hole in the lower left corner of the plastic cabinet using a 3/8” (0.375) Forstner drill bit.

NOTE: Make sure drill bit is positioned with one side touching the left side of the cabinet and the other touching the wire cut-out.

2. Drill hole in cabinet about ¼ inch deep through plastic.

CAUTION:
Make sure the drill is straight to avoid damaging wires.

3. Using flat blade screwdriver remove remaining plastic under drilled hole.

NOTE: Carefully remove the Sharp Point (using a box cutter) from the drilled area.

 © 2009-2014, Cornelius Inc.

4. Apply a light coating of liquid tape to the damaged area of the harness wires

NOTE: Liquid tape should be obtained from a home improvement or automotive parts/supply store.

5. Install the 2 inch piece of black conduit over the two harness wires. Then slide the conduit back into the cabinet (a distance of approximately 1/2 inch).

6. Using the needle nose pliers and wire cutters Install wire ties on the ends of the conduit to secure it in place.

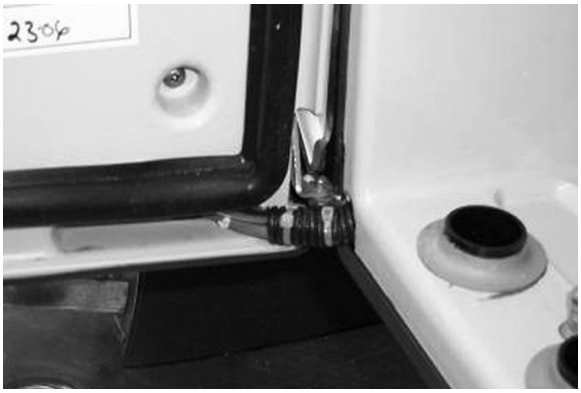

Tools and Materials Photo Index

NOTE: Photographs not to scale.

3/8 (10 mm) Forstner Drill Bit

Cornelius part number 620047853

Electric Drill

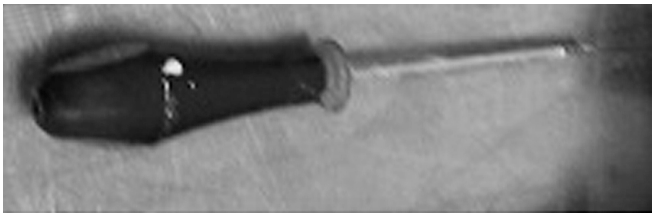

Screwdriver

Box Cutter

Needle Nose Pliers

Wire Cutter

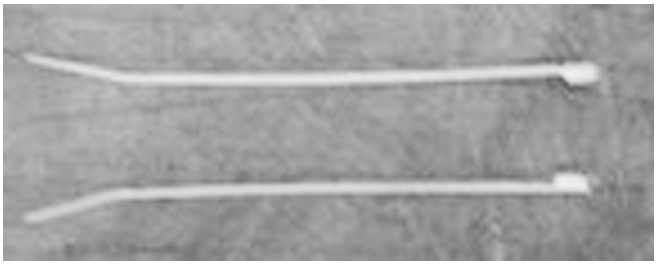

Wire Ties

Cornelius Part Number 0400056000

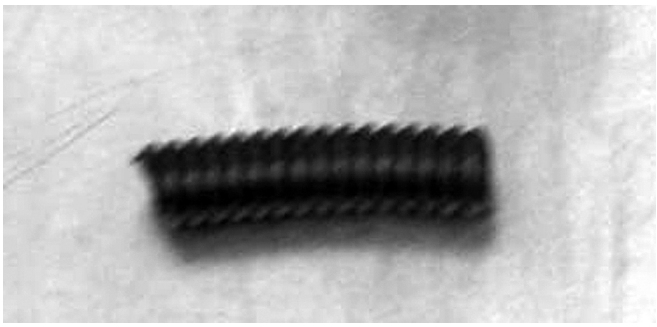

Black Conduit

Cornelius Part Number 620047852

Liquid Tape

 © 2009-2014, Cornelius Inc.