

# Vox Forum<sup>®</sup>

## M & N - Series

Tel 800 668 9318  
Tel 416 298 5700  
Fax 416 298 9535  
mail@nienkamper.com  
www.nienkamper.com

### PRE-WIRED OR SITE-WIRED INSTALLATION GUIDE



#### MODEL FORUM M-SERIES ALL CONFIGURATIONS




#### MODEL FORUM N-SERIES ALL CONFIGURATIONS



It is important to protect furniture worksurface while installing this product!

## REMOVING A MODULAR FACEPLATE

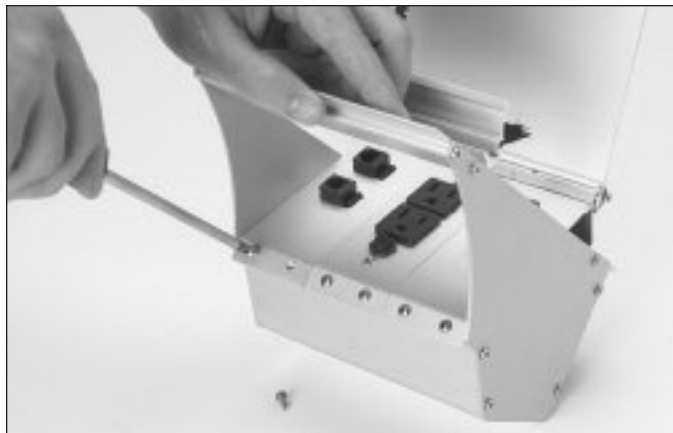

1

- If faceplate modules have been specified for site wired connections, it will be necessary to remove faceplate modules.
- With a Phillips head screw driver, remove the two machine screws at the base of the faceplate module to be removed.



2

- Once the screws have been removed from the faceplate, carefully lift from the bottom and swivel the faceplate out of the assembly.

## INSTALLING MODULAR FACEPLATE



3

- Once connections have been made, reposition faceplate, re-install screws and install assembly in table top as per 4, 5 and 6.

## INSTALLING THUMBSCREWS



4

- Retrieve the swivel catches from the packaging.
- From the underside of the table top carefully thread the plastic thumbscrews into inserts around the square hole in the top.
- Do not tighten completely.




5

- Position the Vox Forum in the opening and carefully ease up into the square hole in the table.
- Pay attention to the desired direction of the lid on the unit when inserting.

Important!  

- This electrical device is provided fully wired and should not be tampered with.
- Tampering with this device voids warranty and may cause electrical shock.
- Please note, for detailed instructions about this Vox Forum - see the last page after the installation photographs.
- For information please call Nienkamper Customer Service at 1-800-668-9318.
- For e-mail inquiries: [mail@nienkamper.com](mailto:mail@nienkamper.com)

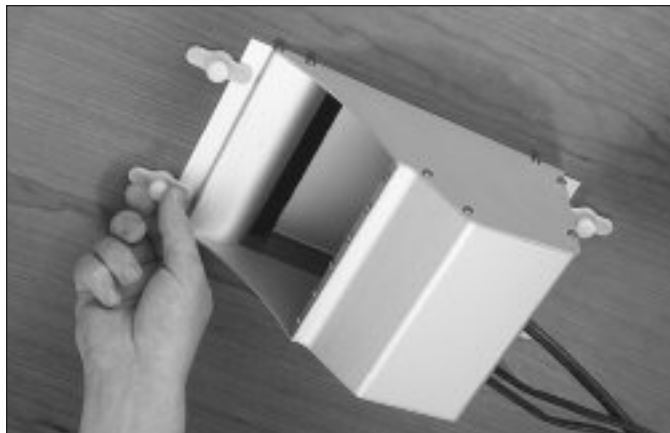

6

- Rotate the swivel catches over the edge of the Forum and tighten the thumb screw fasteners hand tight.

## WIRE MANAGEMENT



7

- Adhesive wire management strips are supplied and can be positioned directly behind the Vox Forum or where required.
- Cables can be inserted into 1 of 3 channels.



8

- Tables manufactured with rail supports are supplied with wire management "U" clips.
- Cables can be stored and routed along the rails to the table bases, using these clips.
- Plug cables into source.



9

- To access connections, simply open the lid and insert desired plug.

## INSTALLATION AND OPERATING INSTRUCTIONS VOX FORUM M & N-SERIES

### Please read instructions carefully

- WARNING:**
- Electrical components are provided fully wired. These components should not be tampered with.
  - Maximum two power output modules can be installed to one appliance.
  - This installation should be made by a qualified service person and should conform to all local codes.
  - More than one power supply, disconnect all power supplies before servicing.
- GENERAL USE:**
- Provides an access point to the top of a table surface to allow plug in convenience for audio, video, voice/data/power receptacles.
  - From the top of the table the flip up door can be held open while plugging into the device.
  - Requires no maintenance but care should be taken to keep the flip up door closed to reduce the risk of foreign matter or liquids from falling into the assembly.
  - Flexible power cord assemblies include a reset fuse in case the power circuit is overloaded. To reset the fuse, simply push the small round black button on the faceplate.
  - This product is intended for office equipment and laptop computer use only. Heavy equipment or maintenance equipment should not be plugged into the device.
  - For PLUGGABLE EQUIPMENT, the socket-outlet shall be installed near the equipment and shall be easily accessible.
  - For PERMANENTLY CONNECTED EQUIPMENT, a readily accessible disconnect device shall be incorporated in the building installation wiring.
  - Site wired power modules are provided with a 3' long shielded metallic cable fully wired to the receptacle. Simply connect metallic cable end to source.



Shielded Metallic Cable

- QUESTIONS:**
- Please call: Nienkämper Customer Service at 1-800-668-9318.
  - Email: [mail@nienkamper.com](mailto:mail@nienkamper.com)