



Amphetamine Methamphetamine Multi-Use Tests

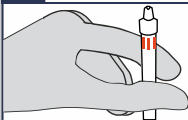

DR-5000



Read Before Use

As a precaution, gloves and eye protection should be worn when handling substances and using test units. If a spill occurs, thoroughly rinse affected area with water. Keep out of reach of children. Store the tubes in a dark place, not exposed to light. All results are presumptive. If necessary, further testing by a competent drug testing lab can provide additional identification.

This test consists of one tube. Since the tube contains enough liquid to test many samples, do not dispose of the tube until all desired samples are tested. For additional tests with the same tube, take a new sheet of test paper from the pad to test the next sample.

Test Preparation	Substance		Traces	
	1	2		
	Remove a sheet of test paper from the pad.	Touch the test paper on the suspected substance.	Wipe the test paper across the suspected surface.	
				
Identification	3	4		
	With thumb and forefinger , squeeze the test tube until the ampule breaks.	Apply a drop to the test paper.		
				

CAUTION:

The reagent in the tube contains an acid.
Avoid skin contact with the reagent.

Results		The appearance of a reddish-orange color <u>within one minute</u> indicates the presence of Amphetamine or Methamphetamine .
		The appearance of a purple color <u>within one minute</u> indicates the presence of an opiate such as Heroin , Morphine or Codeine .
		The appearance of a dark purple to black color indicates the presence of Ecstasy/MDMA .
		If none of the above colors develop, the above listed drugs are <u>not</u> present.
Disposal		When time comes to dispose of the tube, dilute the remaining reagent with water before placing in the trash.
		After diluting the reagent, the tube is safe to dispose of in the trash.

01-19



Manufactured by IDenta Ltd * Made in Israel
www.identa-corp.com * Patented Technology

LOT:

EXP: