
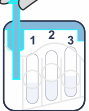
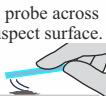
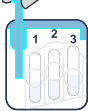


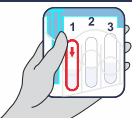


Read Before Use

As a precaution, gloves and eye protection should be worn when handling substances and using test units. Do not puncture any part of unit. Do not remove probe once a capsule is broken. In the unlikely event of a spill, rinse affected area thoroughly with water. Keep out of reach of children. All results are presumptive.



Test Preparation	1	Remove the probe from test unit. 	2	Sample suspected substance or surface. Touch or Swipe Touch probe to the suspected substance.  Swipe either side of the probe across the suspect surface. 	3	Secure probe into test unit. Press firmly. 	STOP Do not continue unless probe is secured properly in place.

Chamber 1 Identification	4	From both sides of the kit, squeeze on the circle of Chamber 1 until the capsule breaks. 	5	Gently shake test unit for 2-3 seconds. 

Chamber 1 Results		The appearance of a brown-violet color indicates the presence of TNT , Tetryl or Composition B.
		The appearance of a blue-green color indicates the presence of DNT .
		If either color develops, proceed to Disposal. If no color develops, proceed to Step 6.

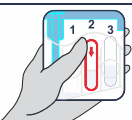Chamber 2 Identification	6	From both sides of the kit, squeeze on the circle of Chamber 2 until the capsule breaks. 	7	Gently shake test unit for 2-3 seconds. 

Chamber 2 Results		The appearance of an orange/red/violet color indicates the presence of RDX (C-4) , PETN , SEMTEX, Dynamite, NG, Smokeless Powder, Tetryl, Composition B, EGDN, Nitrocellulose, R-Salt or Detasheet.
		If a color develops, proceed to Disposal. If no color develops, proceed to Step 8.

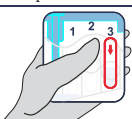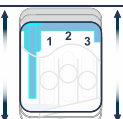Chamber 3 Identification	8	From both sides of the kit, squeeze on the circle of Chamber 3 until the capsule breaks. 	9	Vigorously shake test unit up and down. 

Chamber 3 Results		The appearance of an orange/pink/violet color indicates the presence of a Nitrate Salt : Potassium Nitrate (Black Powder), Ammonium Nitrate (ANFO), Urea Nitrate Calcium Nitrate or Sodium Nitrate.
		If no color develops, the above substances are <u>not</u> present.



Disposal

The test kit is safe to dispose of in the trash.

01-39