

NITRATES IDENTIFICATION

Substance & Trace Test




**Read
Before
Use**

As a precaution, gloves and eye protection should be worn when handling substances and using test units. Do not puncture any part of unit. Do not remove probe once a capsule is broken. In the unlikely event of a spill, rinse affected area thoroughly with water. Keep out of reach of children. All results are presumptive.

Test Preparation

1

Remove the probe from test unit.



2

Sample suspected substance or surface.

Touch or Swipe

Touch probe to the suspected substance.




Swipe either side of the probe across the suspect surface.



3

Secure probe into test unit. Press firmly.




STOP

Do not continue unless probe is secured properly in place.

Identification


4

From both sides of the kit, squeeze on the circle of **Chamber 1** until the capsule breaks.

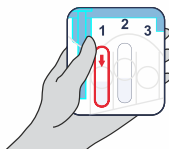

5


Gently shake test unit for 2-3 seconds.

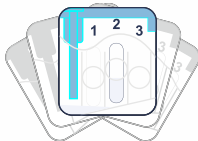

Identification


6

From both sides of the kit, squeeze on the circle of **Chamber 2** until the capsule breaks.

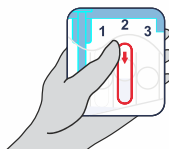

7

Vigorously shake test unit up and down.

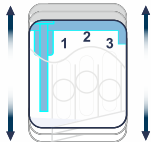

Results



The appearance of an orange/pink/violet color indicates the presence of a **Nitrate Salt**: Potassium Nitrate (Black Powder), Ammonium Nitrate (ANFO), Urea Nitrate, Calcium Nitrate or Sodium Nitrate.



If no orange/pink/violet color develops, a Nitrate Salt is **not** present.



Disposal

The test kit is safe to dispose of in the trash.

01-19