

PERCHLORATE IDENTIFICATION

Substance & Trace Test




**Read
Before
Use**

As a precaution, gloves and eye protection should be worn when handling substances and using test units. Do not puncture any part of unit. Do not remove probe once a capsule is broken. In the unlikely event of a spill, rinse affected area thoroughly with water. Keep out of reach of children. All results are presumptive.

Test Preparation

1

Remove the probe from test unit.

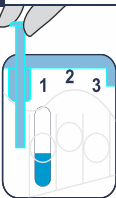

2


Sample suspected substance or surface.

Touch or Swipe

Touch probe to the suspected substance.




Swipe either side of the probe across the suspect surface.

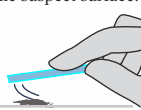

3

Secure probe into test unit. Press firmly.

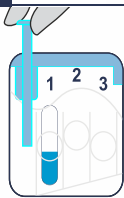


STOP

**Do not
continue
unless
probe is
secured
properly
in place.**

Identification


4

From both sides of the kit, squeeze on the circle of **Chamber 1** until the capsule breaks.

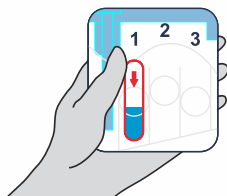

5

Gently shake test unit for 2-3 seconds.

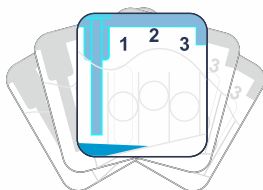

Results



The appearance of violet color particles adhering to the sampler tip or precipitating out of solution indicates the presence of a **Perchlorate Salt**.



If no violet color develops, a Perchlorate Salt is not present.



Also Note: If the liquid remains the blue color of the reagent, Perchlorate is not present.



Disposal

The test kit is safe to dispose of in the trash.

02/19