

ACETONE IDENTIFICATION

Substance Test



**Read
Before
Use**

As a precaution, gloves and eye protection should be worn when handling substances and using test units. Do not puncture any part of unit. Do not remove probe once a capsule is broken. In the unlikely event of a spill, rinse affected area thoroughly with water. Keep out of reach of children. All results are presumptive.

Test Preparation

1

Remove the probe from test unit.




2

Sample suspected substance.


Draw

Insert the pipette into the liquid and fill to the red line, then squeeze into the test unit.

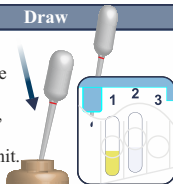

3

Secure probe into test unit. Press firmly.

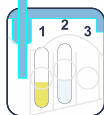

STOP

Do not continue unless probe is secured properly in place.

Identification


4

From both sides of the kit, squeeze on the circle of **Chamber 1** until the capsule breaks.



5


Gently shake test unit for 2-3 seconds.

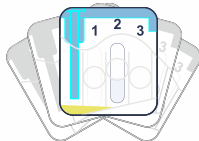

Identification


6

From both sides of the kit, squeeze on the circle of **Chamber 2** until the capsule breaks.

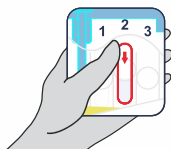

7

Gently shake test unit for 2-3 seconds.

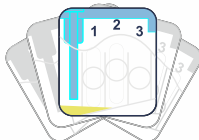

Results



The appearance of a green color indicates the presence of **Acetone**.



If no green color develops, Acetone is **not** present.



Disposal

The test kit is safe to dispose of in the trash.

01-19