

HYDROGEN PEROXIDE IDENTIFICATION

Substance Test




**Read
Before
Use**

As a precaution, gloves and eye protection should be worn when handling substances and using test units. Do not puncture any part of unit. Do not remove probe once a capsule is broken. In the unlikely event of a spill, rinse affected area thoroughly with water. Keep out of reach of children. All results are presumptive.

Test Preparation

1 Remove the probe from test unit.

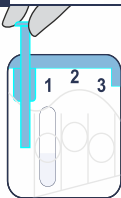


2 Sample suspected substance.

Dip

Place the absorbent paper of the probe into the liquid. Make sure the paper is wet.



3 Secure probe into test unit. Press firmly.

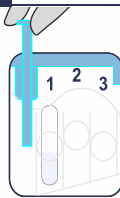


STOP


**Do not
continue
unless
probe is
secured
properly
in place.**

Identification

4 From both sides of the kit, squeeze on the circle of **Chamber 1** until the capsule breaks.

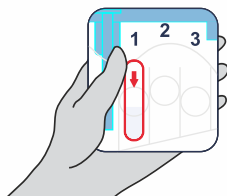

5 Gently shake test unit for 2-3 seconds.

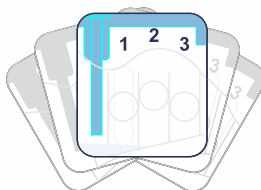

Results



The appearance of an orange or yellow color indicates the presence of **Hydrogen Peroxide**.



If no orange or yellow color develops, Hydrogen Peroxide is not present.



Disposal

The test kit is safe to dispose of in the trash.

01-19