

NITROMETHANE IDENTIFICATION

Substance Test




**Read
Before
Use**

As a precaution, gloves and eye protection should be worn when handling substances and using test units. Do not puncture any part of unit. Do not remove probe once a capsule is broken. In the unlikely event of a spill, rinse affected area thoroughly with water. Keep out of reach of children. All results are presumptive.

Test Preparation

1

Remove the probe from test unit.



2

Sample suspected substance.


Dip

Place the absorbent paper of the probe into the liquid. Make sure the paper is wet.



3

Secure probe into test unit. Press firmly.




STOP

**Do not
continue
unless
probe is
secured
properly
in place.**

Identification


4

From both sides of the kit, squeeze on the circle of **Chamber 1** until the capsule breaks.

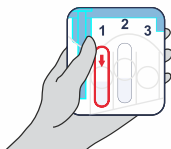

5


Gently shake test unit for 2-3 seconds.

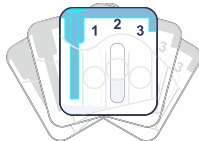

Identification


6

From both sides of the kit, squeeze on the circle of **Chamber 2** until the capsule breaks.

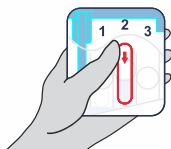

7

Gently shake test unit for 2-3 seconds.

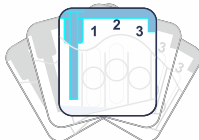

Results



The appearance of an pink to blue color indicates the presence of **Nitromethane**.



If no pink to blue color develops, Nitromethane is **not** present.



Disposal

The test kit is safe to dispose of in the trash.

01-19