





## IDC Pro Image Format + Upload Instructions

- Save images to your computer (my documents)
- Open Microsoft Paint
- Drag file from computer into Microsoft Paint
- Select "Resize"

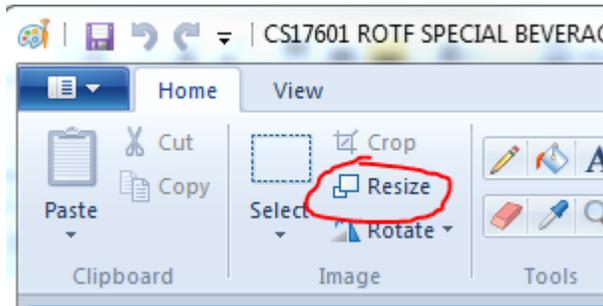


- Select "Pixels"
- Unselect "Maintain aspect ratio"
- Type in format
  - Brands = 175 x 175
  - Flavor Shots = 225 x 225

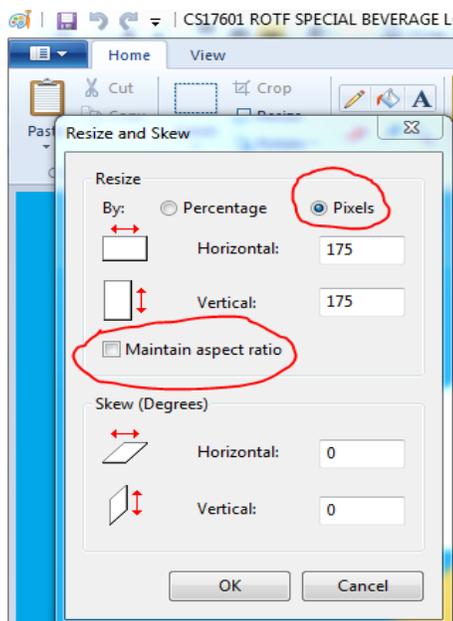



- Select “OK”
- “Save as PNG file”

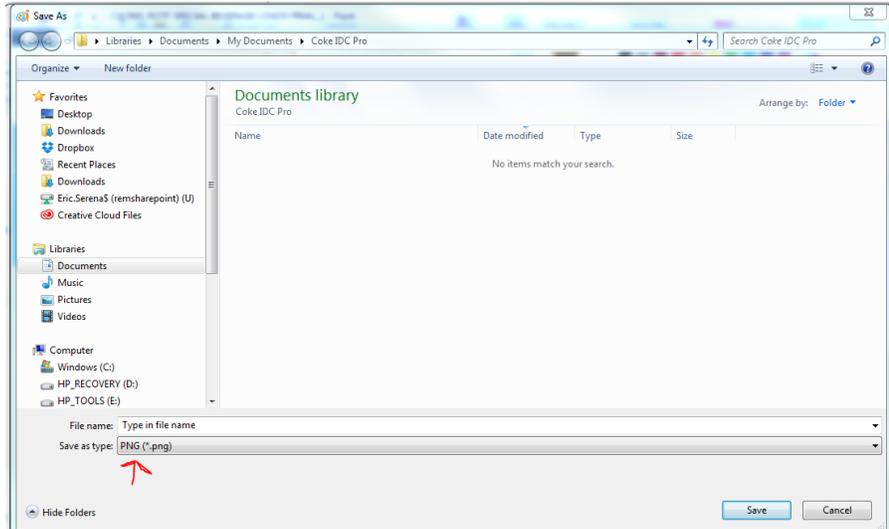

a. Access the “Syrup Edit” screen.



b. Select the  icon to add a new syrup.






- c. Select the white area under the “Name” field to edit the name of the flavor shot. Change the name to name of the new brand or flavor shot. Select Enter when finished.




- d. Select the white area under “Syrup Type” and set to “Flavor.”



- e. Select the white area under “Ratio” and set the ratio to the syrup manufacturer recommended ratio.

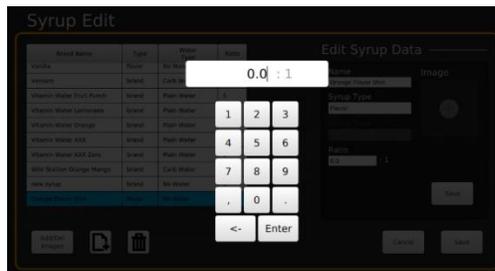

- f. Select the “Add/Del Images” button to upload the orange icon artwork from your attached USB flash drive.

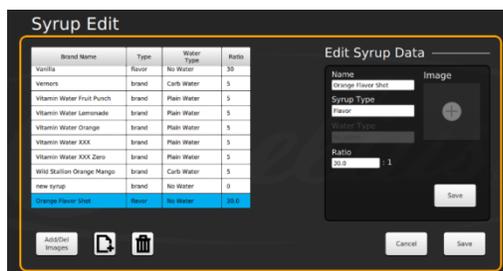




- g. You will see the name of your USB flash drive appear under “Attached Media.” Select the USB Flash drive name (example below names “Centon USB”) to view your files within the flash drive.



- h. Once you’ve opened your flash drive to view the flavor shot artwork file, select the image file so it is highlighted in blue, then select the  icon to copy this image to local media files. Select “Back” once completed.



- i. Select the  symbol under “Image” to view all syrup artwork loaded to the unit.

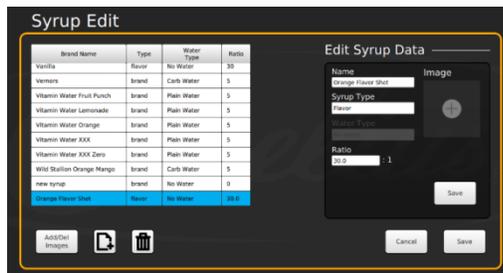



- j. Locate the newly uploaded Flavor Shot icon (orange in this example) in the library, and select. Below is what will appear in the “Edit Syrup Data” section of the screen. Select the “Save” button in the lower right hand corner to save your changes. Select the “Back” button to move back to the “Unit Setup” screen.



2. Use the Flavor /brand Mapping (found in “Unit Setup”) function to map which each flavor shot / brand. Assure to set for left and right nozzles. If you do not know what flavor is ran to what valve you can purge the valve using the “valve purge function” and determine what flavor is coming out of each valve. EX: if you purge F1 and cherry is dispensed than you can go to “Flavor Mapping” and select F1 (which may have an addition symbol in the box) icon, when you do this you will see a image library pop up, select the cherry image, hit save and you will now have your flavor mapped.



Cornelius, Inc.  
101 Regency Drive  
Glendale Heights, IL 60139

**Service UI**

Manuals	Screen Cleaning Lockout	System Messages	Versions	Password Change	Eject Thumb Drive
System Settings	Marketing Data	Update Software	Media Playlist	Coverflow Order	Syrup Shutoff
Unit Setup	Backup & Restore	Shutdown	Valve Flush	Touchscreen Calibration	

Log out

**Unit Setup**

Brk Setup	Valve Purge	Water Setup
Brand Mapping	Flavor Mapping	Syrup Edit

Back

**Flavor Mapping**

MPV  LEFT  RIGHT

F1	F2	F3	F4