




IMI CORNELIUS INC.  
One Cornelius Place  
Anoka, MN 55303-6234  
Telephone (800) 238-3600  
Facsimile (612) 422-3246

# INSTALLATION INSTRUCTION

## HANDLE/WHEEL KIT FOR C-1550XR UNIVERSAL PRE-MIX DISPENSER

These Instructions outline installation of the Handle/Wheel Kit (parts loose-shipped with the Dispenser) on the C-1550XR Universal Pre-Mix Dispenser prior to its installation. Retain these Instructions as part of your equipment manual.

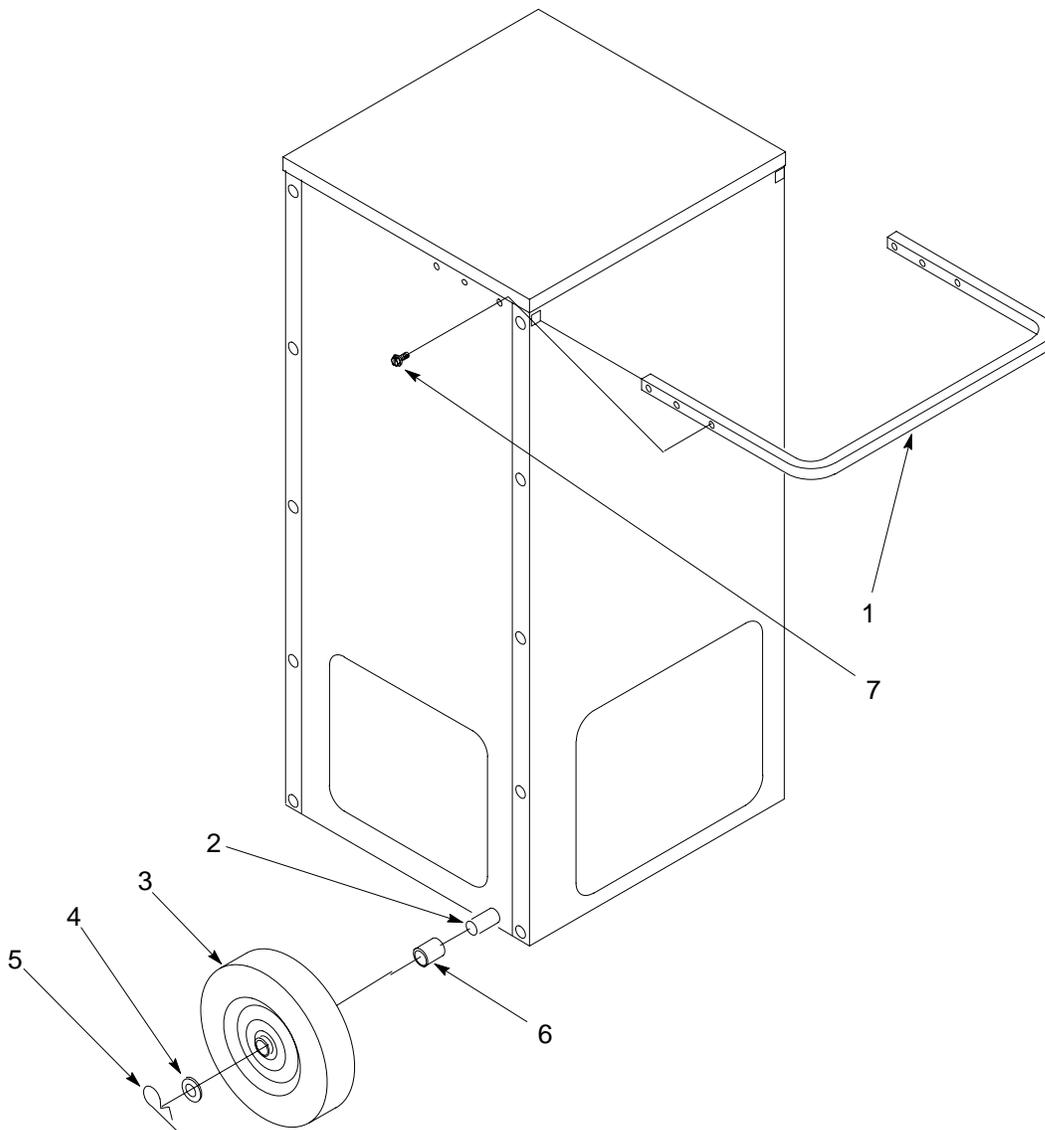

C-1550XR UNIVERSAL PRE-MIX DISPENSER

**IMPORTANT: Only qualified Personnel should install this Kit.**

1. Unpack and inspect this Kit. Make sure all items in the Kit are present and in good condition.

<b>Loose-Shipped Parts</b>			
<b>Item No.</b>	<b>Part No.</b>	<b>Name</b>	<b>Qty.</b>
1	4170	Handle	1
2	4171	Axle	2
3	4168	Wheel	4
4	4389	Washer	4
5	3225	Cotter Pin	4
6	4169	Spacer	4
7	319941	Screw, Thread Rolling, Hex Hd; No. 8-32 by 3/8-in. Long	6

## **INSTALLING HANDLE**

---

1. Remove four screws securing the Dispenser top cover, then remove the cover.
2. Slide the HANDLE (item 1) up into mounting position through two holes in Dispenser back panel (see illustration) and align with holes in each side panel.
3. Secure handle to Dispenser with six SCREWS, THREAD ROLLING (item 7).

## **INSTALLING WHEELS**

---

1. Using the Dispenser handle, raise front of the Dispenser up a minimum of 4-inches and block up with a wooden block in preparation to install the wheels.
2. Slide one AXLE (item 2) through opening in Dispenser side panel (see illustration) until axle protrudes out other side panel of the Dispenser.
3. Install SPACER (item 6) on axle, then install WHEEL (item 3), and WASHER (item 4) on the axle (see illustration). Secure wheel on axle with COTTER PIN (item 5).
4. Repeat procedure in step 3 preceding to install wheel on other end of the axle.
5. Remove wooden block from front of the Dispenser and raise and block up back side of the Dispenser.
6. Repeat preceding steps 2 through 4 to install the back axle and wheels on the Dispenser.