

# CLEANING INSTRUCTIONS FOR BIB ADAPTER KIT

## 720901114 - 2 Flavor Kit & 720901115 - 3 Flavor Kit

### SAFETY INSTRUCTIONS

 **WARNING:**

Before starting installation, read and understand all safety label and warnings on the machine. Also review and understand all safety instructions in the owners, installation and service manuals.

**Failure to comply could result in serious injury, death or damage to the equipment.**

### QUALIFIED SERVICE PERSONNEL

 **WARNING:**

Only trained and certified electrical, plumbing and refrigeration technicians should service this unit.

**All wiring and plumbing must conform to national and local codes. Failure to comply could result in serious injury, death or equipment damage.**

### SAFETY PRECAUTIONS

This unit has been specifically designed to provide protection against personal injury. To ensure continued protection observe the following:

 **WARNING:**

Disconnect power to the unit before servicing. Follow all lock out/tag out procedures established by the user. Verify all power is off to the unit before performing any work.

**Failure to comply could result in serious injury, death or damage to the equipment.**

 **CAUTION:**

Always be sure to keep area around the unit clean and free of clutter.

**Failure to keep this area clean may result in injury or equipment damage.**

## CLEANING INSTRUCTIONS

1. Disconnect the adapter assembly from juice box. Pull back on plunger until disengaged.



**Figure 1.**

2. Remove connector by sliding off the back fitment as shown.



**Figure 2.**

3. With the box removed from unit, loosen thumbscrew and remove. Remove the hold down bracket itself.



**Figure 3.**

4. Pull up and remove the adapter assembly from dispenser.



**Figure 4.**

5. Disassemble the nozzle from the adapter assembly by turning clockwise.

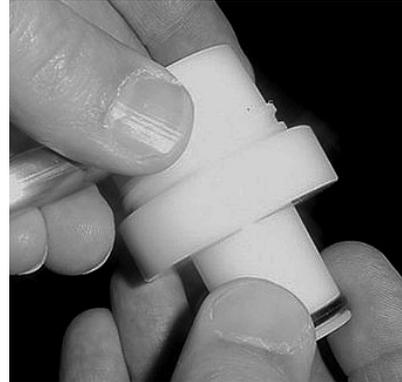


Figure 5.

6. Pull and remove the plug on the connector assembly as shown.

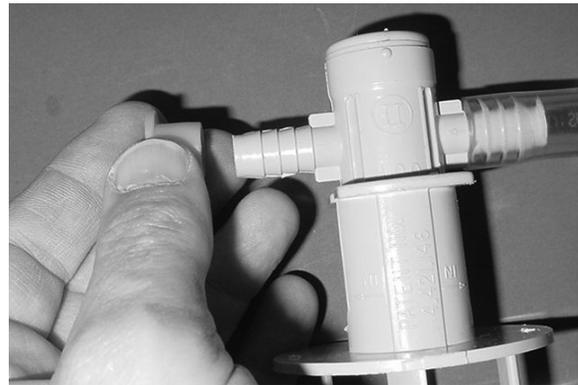


Figure 6.

7. Clean and sanitize all the parts shown here. Prepare a clean container; with two 2 oz. packets of a Green Label chlorine based sanitizing solution and 4 gallons of potable water. This provides a 200-PPM solution.

**IMPORTANT: Use potable water at 80-100° F only. Water hotter than this breaks down the chlorine and minimizes sanitation.**

Agitate the parts vigorously and let them to soak for two minutes. Rinse thoroughly with tap water before Re-assembling. This should be done on all assemblies.

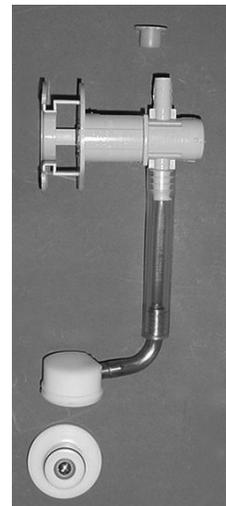


Figure 7.

8. Reassemble the adapter assembly. Replace the nozzle assembly by turning it counter clockwise as shown.



Figure 8.

9. Be sure it is tightened down to prevent concentrate leaks. Cap is pressed on to the open barb end.

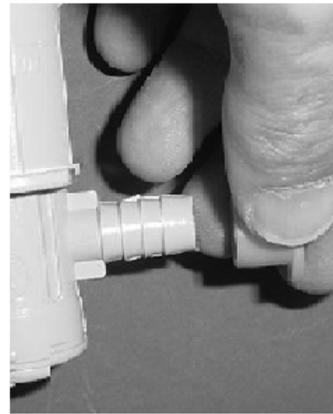


Figure 9.

10. Reinstall the nozzle and connector assembly to the dispenser. Insert into the receptacle and push down until it is seated. Be sure it is seated firmly.

**NOTE: To make installation easier, wet the O-Ring before inserting it.**



Figure 10.

11. Replace the hold down bracket. Line up the hole in the bracket with insert it on the platform.



**Figure 11.**

12. Secure with the thumbscrew provided Concentrate box can now be reloaded and connected.



**Figure 12.**