




INSTALLATION INSTRUCTIONS

O-RING REPLACEMENT KIT

(P/N 45026-100)

- 1) Remove concentrate tanks from refrigerated compartment.
- 2) Remove dispensing platform, disconnect power and water before removing.
- 3) Disassemble platform in order to remove bottle adaptor assembly.
- 4) Disassemble bottle adaptor and remove o-rings.
- 5) Replace o-rings with new supplied o-rings and reassemble bottle adaptor.
- 6) Reassemble dispensing platform and reinstall into unit.
- 7) Replace concentrate tanks into refrigerated compartment.

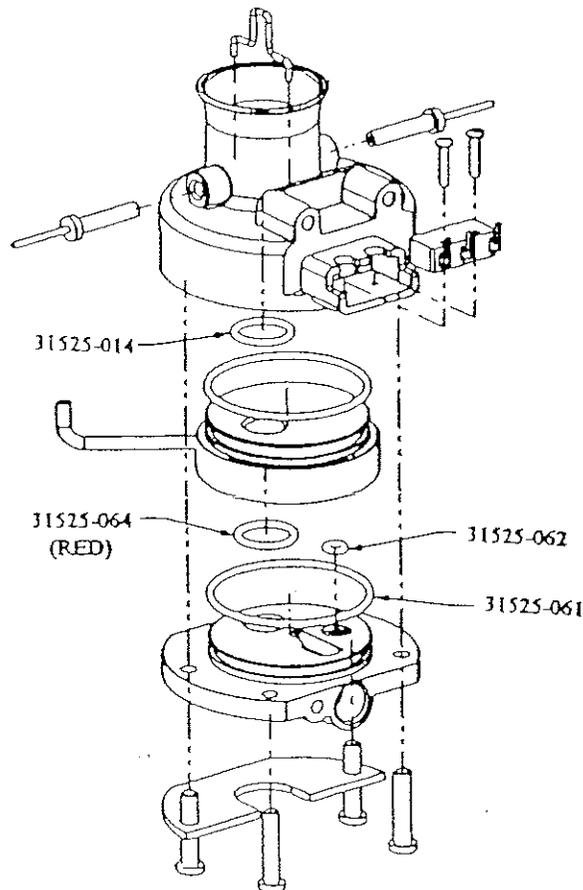

P/N 85304 REV.A