


Jupiter 550 see through


weight: 173 kg

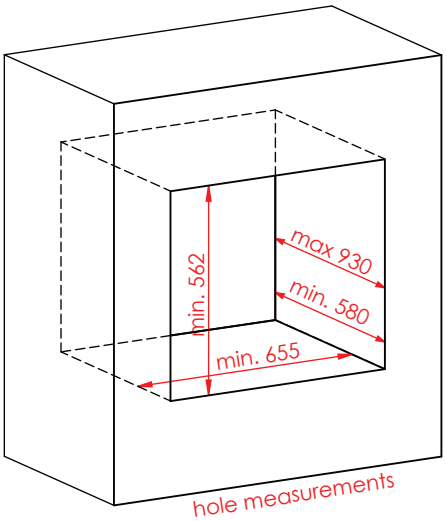


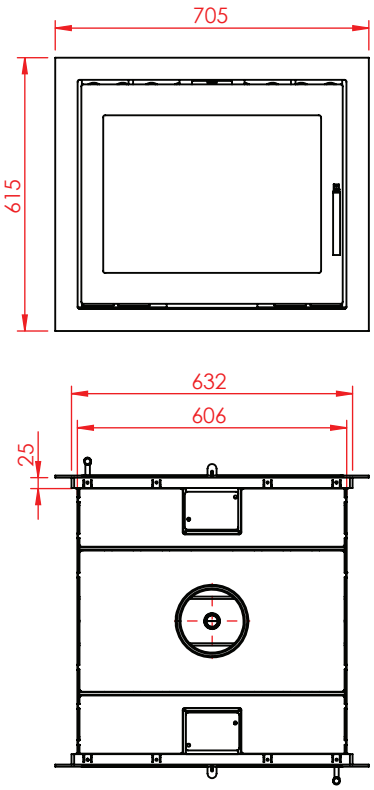


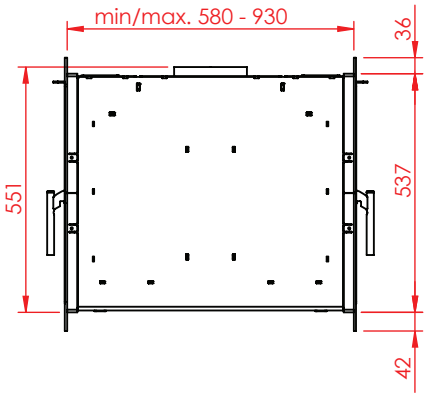


Jupiter 550 see through

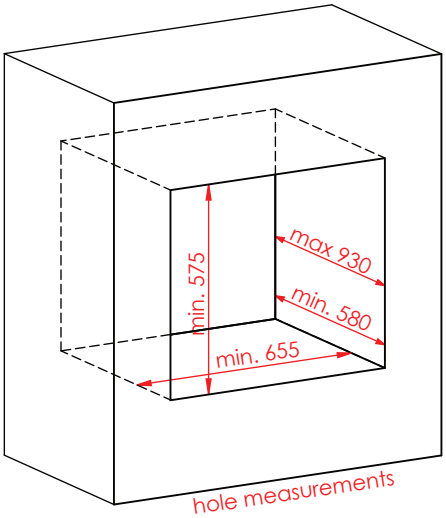

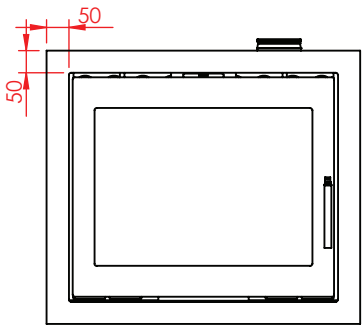

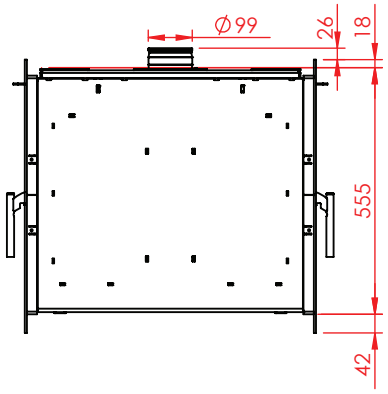


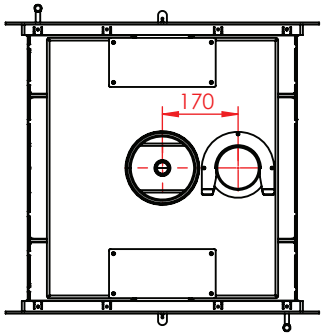



Jupiter 550 see through, airbox on top

Clearance to combustible materials

Jupiter fireplace inserts see through	dS	dS[1] note 1	dF note 2	dB note 2	dP	dL note 3	dC note 4
Jupiter 470 vertical	350	250	0/650	300	1100	700	400
Jupiter 550 vertical	350	250	0/650	300	1100	700	400
Jupiter 470	350	250	0/650	300	1100	700	400
Jupiter 550	350	250	0/650	300	1100	700	400

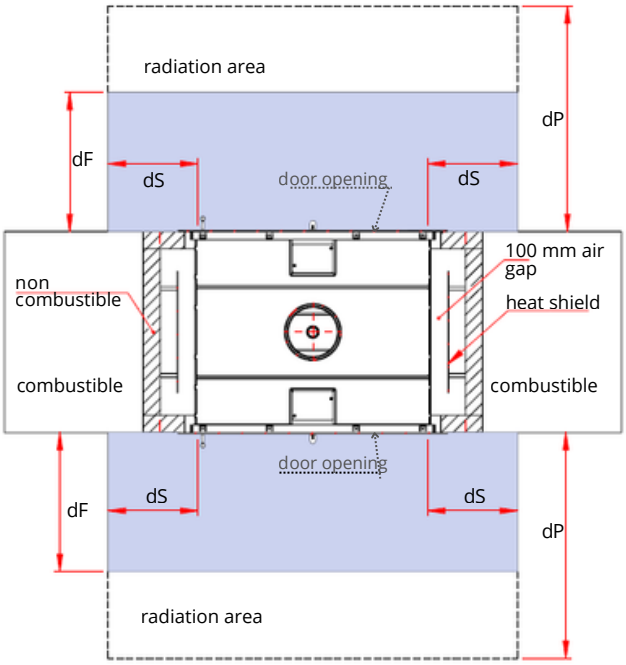

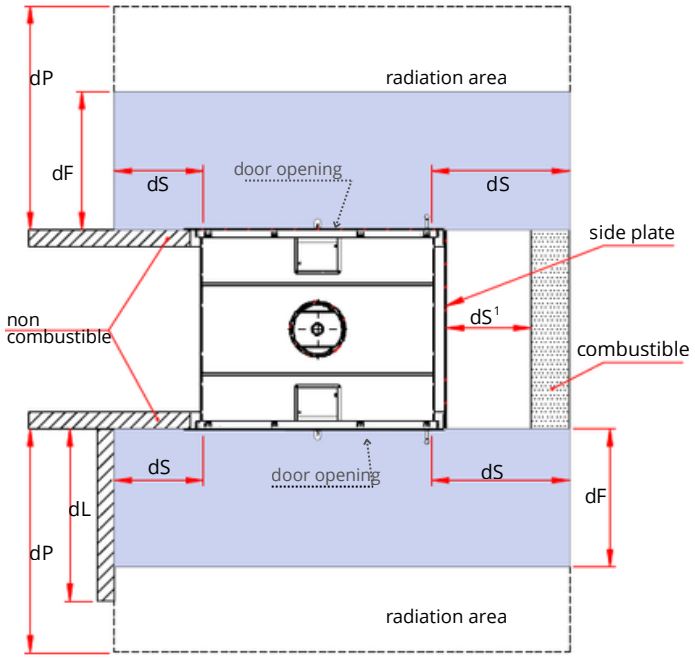

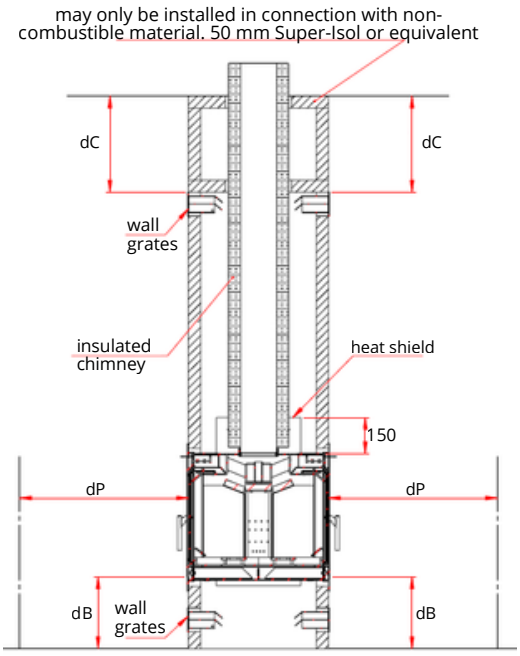

Note 1: dimension measured at a closed side plate
- measured from the edge of the door

*Be aware that the **dS** clearances in front of the insert must still be respected.*

Note 2: safety distance to combustible floor
- measured from the floor to the underside of the door edge:
***dB** ≥ 300 mm = **dF**: 0 mm*
***dB** < 300 mm = **dF:** 650 mm*

Note 3: measured from the front edge of the door when ***dS*** < 350 mm


Note 4: measured from the top edge of the wall grates

Heat shields: on all three sides, positioned from the bottom of the stove up to 150 mm above the top of the stove

To ensure correct air circulation within the fireplace cavity, at least 470 cm² of ventilation must be provided below and 630 cm² above the insert. The ventilation openings must be positioned as high as possible, but at least 400 mm from the ceiling.

Safety distance to staircase/combustible ceiling

If combustible staircases or a combustible ceiling are located above the fireplace insert – measured from the top edge of the door to the nearest combustible part of the staircase: **dC** min. 600 mm

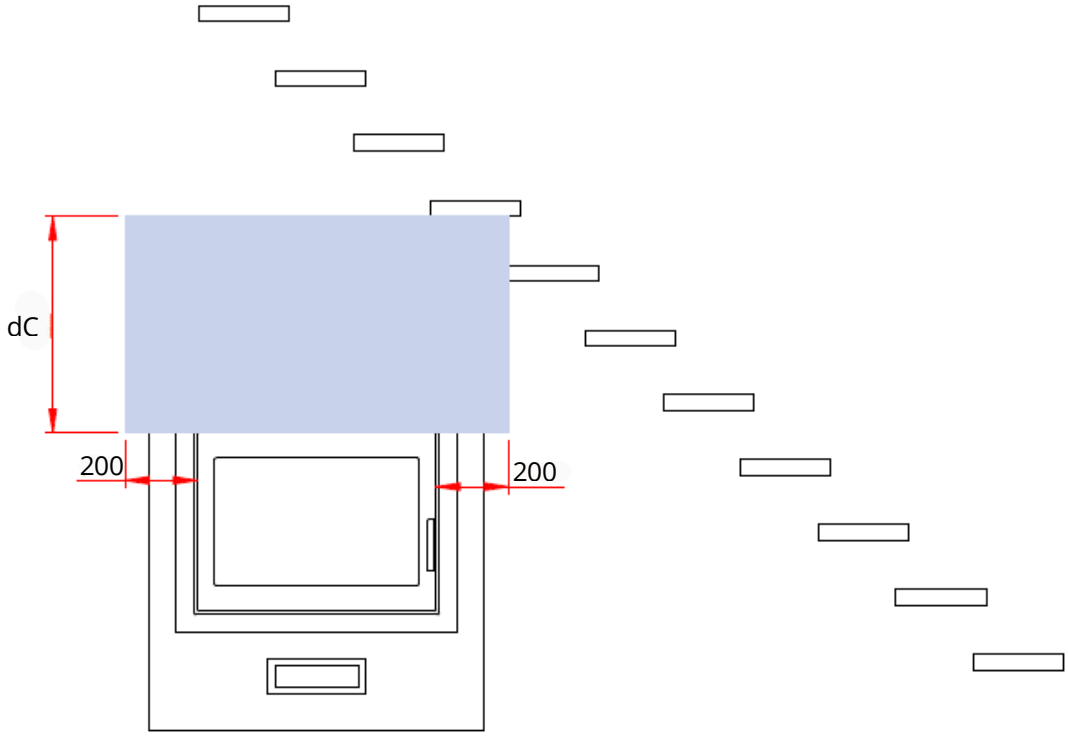

front view example at staircase